Operation

ProMix® 3KS

313882C

EN

Plural Component Proportioner

Manual system for proportional mixing of plural component coatings.
For professional use only.

Approved for use in explosive atmospheres (except the EasyKey and 3KS Power Supply Module).

Important Safety Instructions

Read all warnings and instructions in this manual. Save these instructions.

See page 4 for model information, including maximum working pressure. Equipment approval labels are on page 3. Some components shown are not included with all systems.

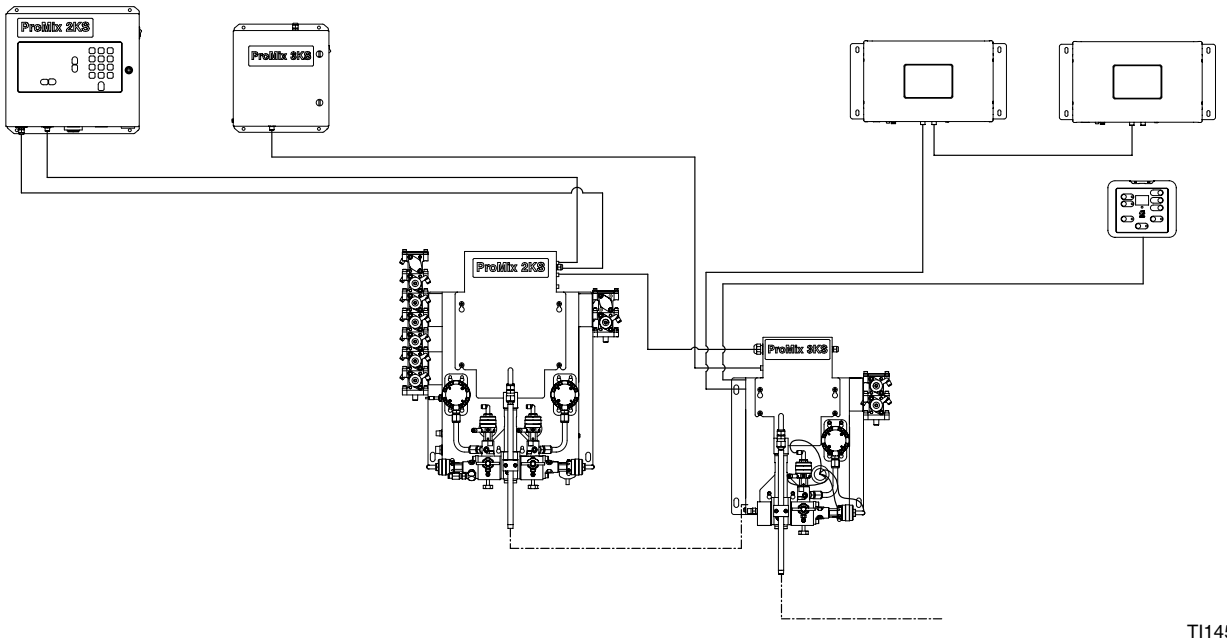

TI14543a

CE 0359 FM C US APPROVED Ex II 2 G

PROVEN QUALITY. LEADING TECHNOLOGY.

Contents

Related Manuals 3
Equipment Approvals 3
System Configuration and Part Numbers 4
Configurator Key 4
Standard Features 5
Accessories 7
Warnings 8
Glossary of Terms 10
Overview 12
Usage 12
Component Identification and Definition 12
Booth Control 16
EasyKey Display and Keyboard 17
Display 17
Keypad 17
EasyKey and 3KS Power Supply Module Connection Ports 18
EasyKey AC Power Switch 19
3KS Power Supply Module AC Power Switch . . 19
EasyKey I/S Power 19
3KS Power Supply Module I/S Power 19
EasyKey Potlife Exceeded Audible Alarm 19
EasyKey Graco Web Interface Port 19
EasyKey Ethernet Connection 19
Run Mode Screens 20
Splash Screen 20
Status Screen 22
Totals Screen 23
Reset Total Screen 23
Reset Solvent Screen 23
Alarms Screens 23
Level Control Screen 24
Setup Mode 25
Password Screen 26
Set Up Home Screen 26
System Configuration Screens 28
Option Screens 32
Advanced Setup Screens 34
Recipe Setup Screens 38
Recipe 0 Screens 42
Calibration Screen 44
System Operation 45
Operation Modes 45
Sequential Dosing 45
Recipe (Color) Change 45
General Operating Cycle, Sequential Dosing . . 45
Mix Manifold Valve Settings 48
Air Flow Switch (AFS) Function 49
Start Up 50
Shutdown 52
Pressure Relief Procedure 52
Purging 58
Meter Calibration 62
Color Change 64
Color Change Procedures 64
Color Change Sequences 64
Alarms and Warnings 77
System Alarms 77
System Warnings 77
Alarm Troubleshooting 78
Schematic Diagrams 90
System Pneumatic Schematic 90
System Electrical Schematic 92
Power Supply Module Electrical Schematic . . . 96
Technical Data 97
Graco Standard Warranty 98
Graco Information 98

Related Manuals

Component Manuals in English

Manual	Description
313881	ProMix 3KS Kit Installation
313883	ProMix 3KS Kit Repair-Parts
312775	ProMix 2KS Manual System Installation
312776	ProMix 2KS Manual System Operation
312777	ProMix 2KS Manual System Repair-Parts
312781	Fluid Mix Manifold
312782	Dispense Valve
312783	Color Change Valve Stacks
312787	Color Change Module Kit
312784	Gun Flush Box Kits
310745	Gun Air Shutoff Kit
312786	Dump Valve and Third Purge Valve Kits
312785	Network Communication Kits
308778	G3000/G3000HR Flow Meter
313599	Coriolis Flow Meter
313290	Floor Stand Kit
313542	Beacon Kit
313386	Basic Web Interface/Advanced Web Interface
406799	15V256 Automatic System Upgrade Kit
406800	15V825 Discrete I/O Board Kit

Equipment Approvals

Equipment approvals appear on the following labels which are attached to the Fluid Station and Power Supply Module. See FIG. 1 on page 4 for label locations.

Power Supply Module and Fluid Station Label

ATEX Certificate is listed here

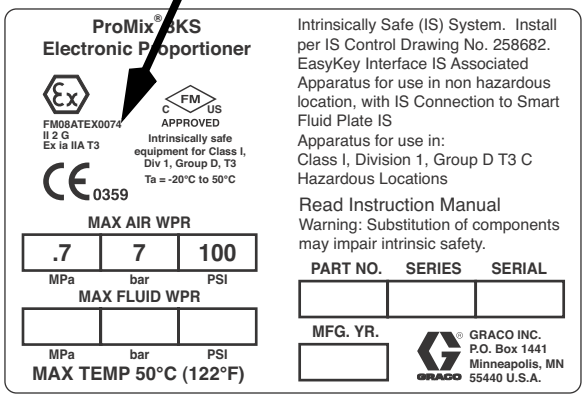
ProMix® 3KS
Electronic Proportioner
FM08ATEX0074
II 2 G
Ex ia IIA T3
FM C US APPROVED
Intrinsically safe equipment for Class I, Div 1, Group D, T3
Ta = -20°C to 50°C
0359
MAX AIR WPR
.7 7 100
MPa bar PSI
MAX FLUID WPR
MPa bar PSI
MAX TEMP 50°C (122°F)
Intrinsically Safe (IS) System. Install per IS Control Drawing No. 258682. EasyKey Interface IS Associated Apparatus for use in non hazardous location, with IS Connection to Smart Fluid Plate IS
Apparatus for use in:
Class I, Division 1, Group D T3 C Hazardous Locations
Read Instruction Manual
Warning: Substitution of components may impair intrinsic safety.
PART NO. SERIES SERIAL
MFG. YR.
GRACO INC.
P.O. Box 1441
Minneapolis, MN
55440 U.S.A.

TI14376a

Fluid Station Label

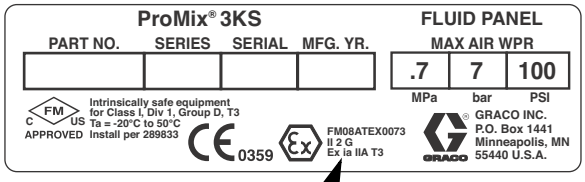

TI14374a

ATEX Certificate is listed here

Power Supply Module Label

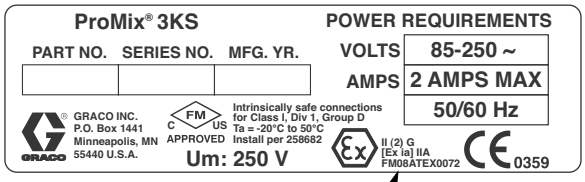

TI14375a

ATEX Certificate is listed here

System Configuration and Part Numbers

Configurator Key

The configured part number for your equipment is printed on the equipment identification labels. See FIG. 1 for location of the identification labels. The part number includes digits from each of the following categories, depending on the configuration of your system.				
3K System	**Component C Fluid Meter**	**Component C Change**	**Not Designated**	**Not Designated**
TK	0 = No Meter 1 = G3000 2 = G3000HR 3 = 1/8 in. Coriolis 4 = Solvent Meter	0 = No Valves (single component C) 1 = Two Valves (low pressure) 2 = Four Valves (low pressure) 3= Two Valves (high pressure) 4= Four Valves (high pressure)	0	0

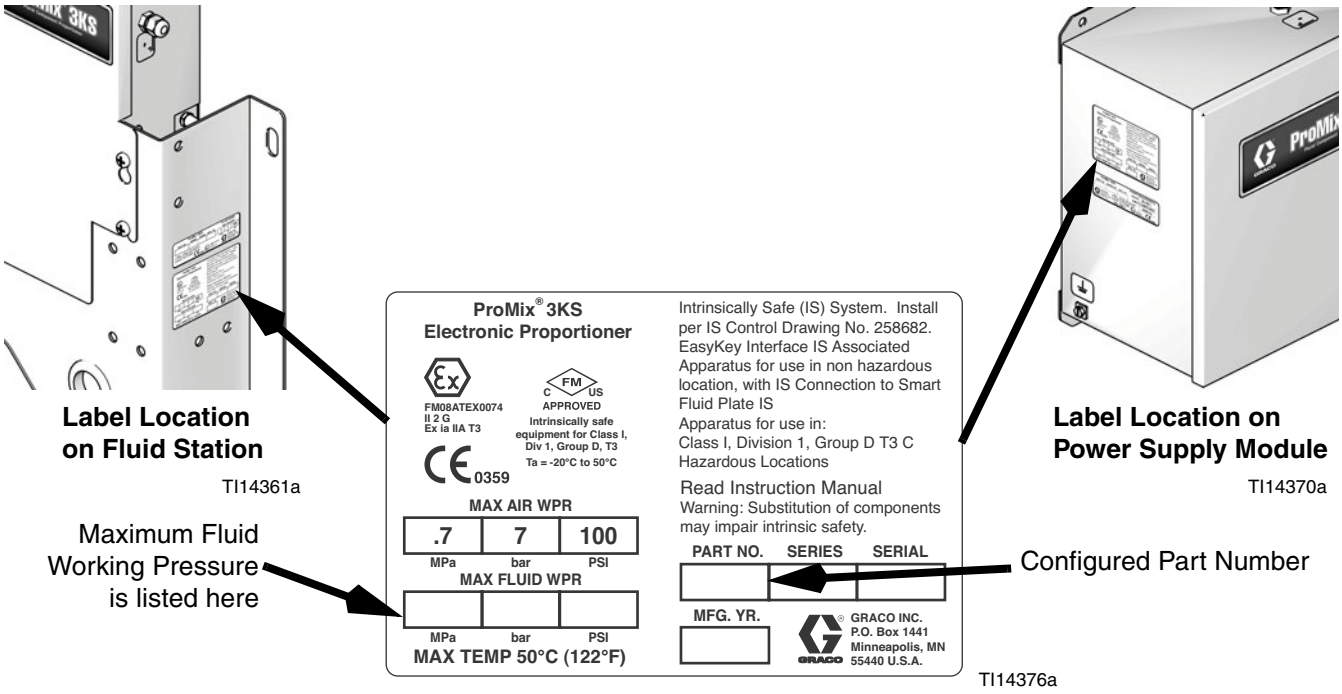

FIG. 1: Identification Label

Hazardous Location Approval
Models using a G3000, G3000HR, or intrinsically safe Coriolis meter for A, B, and C meters are approved for installation in a Hazardous Location - Class I, Div I, Group D, T3 or Zone I Group IIA T3.
Maximum Working Pressure
Maximum working pressure rating is dependent on the fluid component options selected. ***The pressure rating is based on the rating of the lowest rated fluid component.*** Refer to the component pressure ratings below. *Example:* Model TK1400 has a maximum working pressure of 3000 psi (21 MPa, 210 bar). **Check the identification label on the EasyKey, power supply module, or fluid station for the system maximum working pressure. See FIG. 1.**
ProMix Fluid Components Maximum Working Pressure
Base System (no meters [option 0], no color/component C change [option 0]) . . . . .3000 psi (21.0 MPa, 210 bar) Meter Option 1, 2, and 4 (G3000 or G3000HR, Solvent Meter) . . . . . .3000 psi (21.0 MPa, 210 bar) Meter Option 3 (Coriolis Meter) . . . . . 2300 psi (15.86 MPa, 158.6 bar) Color Change Option 1 and 2 (low pressure valves) . . . . . 300 psi (2.07 MPa, 20.6 bar) Color Change Option 3 and 4 (high pressure valves). . . . . 3000 psi (21 MPa, 210 bar)
Flow Meter Fluid Flow Rate Range
G3000. . . . . 75-3800 cc/min. (0.02-1.0 gal./min.) G3000HR . . . . . 38-1900 cc/min. (0.01-0.50 gal./min.) Coriolis Meter . . . . . 20-3800 cc/min. (0.005-1.00 gal./min.) S3000 Solvent Meter (accessory) . . . . . 38-1900 cc/min. (0.01-0.50 gal./min.)

Standard Features

Feature
ProMix 3KS Power Supply Module
Wall Mount Fluid Station, 50 cc Integrator and Static Mixer
IS Power Cable, red color coded, 50 ft (15.25 m)
CAN Communication Cable, green color coded, 10 ft (3.05 m)
Meter and Solenoid Cable, 10 ft (3.05 m)
Third Component Network Cable, yellow color coded, 6 ft (1.83 m)
C Side Dump Valve, if color valve(s) selected

Accessories

Accessory
Gun Flush Box Gun Insert Selection
15V354 Third Purge Valve Kit
15V536 Solvent Flow Switch Kit
15V213 Power Cable, 100 ft (30.5 m)
15G710 Fiber Optic Cable, 100 ft (30.5 m)
15V034 10 cc Integrator Kit
15V033 25 cc Integrator Kit
15V021 50 cc Integrator Kit
24B618 100 cc Integrator Kit
15W034 Strobe Light Alarm Indicator Kit
15V337 Advanced Web Interface
15V256 Automatic Mode Upgrade Kit

Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbol refers to procedure-specific risk. Refer back to these warnings. Additional, product-specific warnings may be found throughout the body of this manual where applicable.

⚠ WARNING

FIRE AND EXPLOSION HAZARD

Flammable fumes, such as solvent and paint fumes, in **work area** can ignite or explode. To help prevent fire and explosion:

- Use equipment only in well ventilated area.
- Eliminate all ignition sources; such as pilot lights, cigarettes, portable electric lamps, and plastic drop cloths (potential static arc).
- Keep work area free of debris, including solvent, rags and gasoline.
- Do not plug or unplug power cords, or turn power or light switches on or off when flammable fumes are present.
- Ground all equipment in the work area. See **Grounding** instructions.
- Use only grounded hoses.
- Hold gun firmly to side of grounded pail when triggering into pail.
- If there is static sparking or you feel a shock, **stop operation immediately.** Do not use equipment until you identify and correct the problem.
- Keep a working fire extinguisher in the work area.

ELECTRIC SHOCK HAZARD

This equipment must be grounded. Improper grounding, setup, or usage of the system can cause electric shock.

- Turn off and disconnect power at main switch before disconnecting any cables and before servicing equipment.
- Connect only to grounded power source.
- All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.

INTRINSIC SAFETY

Only models with a G3000, G250, G3000HR, G250HR, or intrinsically safe Coriolis meter for A, B, and C meters are approved for installation in a Hazardous Location - Class I, Div I, Group D, T3 or Zone I Group IIA T3. To help prevent fire and explosion:

- Do not install equipment approved only for a non-hazardous location in a hazardous area. See the ID label for the intrinsic safety rating of your model.
- Do not substitute or modify system components as this may impair intrinsic safety.

SKIN INJECTION HAZARD

High-pressure fluid from gun, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. **Get immediate surgical treatment.**

- Tighten all fluid connections before operating the equipment.
- Do not point gun at anyone or at any part of the body.
- Do not put your hand over the spray tip.
- Do not stop or deflect leaks with your hand, body, glove, or rag.
- Follow **Pressure Relief Procedure** in this manual, when you stop spraying and before cleaning, checking, or servicing equipment.

⚠ WARNING

EQUIPMENT MISUSE HAZARD

Misuse can cause death or serious injury.

- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Data** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Data** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request MSDS forms from distributor or retailer.
- Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only.
- Do not alter or modify equipment.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over bend hoses or use hoses to pull equipment.
- Keep children and animals away from work area.
- Comply with all applicable safety regulations.

TOXIC FLUID OR FUMES HAZARD

Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.

- Read MSDS's to know the specific hazards of the fluids you are using.
- Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.
- Always wear impervious gloves when spraying or cleaning equipment.

PERSONAL PROTECTIVE EQUIPMENT

You must wear appropriate protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury, inhalation of toxic fumes, burns, and hearing loss. This equipment includes but is not limited to:

- Protective eyewear
- Clothing and respirator as recommended by the fluid and solvent manufacturer
- Gloves
- Hearing protection

Glossary of Terms

Air Chop - the process of mixing air and solvent together during the flush cycle to help clean the lines and reduce solvent usage.

Analog - relating to, or being a device in which data are represented by continuously variable, measurable, physical quantities, such as length, width, voltage, or pressure.

Closed Loop Flow Control - refers to the process when the flow rate is adjusted automatically to maintain a constant flow.

Coriolis Meter - a non-intrusive flow meter often used in low flow applications or with light viscosity, shear sensitive, or acid catalyzed materials. This meter uses vibration to measure flow.

Digital Input and Output - a description of data which is transmitted as a sequence of discrete symbols, most commonly this means binary data represented using electronic or electromagnetic signals.

Discrete I/O - refers to data that constitutes a separate entity and has direct communication to another control.

Dose Size - the amount of resin (A), catalyst (B), and reducer (C) that is dispensed into an integrator.

Dose Time Alarm - the amount of time that is allowed for a dose to occur before an alarm occurs.

Ethernet - a method for directly connecting a computer to a network or equipment in the same physical location.

Fiber Optic Communication - the use of light to transmit communication signals.

Fill Time - the amount of time that is required to load mix material to the applicator.

Flow Control Resolution - a settable value that allows the flow control system to maximize its performance. The value is based on maximum desired flow rates.

Flow Rate Analog Signal - the type of communication signal that can be used on the ProControl module.

Flow Rate Tolerance - the settable percent of acceptable variance that the system will allow before a flow rate warning occurs.

Flow Set Point - a predefined flow rate target.

Grand Total - a non-resettable value that shows the total amount of material dispensed through the system.

Gun Trigger Input Signal - used to manage ratio assurance dose times and flow control processes.

Intrinsically Safe (IS) - refers to the ability to locate certain components in a hazardous location.

Idle - if the gun is not triggered for 2 minutes the system enters Idle mode. Trigger the gun to resume operation.

Job Total - a resettable value that shows the amount of material dispensed through the system for one job. A job is complete when a color change or complete system flush occurs.

K-factor - a value that refers to the amount of material that passes through a meter. The assigned value refers to an amount of material per pulse.

Ki - refers to the degree fluid flow over shoots its set point.

Kp - refers to the speed in which the fluid flow reaches its set point.

Manual Mode - when the proportioning or flow control system is controlling the inputs without any input from an outside control.

Mix - when cross-linking of the resin (A), catalyst (B), and reducer (C) occurs.

Mix Input Signal- refers to system mode status where system begins a dose sequence each time the mix signal is made “High”.

Modbus/TCP - a type of communication protocol used to communicate Digital I/O signals over an ethernet.

Network Station - a means to identify a particular individual proportioning or flow control system.

Overdose Alarm - when either the resin (A), catalyst (B), or reducer (C) component dispenses too much material and the system cannot compensate for the additional material.

Potlife Time - the amount of time before a material becomes unsprayable.

Potlife Volume - the amount of material that is required to move through the mix manifold, hose and applicator before the potlife timer is reset.

Color/Catalyst Dump - refers to the time required to flush the lines from the color or catalyst change module to the mix manifold during a color or catalyst change.

Color/Catalyst Fill - refers to the time required to fill the lines from the color or catalyst change module to the mix manifold.

Purge - when all mixed material is flushed from the system.

Purge Time - the amount of time required to flush all mixed material from the system.

Ratio Tolerance - the settable percent of acceptable variance that the system will allow before a ratio alarm occurs.

Sequential Color Change - the process when a color change is initiated and the system automatically flushes the old color and loads a new color.

Sequential Dosing - Components A, B, and C dispense sequentially in the necessary volumes to attain the mix ratio.

Solvent Fill - the time required to fill the mixed material line with solvent.

Standby - refers to the status of the system.

Third Purge Valve - refers to the use of three purge valves used to flush some waterborne materials. The valves are used to flush with water, air and solvent.

V/P - refers to the voltage to pressure device in the flow control module.

Overview

Usage

The Graco ProMix 3KS Kit adapts a ProMix 2KS system to be an electronic 3-component paint proportioner. It can blend most 3-component solvent and waterborne epoxy, polyurethane, and acid-catalyzed paints. It is not for use with “quick-setting” paints (those with a potlife of less than 15 minutes).

- Can proportion at ratios from 0.1:1 to 50:1 in 0.1 increments with the wall mount fluid station.
- Has user selectable ratio assurance and can maintain up to +/-1% accuracy, depending on materials and operating conditions.
- Models are available to operate air spray or air-assisted systems with a capacity of up to 3800 cc/min.
- Color change options are available for low pressure (300 psi [2.1 MPa, 21 bar]) air spray and high pressure (3000 psi [21 MPa, 210 bar]) systems with up to 25 color change valves and up to 4 catalyst and 4 component C change valves.

  NOTE: Optional accessories are available for in field installation to achieve 25 colors or for component C change.

Component Identification and Definition

See FIG. 2 and Table 1 for the system components. Components marked with a star (★) are available as part of the ProMix 3KS Kit. All other components are part of the ProMix 2KS System or are available as accessories.

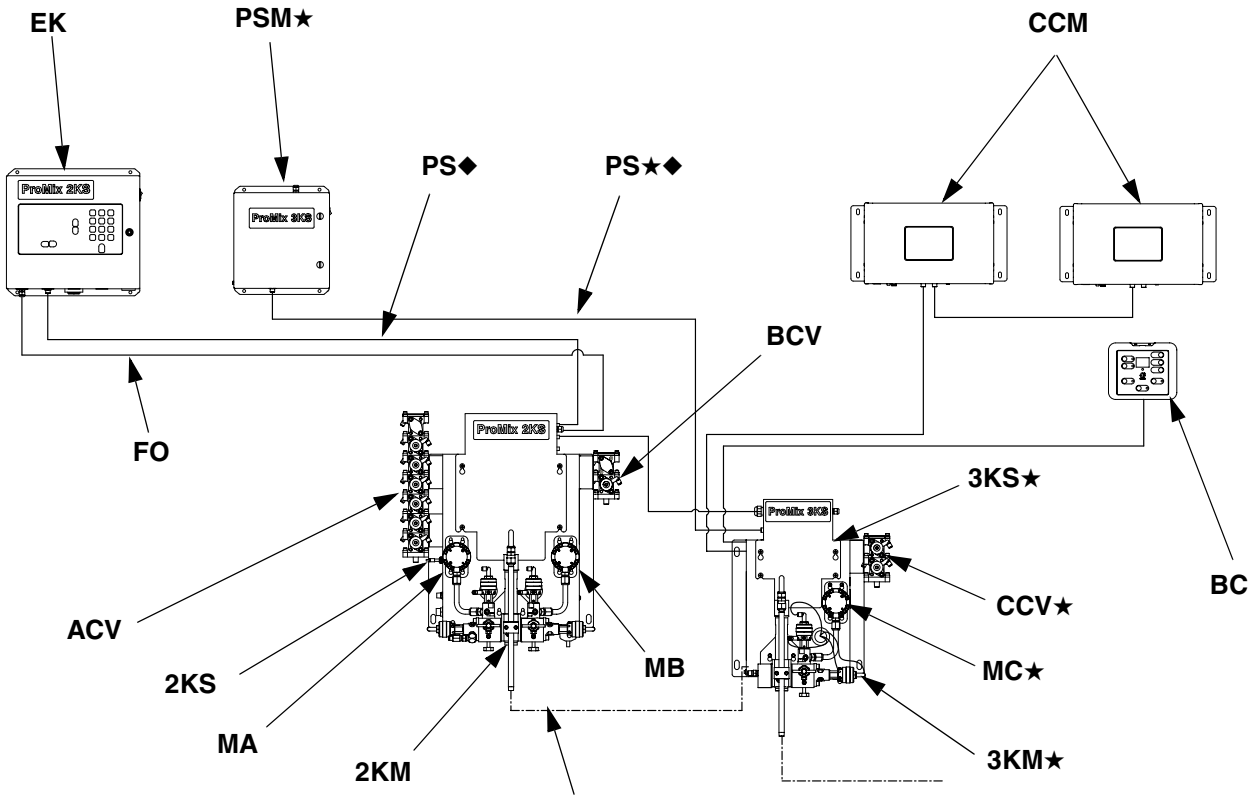

◆ *See the ProMix 3KS Repair-Parts manual for optional cable lengths.*

FIG. 2. ProMix 3KS System, shown with G3000 Meters and Color/Catalyst/Component C Change

Table 1: Component Descriptions

Component	Description
EasyKey (EK)	Used to set up, display, operate, and monitor the system. The EasyKey accepts 85-250 VAC, 50/60 Hz line power and converts that power to acceptable low voltage and optical signals used by other system components.
★ 3KS Power Supply Module (PSM)	Accepts 85-250 VAC, 50/60 Hz line power and converts that power to acceptable low voltage signals used by other system components.
Booth Control (BC)	Used by the operator for daily painting functions including: choosing recipes, initiating job complete, reading/clearing alarms, and placing the system in Standby, Mix, or Purge mode. It is typically mounted inside the booth or near the painter.
2KS Fluid Station (2KS)	Includes air control solenoids, flow switches, and mountings for the A, B, and solvent flow meters and the 2K fluid manifold assembly. Its control board manages all proportioning functions.
★ 3KS Fluid Station (3KS)	Includes air control solenoids, flow switches, and mountings for the C and solvent flow meters and the 3K fluid manifold assembly. Its control board manages all proportioning functions.
2K Fluid Manifold (2KM)	• **Pneumatically Operated Dose Valves** for component A and B • **Purge Valves** for solvent and air purge • **Sampling Valves** for calibrating the flow meters and performing ratio checks • **Shutoff Valves** for component A and B to close their fluid passages to the mix manifold, to allow for accurate calibration and ratio checks • **Mix Manifold**, which includes the fluid integrator and static mixer. ➜ **Fluid Integrator** is the chamber where component A and B align at the selected ratio and begin to mix. ➜ **Static Mixer** has 24 elements to uniformly blend the materials downstream of the fluid integrator.
★ 3K Fluid Manifold (3KM)	• **Pneumatically Operated Dose Valve** for component C • **Purge Valve** for solvent • **Sampling Valve** for calibrating the flow meter and performing ratio check • **Shutoff Valve** for component C to close the fluid passage to the mix manifold, to allow for accurate calibration and ratio check • **Mix Manifold**, which includes the fluid integrator and static mixer. ➜ **Fluid Integrator** is the chamber where component C aligns with blended components A/B at the selected ratio and begins to mix. ➜ **Static Mixer** has 24 elements to uniformly blend the materials downstream of the fluid integrator.

Table 1: Component Descriptions

Component	Description
Flow Meters (MA, MB, ★MC, MS)	Four optional flow meters are available from Graco: • **G3000** is a general purpose gear meter typically used in flow ranges of 75-3800 cc/min. (0.02–1.0 gal/min.), pressures up to 4000 psi (28 MPa, 276 bar), and viscosities of 20–3000 centipoise. The K-factor is approximately 0.119 cc/pulse. • **G3000HR** is a high resolution version of the G3000 meter. It is typically used in flow ranges of 38–1900 cc/min. (0.01–0.5 gal/min.), pressures up to 4000 psi (28 MPa, 276 bar). and viscosities of 20–3000 centipoise. The K-factor is approximately 0.061 cc/pulse. • **S3000** is a gear meter used for solvents in flow ranges of 38-1900 cc/min. (0.01–0.50 gal/min.), pressures up to 3000 psi (21 MPa, 210 bar), and viscosities of 20–50 centipoise. The K-factor is approximately 0.021 cc/pulse. • **Coriolis** is a specialty meter capable of a wide range of flow rates and viscosities. This meter is available with 1/8 in. or 3/8 in. diameter fluid passages. For detailed information on the Coriolis meter, see manual 313599. The K-factor is user-settable; at lower flow rates use a lower K-factor. ➜ 1/8 in. fluid passages: set K-factor to .020 or .061. ➜ 3/8 in. fluid passages: set K-factor to .061 or 0.119.
Color Change Valves (ACV) and Color Change Module (CCM)	An optional component. It is available as a color change valve stack for either low or high pressure with up to 25 color change valves. Each stack includes one additional valve for solvent to clean the fluid line between color changes.
Catalyst Change Valves (BCV)	An optional component. It is available as a catalyst change valve stack for either low or high pressure with up to 4 catalyst change valves. Each stack includes one additional valve for solvent to clean the fluid line between catalyst changes.
★ Component C Change Valves (CCV)	An optional component. It is available as a component C change valve stack for either low or high pressure with up to 4 component C change valves. Each stack includes one additional valve for solvent to clean the fluid line between component C changes.
Dual Fiber Optic Cable (FO)	Used to communicate between the EasyKey and Wall Mount Fluid Station.
★ Fluid Station Power Supply Cable (PS)	Used to provide power to the Wall Mount Fluid Station.
Applicator Handling: use Air Flow Switch (AFS) or Gun Flush Box (GFB)	Not shown. See ProMix 2KS manuals for details.

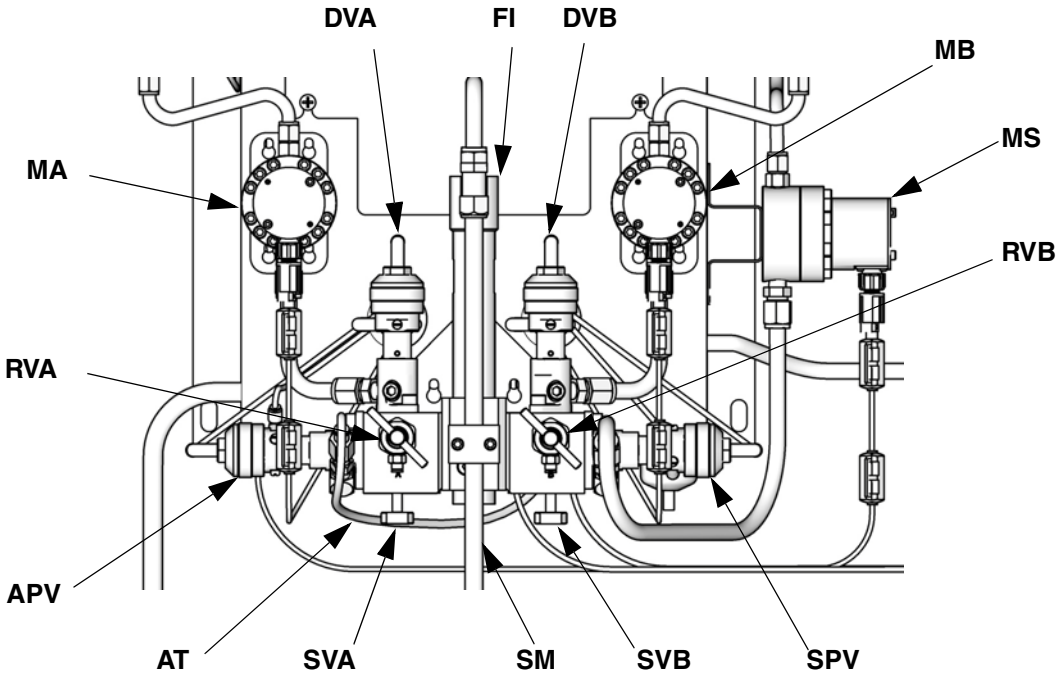

TI12556a

Key: ProMix 2KS Fluid Station

MA	Component A Meter
DVA	Component A Dose Valve
RVA	Component A Sampling Valve
SVA	Component A Shutoff Valve
MB	Component B Meter
DVB	Component B Dose Valve
RVB	Component B Sampling Valve
SVB	Component B Shutoff Valve
MS	Solvent Meter
SPV	Solvent Purge Valve
APV	Air Purge Valve
SM	Static Mixer
FI	Fluid Integrator
AT	Air Purge Valve Air Supply Tube

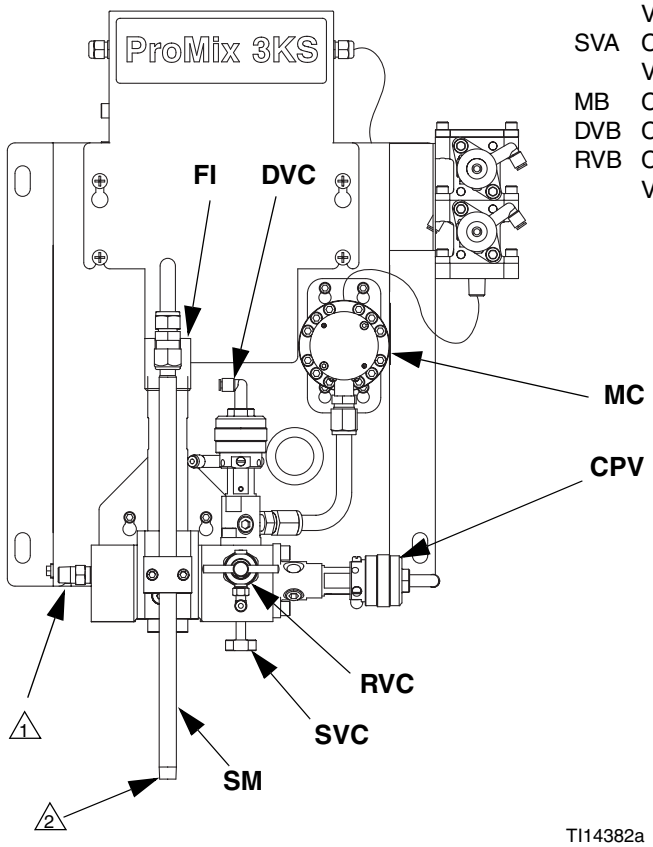

TI14382a

Key: ProMix 3KS Fluid Station

MC	Component C Meter
DVC	Component C Dose Valve
RVC	Component C Sampling Valve
SVC	Component C Shutoff Valve
CPV	Component C Purge Valve
SM	Static Mixer
FI	Fluid Integrator

1 3KS fluid inlet. Connect fluid supply line from 2KS fluid manifold outlet here.

2 Connect fluid supply line to gun.

FIG. 3. ProMix 2KS and ProMix 3KS Wall Mount Fluid Stations

Booth Control

Used by the operator for daily painting functions including: changing recipes, signalling job complete, reading/clearing alarms, and placing the system in Standby, Mix, or Purge mode. It is typically mounted inside the booth or near the painter.

Table 2: Booth Control Key and Indicator Functions (see FIG. 4)

Key/Indicator	Definition and Function
Display	• Displays recipe number in Run mode. • If an alarm occurs, displays the alarm code (E1 to E31) and red Alarm indicator blinks. • Recipe number displays after alarm is reset.
Recipe Indicator	• Green LED stays lit while a recipe is in use. • LED shuts off when Up ▲ or Down ▼ keys are pressed or if an alarm occurs. • LED blinks while a new recipe is loading and turns solid after loading is complete. • LED blinks when purging. • Select a new recipe by pressing Up ▲ or Down ▼ keys, then pressing Enter ↵.
Alarm Reset Key and Indicator	• Red LED blinks when an alarm occurs. • Press key to reset alarm. LED shuts off after alarm is reset.
Job Complete Key and Indicator	• Signals that job is complete, and resets A, B, and C totalizers. • Green LED blinks once after key is pressed.
Enter Key	Enters selected recipe and starts color change sequence.
Up Key	Scrolls recipe numbers up.

Table 2: Booth Control Key and Indicator Functions (see FIG. 4)

Key/Indicator	Definition and Function
Down Key	Scrolls recipe numbers down.
Mix Mode Key	• Starts Mix mode*. • Green LED remains lit while in Mix mode or in Idle mode. * After doing a purge, press key once. The system will do a mixed material fill sequence, then go to Standby. Press again to start Mix mode.
Standby Mode Key	• Starts Standby mode. • Green LED remains lit while in Standby mode.
Purge Mode Key	• Starts Purge mode. • Green LED remains lit while in Purge mode.

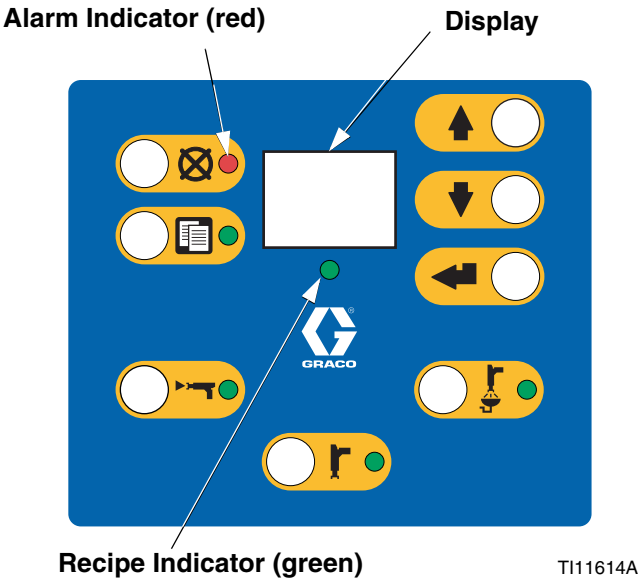

FIG. 4. Booth Control (see Table 2)

EasyKey Display and Keyboard

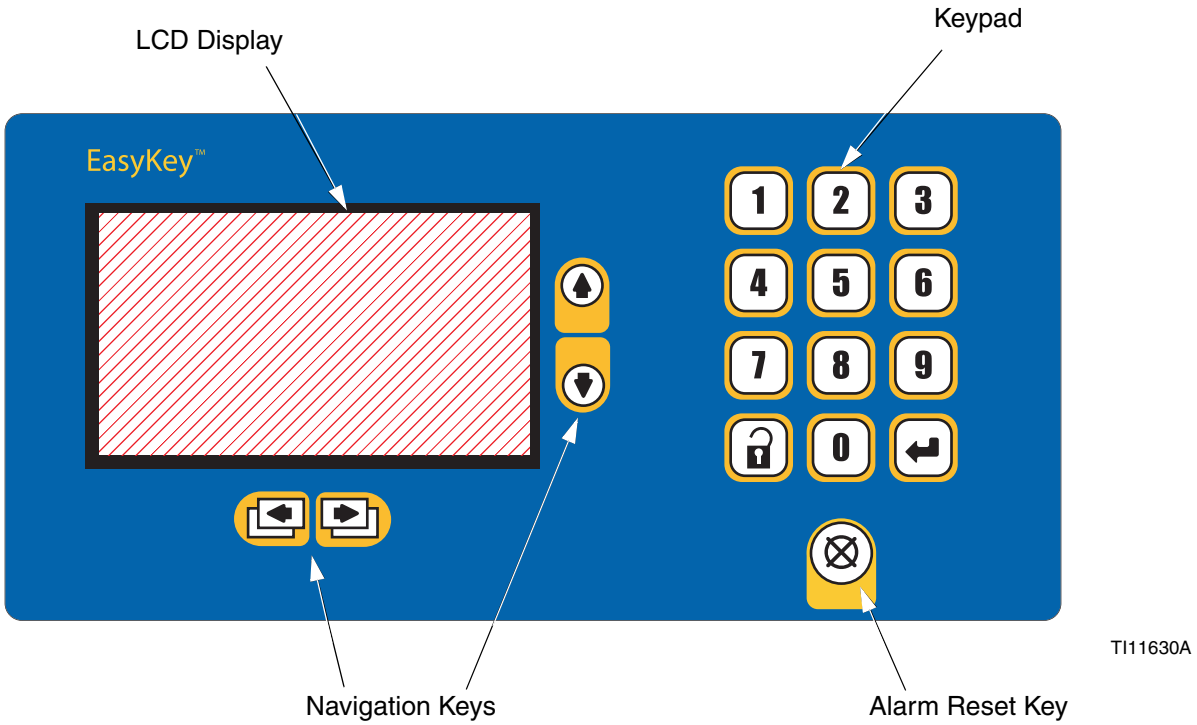

FIG. 5. EasyKey Display and Keypad

Display

Shows graphical and text information related to setup and spray operations. Back light will turn off after 10 minutes without any key press. Press any key to turn back on.

Keypad

Used to input numerical data, enter setup screens, scroll through screens, and select setup values.

In addition to the numbered keys on the EasyKey keypad, which are used to enter values in setup, there are keys to navigate within a screen and between screens, and to save entered values. See Table 3.

Table 3: EasyKey Keypad Functions (see FIG. 5)

Key	Function
	Setup: press to enter or exit Setup mode.
	Enter: if cursor is in menu box, press Enter key to view menu. Press Enter to save a value either keyed in from the numerical keypad or selected from a menu.
	Up Arrow: move to previous field or menu item, or to previous screen within a group.
	Down Arrow: move to next field or menu item, or to next screen within a group.
	Left Arrow: move to previous screen group.
	Right Arrow: move to next screen group.
	Alarm Reset: resets alarms.

EasyKey and 3KS Power Supply Module Connection Ports

EasyKey

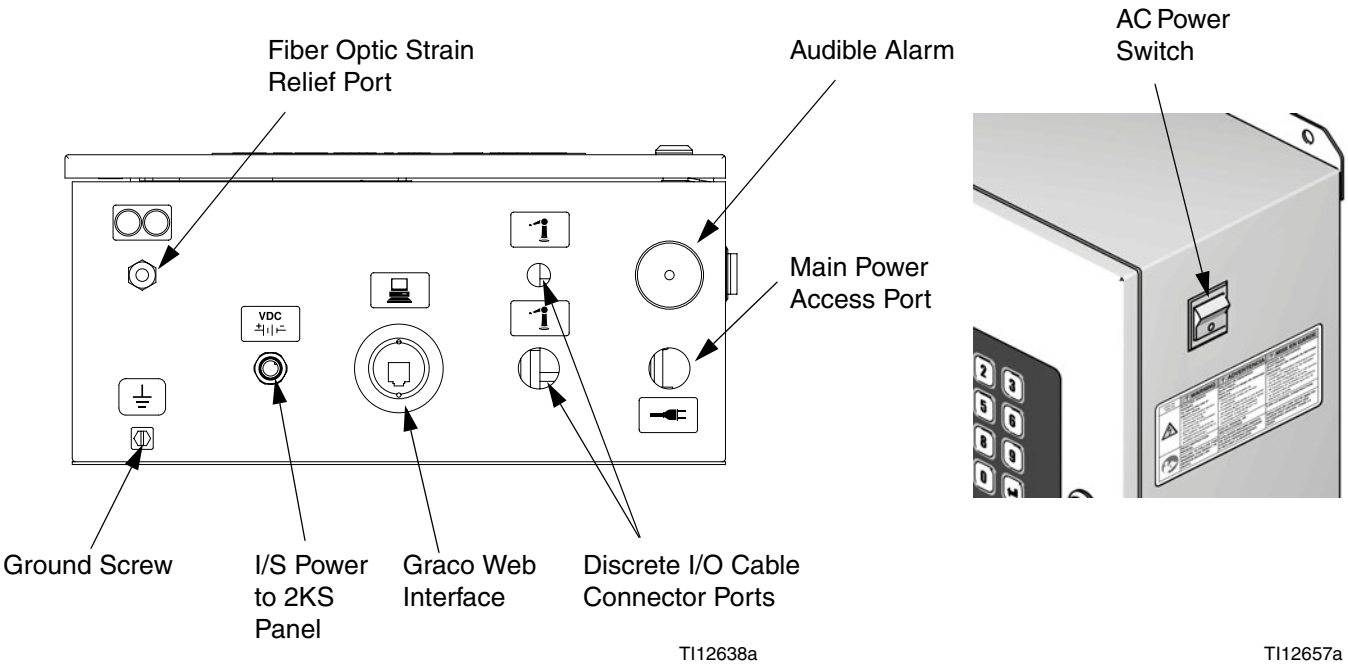

3KS Power Supply Module

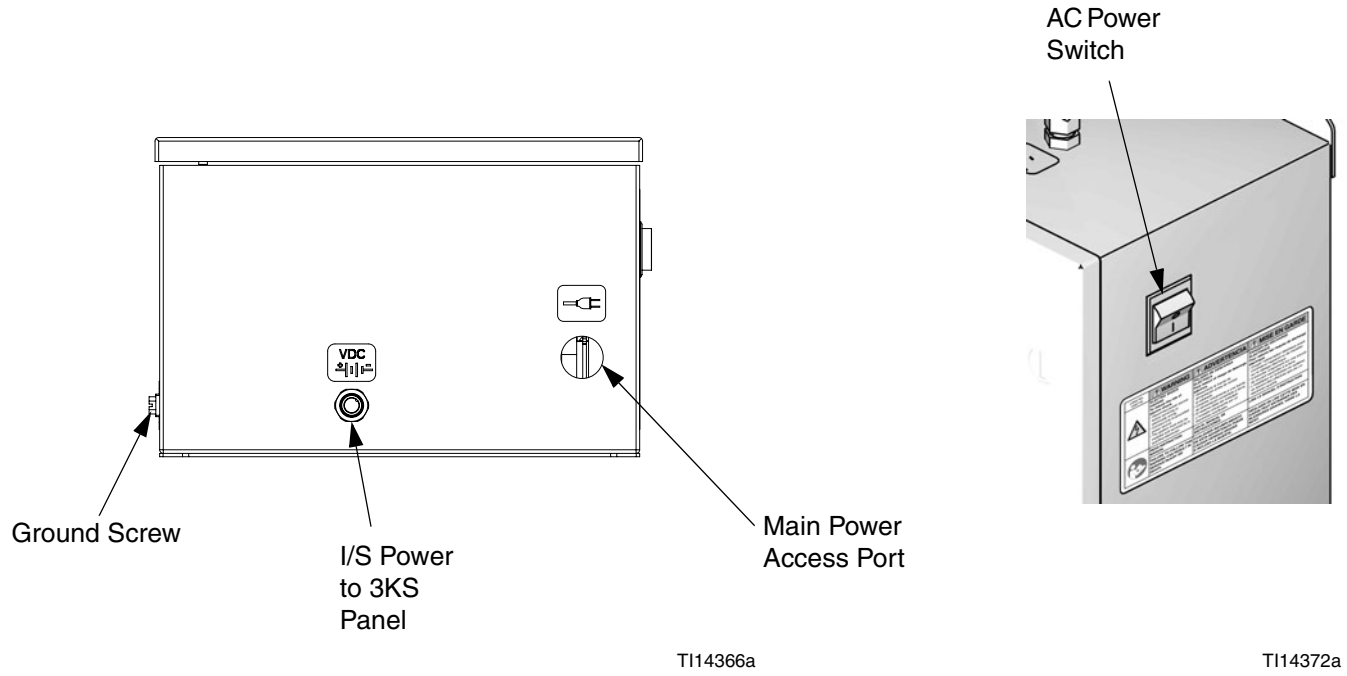

FIG. 6. Connections and AC Power Switches

EasyKey AC Power Switch

Turns system AC power on or off.

3KS Power Supply Module AC Power Switch

Turns 3KS AC power on or off.

EasyKey I/S Power

Power circuit to 2KS Fluid Station.

3KS Power Supply Module I/S Power

Power circuit to 3KS Fluid Station.

EasyKey Potlife Exceeded Audible Alarm

Alerts the user when a Potlife Exceeded alarm occurs.

Clear by pressing the Alarm Reset key.

EasyKey Graco Web Interface Port

Used to communicate from a PC to:

- ➜ Upgrade software
- ➜ View software version
- ➜ Download
  - Job and alarm logs
  - Material usage report
  - Setup values (can also upload)
- ➜ Clear job, alarm, and material usage reports
- ➜ Upload a custom language to view on screen
- ➜ Restore factory defaults
- ➜ Restore setup password

See manual 313386 for more information.

EasyKey Ethernet Connection

You can access data on an office or industrial network through the internet with the proper configuration. See manual 313386 for more information.

Run Mode Screens

NOTE: See FIG. 9 for a map of the Run screens. Detailed screen descriptions follow.

Splash Screen

At power up, the Graco logo and software revision will display for approximately 5 seconds, followed by the **Status Screen** (see page 22).

FIG. 7. Splash Screen

The Splash screen will also momentarily display “Establishing Communication.” If this display remains for more than one minute, check that the fluid station circuit board is powered up (LED is on) and that the fiber optic cable is properly connected (see ProMix 2KS Installation manual).

NOTE: If the software version of the fluid plate does not match the version of the EasyKey, the EasyKey will update the fluid plate, and the fluid plate programming screen will appear until the update is completed.

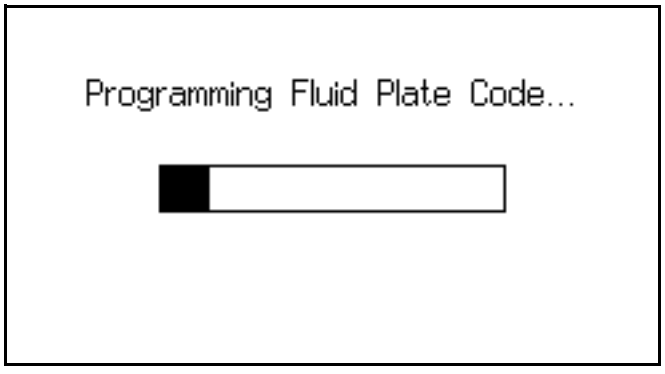

FIG. 8. Fluid Plate Programming Screen

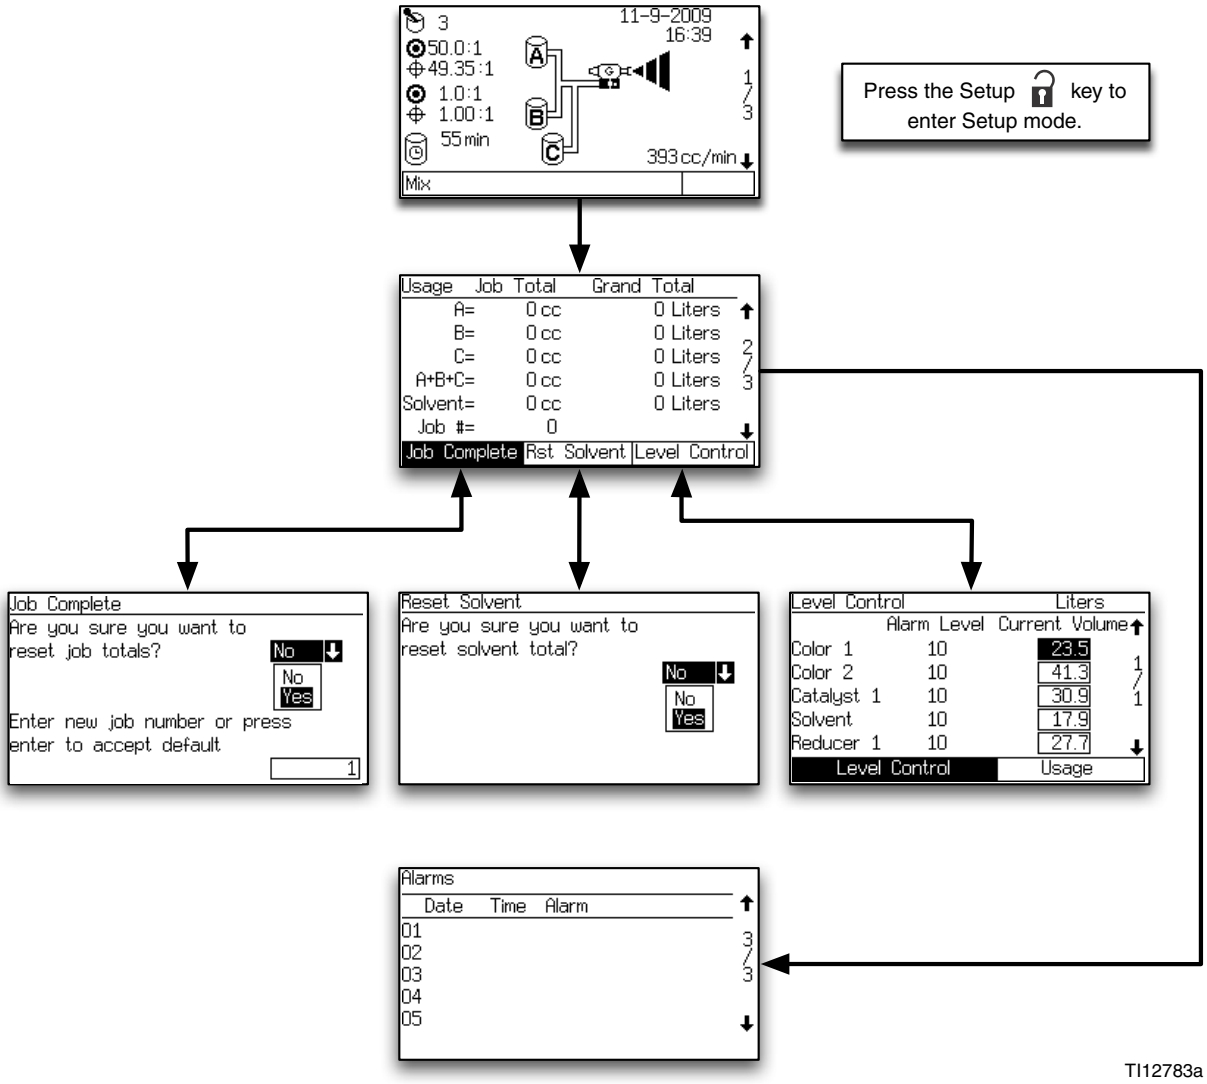

FIG. 9. Run Screens Map

Status Screen

- Use the Up ▲ or Down ▼ keys to scroll through the Run screens.
- Press the Setup key to enter the Setup screens from the Status screen.
- The other keys have no function in this Status screen.

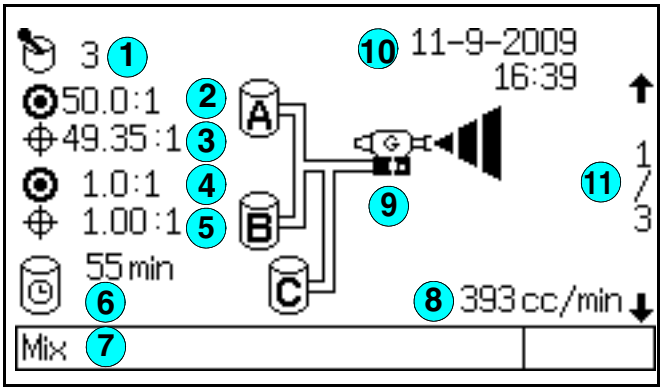

FIG. 10. Status Screen

Key to FIG. 10:

① **Active Recipe:** shows the active recipe.

NOTE: At power up the system defaults to Recipe 61, which is not a valid recipe number.

② **Stage 1 Target Ratio (A:B):** for the active recipe. The ratio can be from 0.0:1–50.0:1, in 0.1 increments.

③ **Stage 1 Actual Ratio (A:B):** in hundredths, calculated after each dose of A and B.

④ **Stage 2 Target Ratio (A+B):C:** for the active recipe. The ratio can be from 0.0:1–50.0:1, in 0.1 increments.

⑤ **Stage 2 Actual Ratio (A+B):C:** in hundredths, calculated after each dose of C.

⑥ **Potlife Timer:** shows remaining potlife time in minutes. Two times are shown if there are two guns.

⑦ **Status Bar:** shows current alarm or operation mode (standby, mix, purge, recipe change, or the current alarm).

⑧ **Current Flow Rate:** in cc/min.

⑨ **Animation:** when the gun is triggered, the gun appears to spray and the component A, B, or C hose lights up, showing which component dose valve is open.

⑩ **Current Date and Time**

⑪ **Screen Number and Screen Arrows:** displays the current screen number and the total number of screens in a group. The Up and Down arrows on the right edge of the screen indicate the scroll feature. The total number of screens in some groups may vary depending on system configuration selections.

Totals Screen

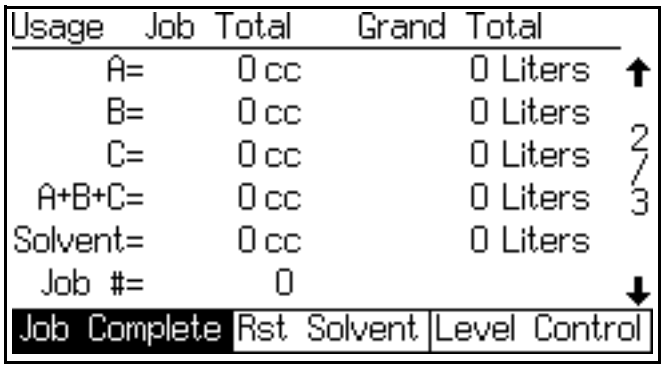

FIG. 11. Totals Screen

This screen shows the job totals, grand totals, and job number. Use the tabs to reset job totals (Job Complete), reset solvent totals (Rst Solvent), or go to **Level Control Screen**, page 24.

Solvent Totals and the Rst Solvent tab only appear if "Meter" is selected under Solvent Monitor in **Configure Screen 5** on page 31.

NOTE: Grand totals are not resettable.

Reset Total Screen

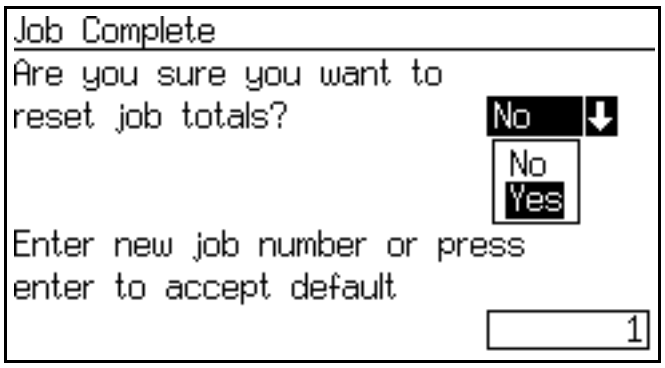

FIG. 12. Reset Total Screen

If job is reset, job number will increment by one for default.

Reset Solvent Screen

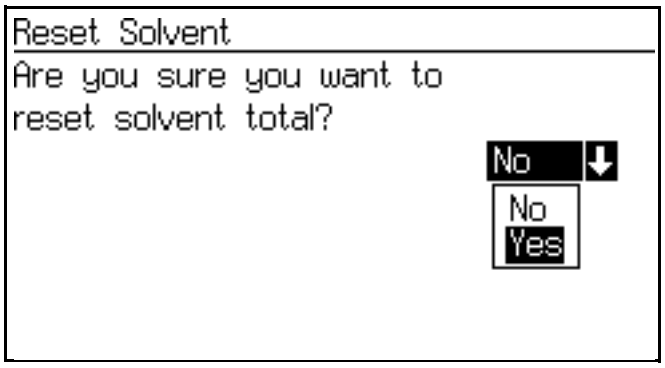

FIG. 13. Reset Solvent Total Screen

The screen will ask if you want to reset solvent total. Select Yes or No.

Alarms Screens

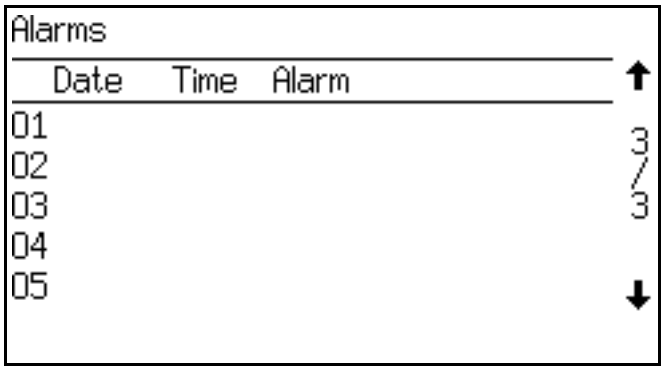

FIG. 14. Alarms Screen

Two screens show the last 10 alarms. Use the Up ▲ or Down ▼ keys to scroll between the two screens.

See Table 9 on page 77 for a list of alarm codes.

Level Control Screen

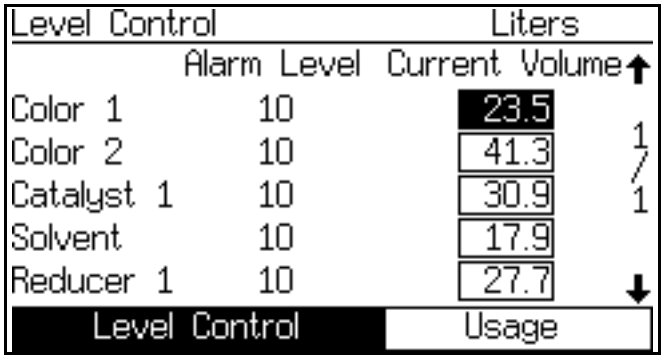

FIG. 15. Level Control Screen

This screen shows the current volume for each fluid. Adjust the actual volumes on this screen, or use the tab to go to Usage (**Totals Screen**, page 23).

See FIG. 16. If the tank volume reaches the low-level threshold, the EasyKey screen will display the Tank Level Low alarm and prompt the user to do one of the following:

1. Refill tank volume to clear the alarm.
2. Resume mixing by selecting “Spray 25% of Remainder.” If this selection is chosen, a second alarm will occur after 25% of the remaining volume is mixed. Refill tank volume to clear the alarm.

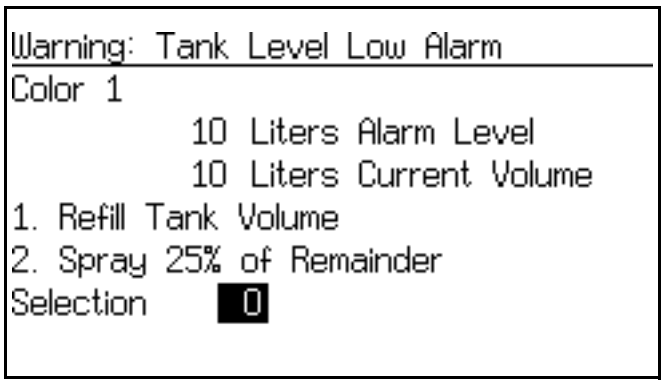

FIG. 16. Tank Level Low Screen (Tank A Shown)

Setup Mode

Press the Setup key to enter Setup mode.

NOTE: See FIG. 17 for a map of the Setup screens. Detailed screen descriptions follow.

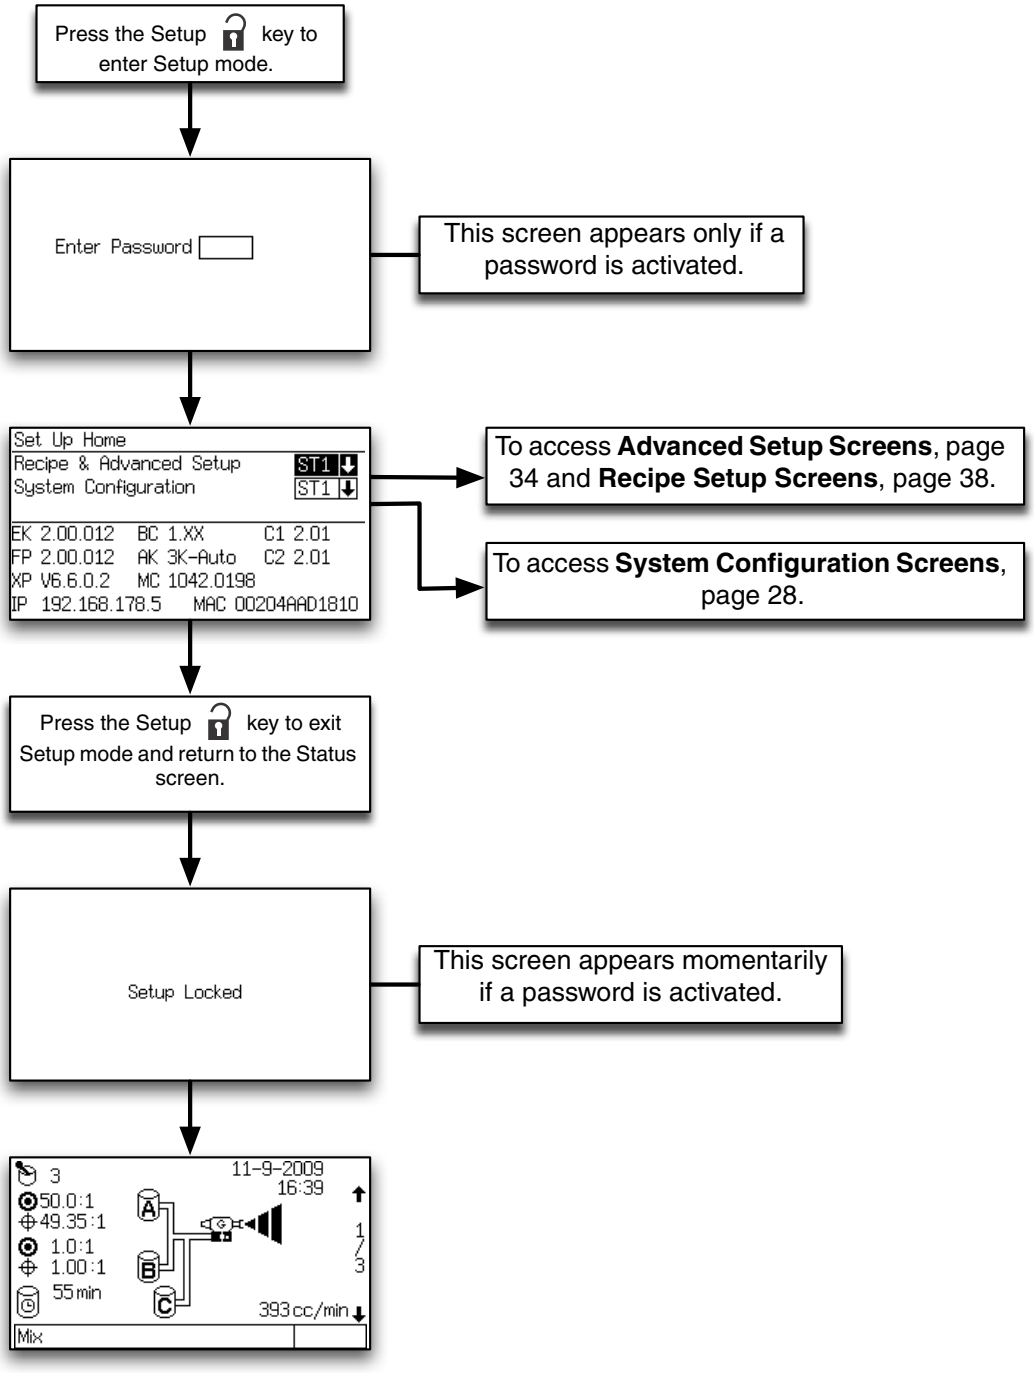

TI12784a

FIG. 17. Setup Screens Map

Password Screen

If a password has been activated (see **Configure Screen 1**, page 29), the Password screen will appear. You must enter the password to access the **Set Up Home Screen**. Entering the wrong password returns the display to the **Status Screen**.

NOTE: If you forget the password, you can reset the password (to 0), using the ProMix Web Interface (see manual 313386).

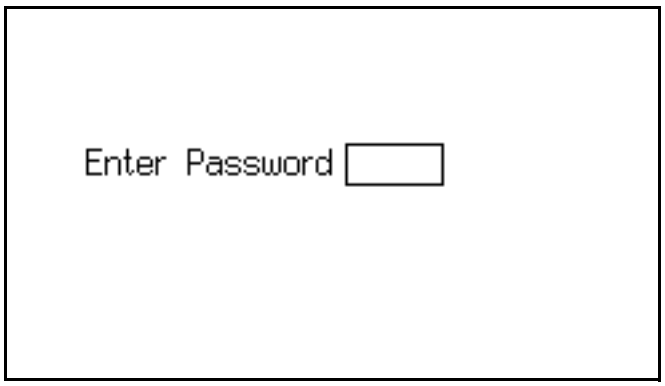

FIG. 18. Password Screen

NOTE: If a password is activated, **Setup Locked** displays momentarily after exiting Setup mode and returning to the **Status Screen**. A lock symbol appears on the **Status Screen**.

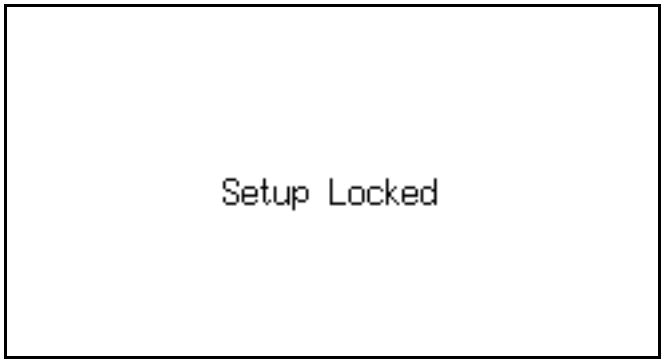

FIG. 19. Setup Locked Screen

Set Up Home Screen

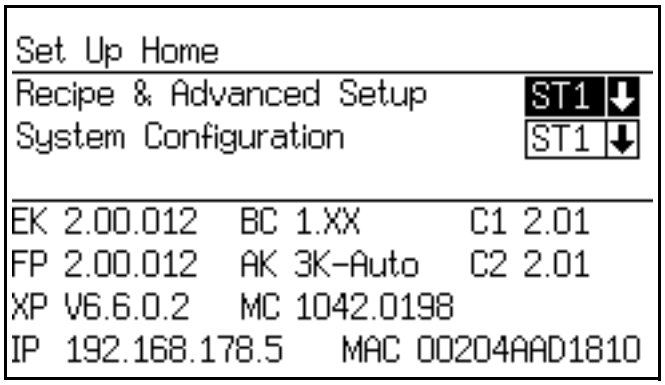

FIG. 20. Set Up Home Screen

This screen displays when you enter Setup mode. From it you can go to **Recipe and Advanced Setup Screens** (pages 34-41) or **System Configuration Screens** (pages 28-31). Press the Enter key to go to the selected screen set.

The screen also displays software versions and internet addresses of various components. The values shown in FIG. 20 are only examples and may vary on your screen. See Table 4 for further information.

Table 4: Component Software Versions

Component	Display (may vary from examples shown)	Description
EK (EasyKey)	2.00.012	EasyKey software version.
FP (Fluid Plate)	2.00.012	Fluid Plate software version.
BC (Booth Control)	-.-	Booth Control not installed, not detected, or not operational.
	1.XX	Booth Control software version 1.00 or 1.01.
	2.XX	Booth Control software version 2.XX.
C1/C2 (Color Change Modules 1 and 2)	-.-	Color Change Module 1/2 not installed, not detected, or not operational.
	1.XX	Color Change Module software version 1.00 or 1.01.
	2.XX	Color Change Module software version 2.XX.
AK (Autokey)	2K-Manual	No AutoKey installed or detected. System operates in 2K Manual Mode only
	2K-Auto	2K AutoKey detected. System can operate in 2K Manual, Semi-automatic, or Automatic Mode.
	3K-Auto	3K AutoKey detected. System can operate in 3K Manual, Semi-automatic, or Automatic Mode.
XP (XPORT)	V6.6.0.2	Example of XPORT network module software version. Other versions are acceptable.
MC (Micro Controller)	1042.0198	Example of fluid plate micro controller version. Other versions are acceptable.
IP (Internet Address)	192.168.178.5	Example of the address EasyKey is set to for basic and advanced web interface reporting.
MAC (MAC address)	00204AAD1810	Example of internet MAC address. Each EasyKey will have a different value in this format.

System Configuration Screens

NOTE: See FIG. 21 for a map of the **System Configuration Screens**. Detailed screen descriptions follow.

NOTE: Each screen displays the current screen number and the total number of screens in the group.

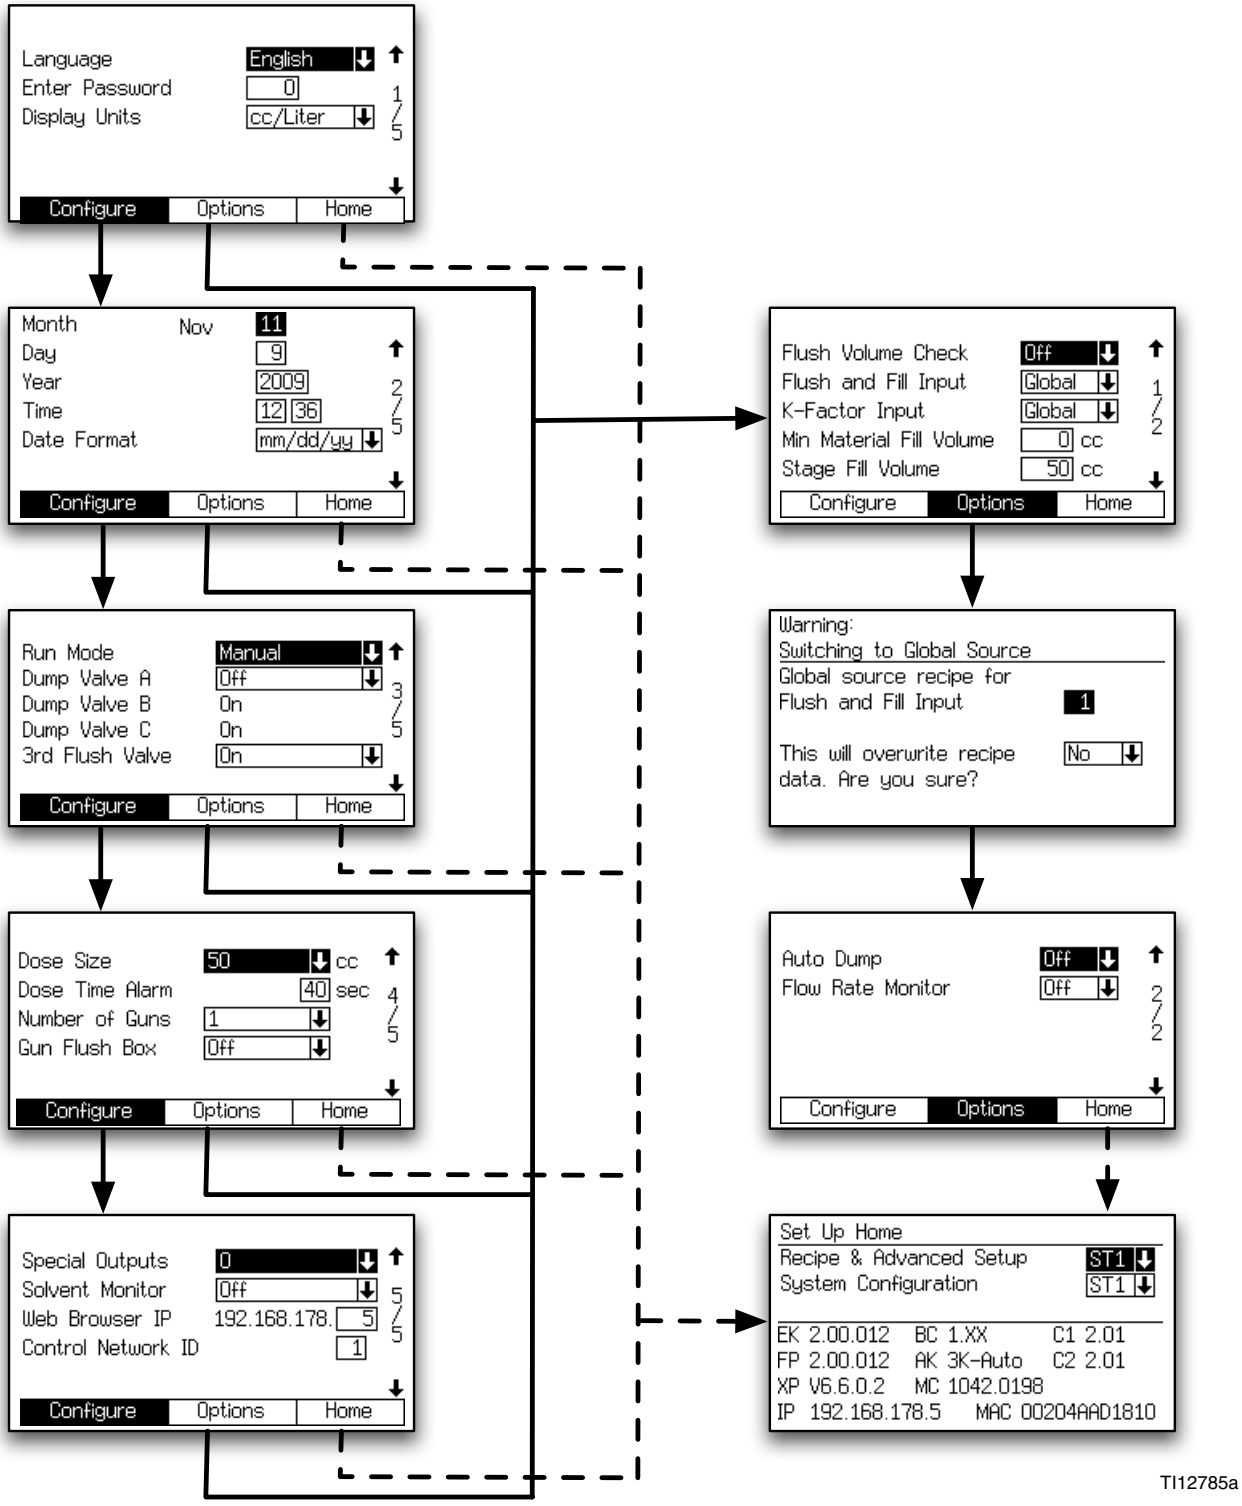

FIG. 21. System Configuration and Option Screens Map

Configure Screen 1

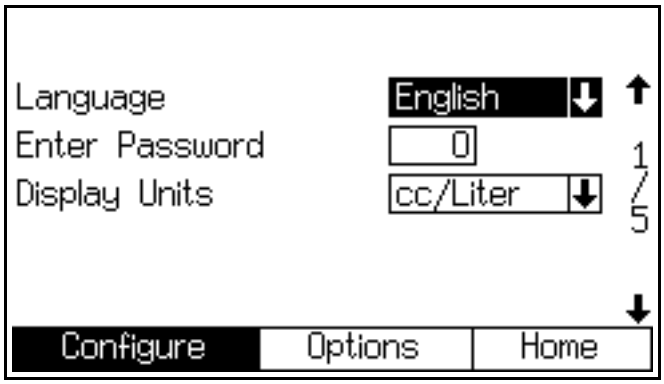

FIG. 22. Configure Screen 1

Language

Defines the language of the screen text. Select English (default), Spanish, French, German, Italian, Dutch, Japanese (Kanji), Korean, and Chinese (Simplified).

Password

The password is only used to enter Setup mode. The default is 0, which means no password is required to enter Setup. If a password is desired, enter a number from 1 to 9999.

NOTE: Be sure to write down the password and keep it in a secure location.

Display Units

Select the desired display units:

- cc/liter (default)
- cc/gallon

Configure Screen 2

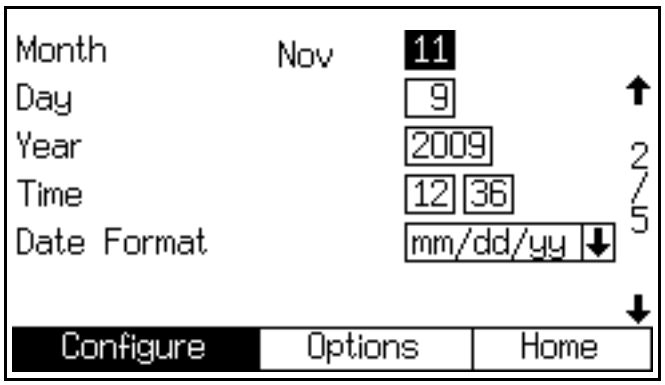

FIG. 23. Configure Screen 2

Month

Enter current month.

Day

Enter current day.

Year

Enter current year (four digits).

Time

Enter current time in hours (24 hour clock) and minutes. Seconds are not adjustable.

Date Format

Select mm/dd/yy or dd/mm/yy.

Configure Screen 3

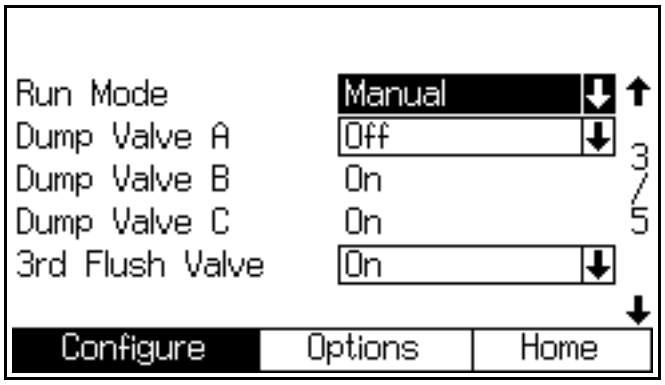

FIG. 24. Configure Screen 3

Run Mode

Indicates that this is a Manual system.

Dump Valve A

This field only appears if the system includes an optional dump valve A. If dump valve A is included, set to On.

Dump Valve B

This field only appears if the catalyst change option is detected from the cc board, meaning that dump valve B is present. On is the only setting.

Dump Valve C

This field only appears if the component C change option is detected from the cc board, meaning that dump valve C is present. On is the only setting.

3rd Flush Valve

Off is default. If optional 3rd flush valve is used, set to On.

Configure Screen 4

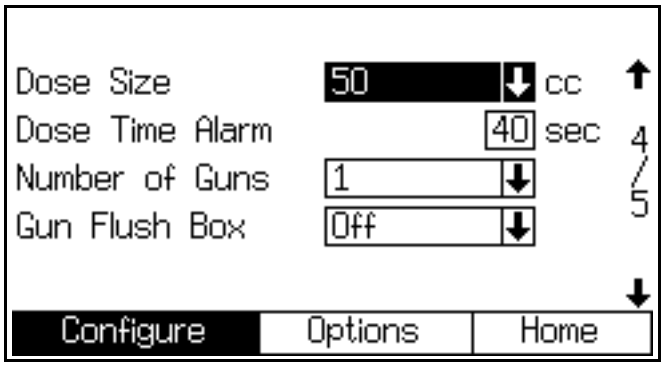

FIG. 25. Configure Screen 4

Dose Size

Select the total dose size (cc) from the pulldown menu: 100, 50, 25, or 10.

NOTE: Selection DD is for dynamic dosing, which is not used with ProMix 3KS.

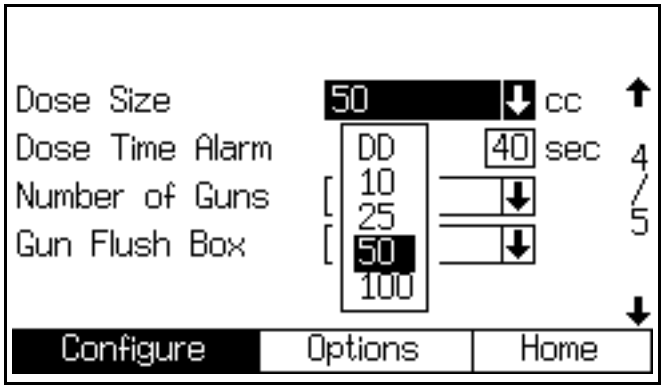

FIG. 26. Dose Size Menu

Example:
To calculate the dose size of each component, you must first calculate the A+B:C dose sizes. For example, if the total dose size is 50 cc and the A+B:C ratio is 1:1, the dose size of A+B is 25 cc and the dose size of C is also 25 cc. Then use the ratio of A:B (2:1 in this example) to calculate the dose size of A as 16.67 cc (2/3 of 25) and the dose size of B as 8.33 cc (1/3 of 25).

Dose Time Alarm

Enter the dose time (1 to 99 seconds). This is the amount of time allowed for a dose to occur before a dose time alarm occurs.

Number of Guns

Enter the number of spray guns (1 or 2).

Gun Flush Box

Enter the number of gun flush boxes (Off, 1, or 2).

Configure Screen 5

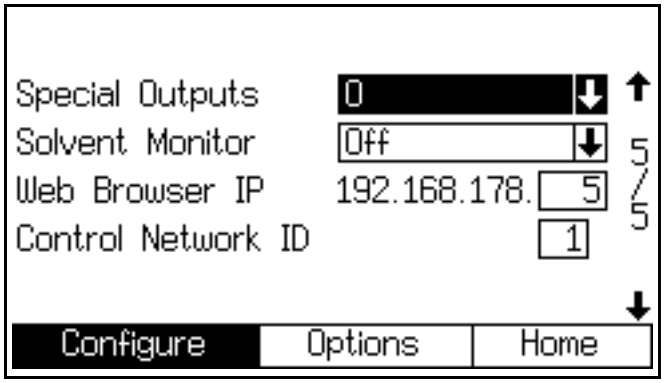

FIG. 27. Configure Screen 5

Special Outputs

Select special outputs (0-4). Each output has two different start times and durations.

Solvent Monitor

Select solvent monitor (Off, Flow Switch, or Meter).

Web Browser IP

The default web browser IP address prefix is 192.168.178.__ Assign a unique number for each EasyKey in your system (1-99) and enter it here.

Control Network ID

Used for the Graco Gateway network system. See Graco Gateway manual 312785 for further information.

Option Screens

NOTE: See FIG. 21 on page 28 for a map of the **Option Screens**. Detailed screen descriptions follow.

NOTE: Each screen displays the current screen number and the total number of screens in the group.

Option Screen 1

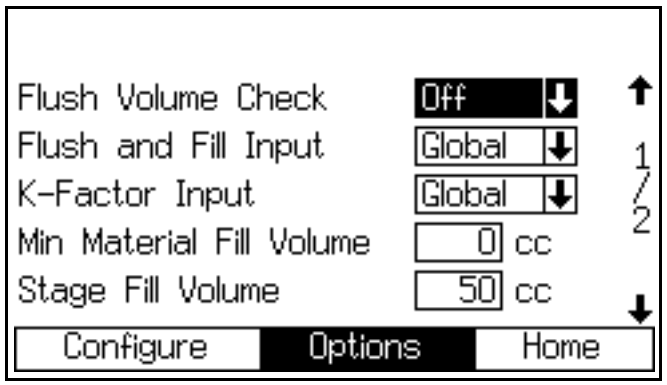

FIG. 28. Option Screen 1

Flush Volume Check

This field only appears if Solvent Monitor is set to "Meter" in **Configure Screen 5**, page 31.

If set to "On", Minimum Flush Volume will appear in **Recipe Setup Screen 2**, page 39.

Flush and Fill Input

If set to "Global", Color/Catalyst Purge and Color/Catalyst Fill are added to **Advanced Setup Screen 1**, page 35. **Advanced Setup Screen 2, 3, and 5** are added. See pages 35-37.

If set to "Recipe", Color/Catalyst Purge and Color/Catalyst Fill are added to **Recipe Setup Screen 2**, page 39. **Recipe Setup Screen 3, 4, and 7** are added. See pages 40-41.

K-Factor Input

If set to "Global," **Advanced Setup Screen 4**, page 36 is added.

If set to "Recipe," **Recipe Setup Screen 5**, page 41, is added.

Minimum Material Fill Volume

Enter 0-9999 cc.

Stage Fill Volume

This field refers to the amount of material that is required to fill the mixed material line from the A/B fluid panel to the C fluid panel, before adding component C. This value must be the same as the selected dose size. Default is 50 cc.

Verification Screen

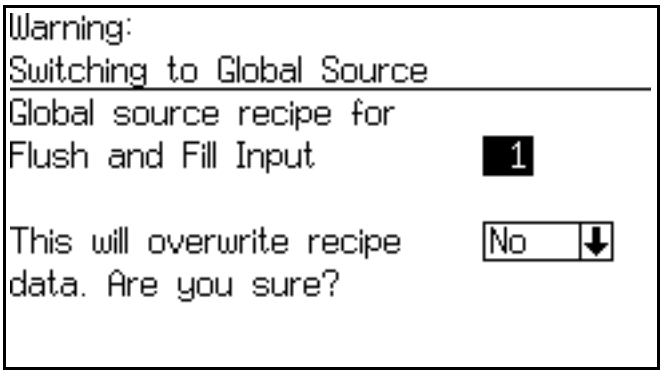

FIG. 29. Verification Screen

Verification

This screen appears if Flush and Fill Input or K-Factor Input are changed from "Recipe" to "Global" in **Option Screen 1**.

Option Screen 2

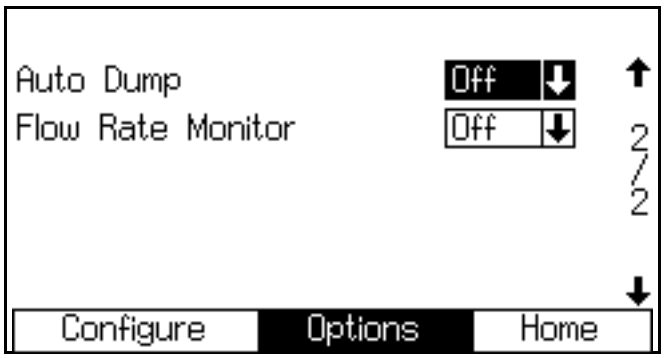

FIG. 30. Option Screen 2

Auto Dump

If the auto dump feature is being used, set to “On”. Once the auto dump is enabled, the gun flush box is enabled and the potlife alarm is active for 2 minutes, the system will automatically flush out the old material.

Flow Rate Monitor

If set to “On,” **Recipe Setup Screen 6** on page 41 is added, enabling setting of high and low flow limits.

If set to “Off,” flow rate monitoring is disabled and **Recipe Setup Screen 6** on page 41 will not appear.

Advanced Setup Screens

NOTE: See FIG. 31 for a map of the **Advanced Setup Screens**. Detailed screen descriptions follow.

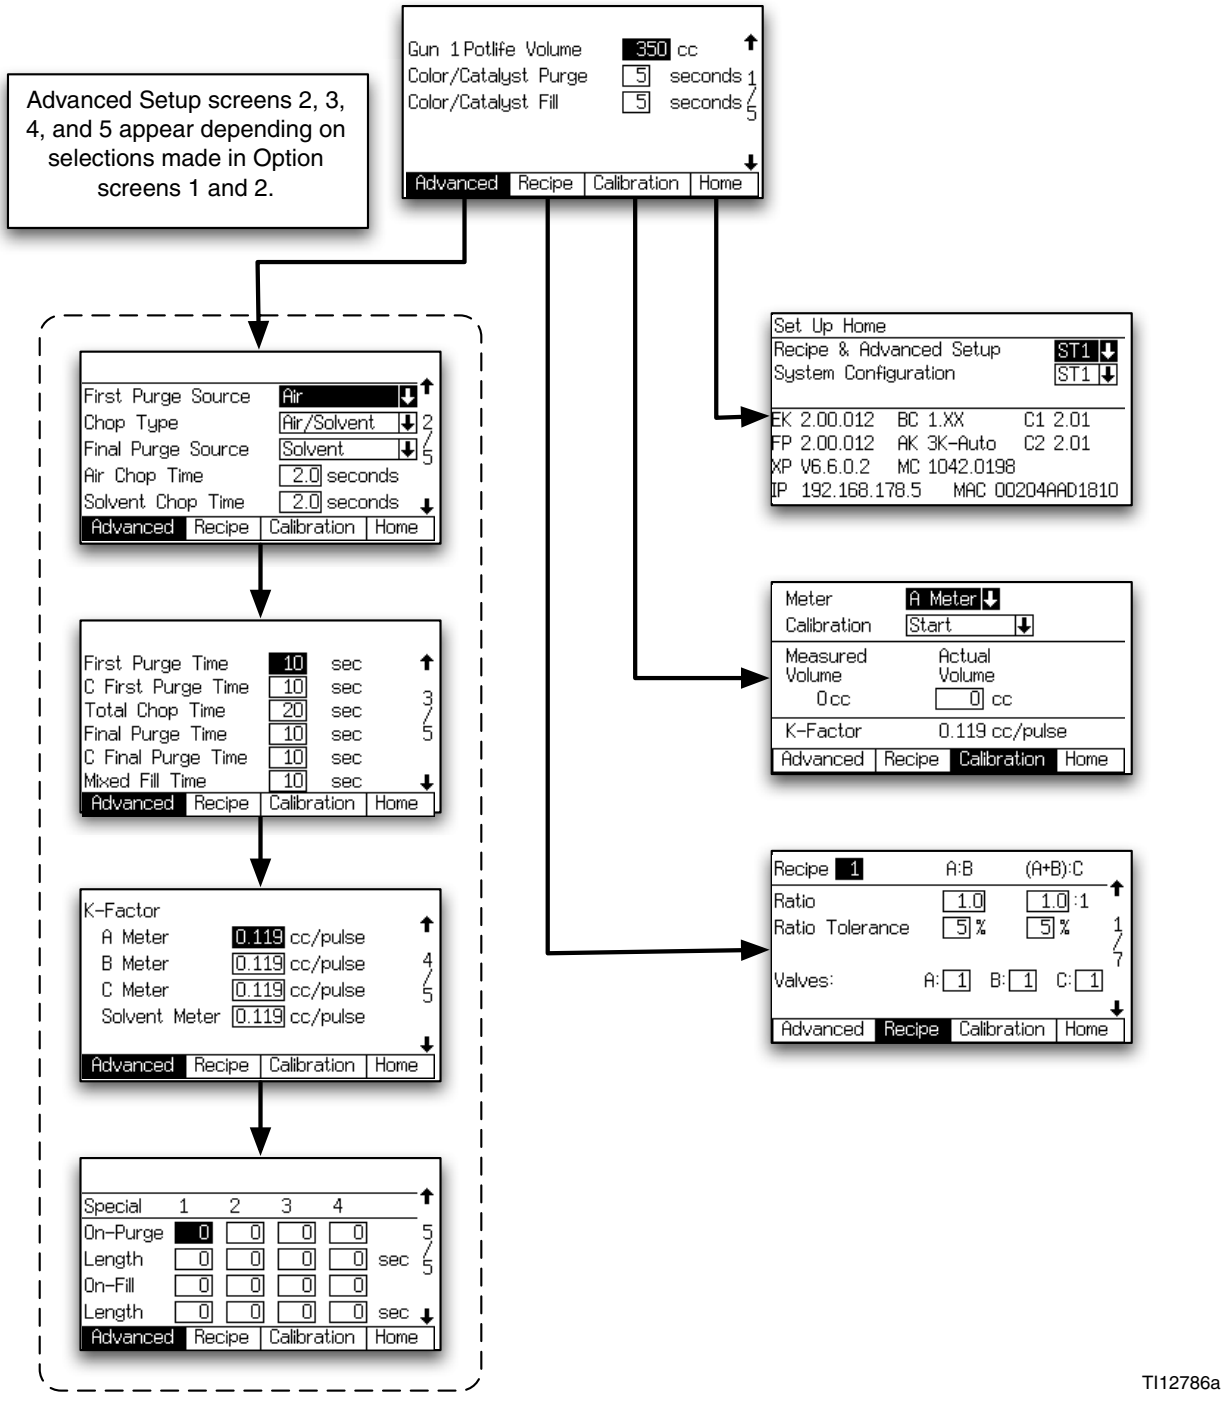
Advanced Setup screens 2, 3, 4, and 5 appear depending on selections made in Option screens 1 and 2.
Gun 1 Potlife Volume 350 cc
Color/Catalyst Purge 5 seconds
Color/Catalyst Fill 5 seconds
1/5
Advanced Recipe Calibration Home
First Purge Source Air
Chop Type Air/Solvent
Final Purge Source Solvent
Air Chop Time 2.0 seconds
Solvent Chop Time 2.0 seconds
2/5
First Purge Time 10 sec
C First Purge Time 10 sec
Total Chop Time 20 sec
Final Purge Time 10 sec
C Final Purge Time 10 sec
Mixed Fill Time 10 sec
3/5
K-Factor
A Meter 0.119 cc/pulse
B Meter 0.119 cc/pulse
C Meter 0.119 cc/pulse
Solvent Meter 0.119 cc/pulse
4/5
Special 1 2 3 4
On-Purge 0 0 0 0 0
Length 0 0 0 0 sec
On-Fill 0 0 0 0
Length 0 0 0 0 sec
5/5
Set Up Home
Recipe & Advanced Setup ST1
System Configuration ST1
EK 2.00.012 BC 1.XX C1 2.01
FP 2.00.012 AK 3K-Auto C2 2.01
XP V6.6.0.2 MC 1042.0198
IP 192.168.178.5 MAC 00204AAD1810
Meter A Meter
Calibration Start
Measured Volume 0 cc
Actual Volume 0 cc
K-Factor 0.119 cc/pulse
Recipe 1 A:B (A+B):C
Ratio 1.0 1.0 :1
Ratio Tolerance 5 % 5 %
1/7
Valves: A: 1 B: 1 C: 1
TI12786a

FIG. 31. Advanced Setup Screens Map

NOTE: Each screen displays the current screen number and the total number of screens in the group. The total number of screens in a group and the fields displayed on each screen may vary depending on selections made in the **System Configuration Screens** and **Option Screens**.

Advanced Setup Screen 1

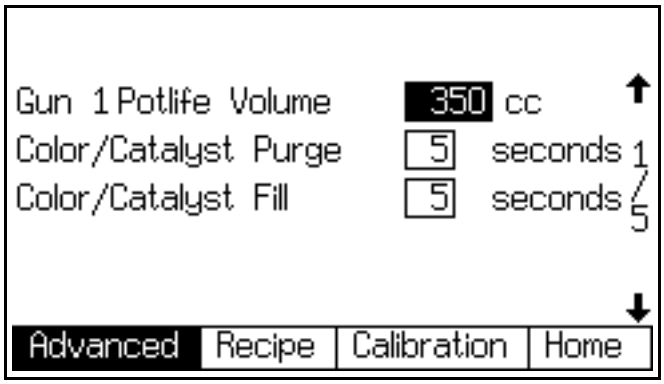

FIG. 32. Advanced Setup Screen 1

Gun 1/Gun2 Potlife Volume

Enter the potlife volume (1 to 1999 cc) for each gun. This is the amount of material required to move through the mix manifold, hose and applicator/gun before the potlife timer is reset.

Use the following information to determine approximate pot life volume (PLV) in cc:

Hose ID (inches)	Volume (cc/foot)*
3/16	5.43
1/4	9.648
3/8	21.71

Integrator manifold and mixer volume = 75 cc
Spray Gun Volume = 20 cc

(Hose Volume* x Feet of Hose) + 75 + 20 = PLV

Color/Catalyst Purge

This field only appears if the system includes a color change module and Flush and Fill Input is set to “Global” in **Option Screen 1**, page 32. Enter the purge time (0 to 99 seconds). It refers to the amount of time required to flush the lines from the color/catalyst/component C module to the dose valve or dump valve.

Color/Catalyst Fill

This field only appears if the system includes a color change module and Flush and Fill Input is set to “Global” in **Option Screen 1**, page 32. Enter the fill time (0 to 99 seconds). It refers to the time required to fill the lines from the color/catalyst/component C module to the dose valve or dump valve.

Advanced Setup Screen 2

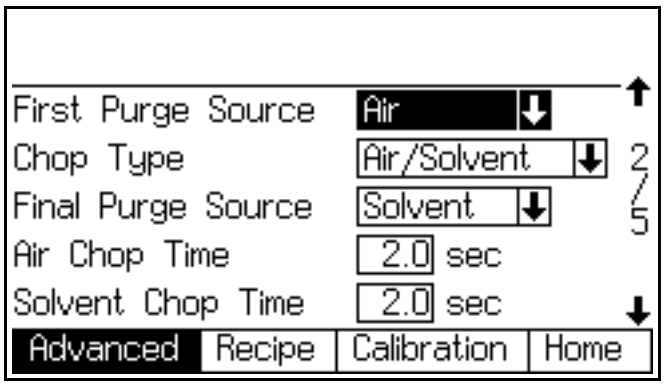

FIG. 33. Advanced Setup Screen 2

This screen appears only if Flush and Fill Input is set to “Global” in **Option Screen 1**, page 32.

First Purge Source

Select “Air,” “Solvent,” or “3rd Flush Valve” (available only if 3rd Flush Valve is set to “On” in **Configure Screen 3** on page 30).

Chop Type

Select “Air/Solvent” or “Air/3rd Flush Valve” (available only if 3rd Flush Valve is set to “On” in **Configure Screen 3** on page 30). This refers to the process of mixing air and solvent (or air and 3rd flush fluid) together during the flush cycle, to help clean the lines and reduce solvent usage.

Final Purge Source

Select “Air,” “Solvent,” or “3rd Flush Valve” (available only if 3rd Flush Valve is set to “On” in **Configure Screen 3** on page 30).

Air Chop Time

Enter the air chop time (0.0 to 99.9 seconds).

Solvent Chop Time/3rd Flush Valve Chop Time

Enter the solvent or 3rd flush valve chop time (0.0 to 99.9 seconds).

Advanced Setup Screen 3

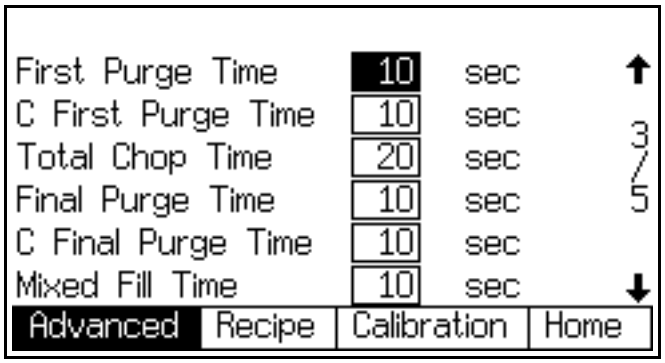

FIG. 34. Advanced Setup Screen 3

This screen appears only if Flush and Fill Input is set to "Global" in **Option Screen 1**, page 32.

If Number of Guns is set to "2" in **Configure Screen 4**, page 30, a Gun 2 column will appear in this screen.

First Purge Time (Stage 1)

Enter the first purge time (0 to 999 seconds) for components A and B.

C First Purge Time (Stage 2)

Enter the component C first purge time (0 to 999 seconds).

Total Chop Time (Stage 1)

Enter the total chop time (0 to 999 seconds) for components A and B.

Final Purge Time (Stage 1)

Enter the final purge time (0 to 999 seconds) for components A and B.

C Final Purge Time (Stage 2)

Enter the component C final purge time (0 to 999 seconds).

Mixed Fill Time

Enter the mixed fill time (0 to 999 seconds). It refers to the amount of material that is required to fill from the dose valves to the applicator/gun.

Advanced Setup Screen 4

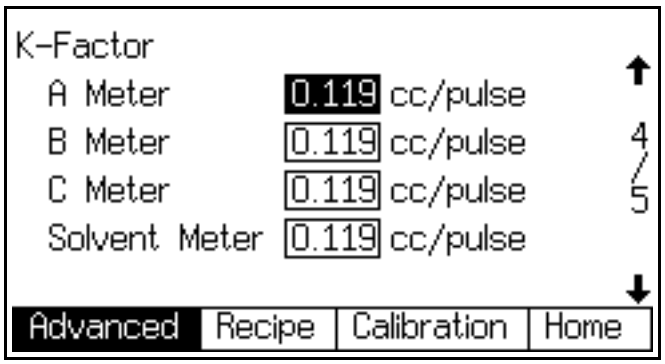

FIG. 35. Advanced Setup Screen 4

This screen appears only if K-Factor Input is set to "Global" in **Option Screen 1**, page 32.

K-factor A Meter

Enter the k-factor (cc/pulse) for flow meter A. This is the amount of material that passes through the flow meter per pulse (electrical pulse signal).

K-factor B Meter

Enter the k-factor (cc/pulse) for flow meter B.

K-factor C Meter

Enter the k-factor (cc/pulse) for flow meter C.

K-factor Solvent Meter

This field only appears if Solvent Monitor in **Configure Screen 5**, page 31, is set to "Meter." Enter the k-factor (cc/pulse) for the solvent flow meter.

Advanced Setup Screen 5

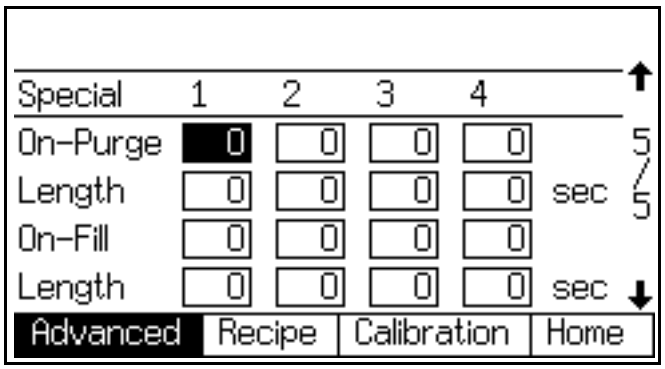

FIG. 36. Advanced Setup Screen 5

This screen appears only if Flush and Fill Input is set to “Global” in **Option Screen 1**, page 32 and Special Outputs is set to 1, 2, 3, or 4 in **Configure Screen 5**, page 31. The I/O board has four programmable outputs.

Recipe Setup Screens

NOTE: See FIG. 37 for a map of the Recipe screens. Detailed screen descriptions follow.

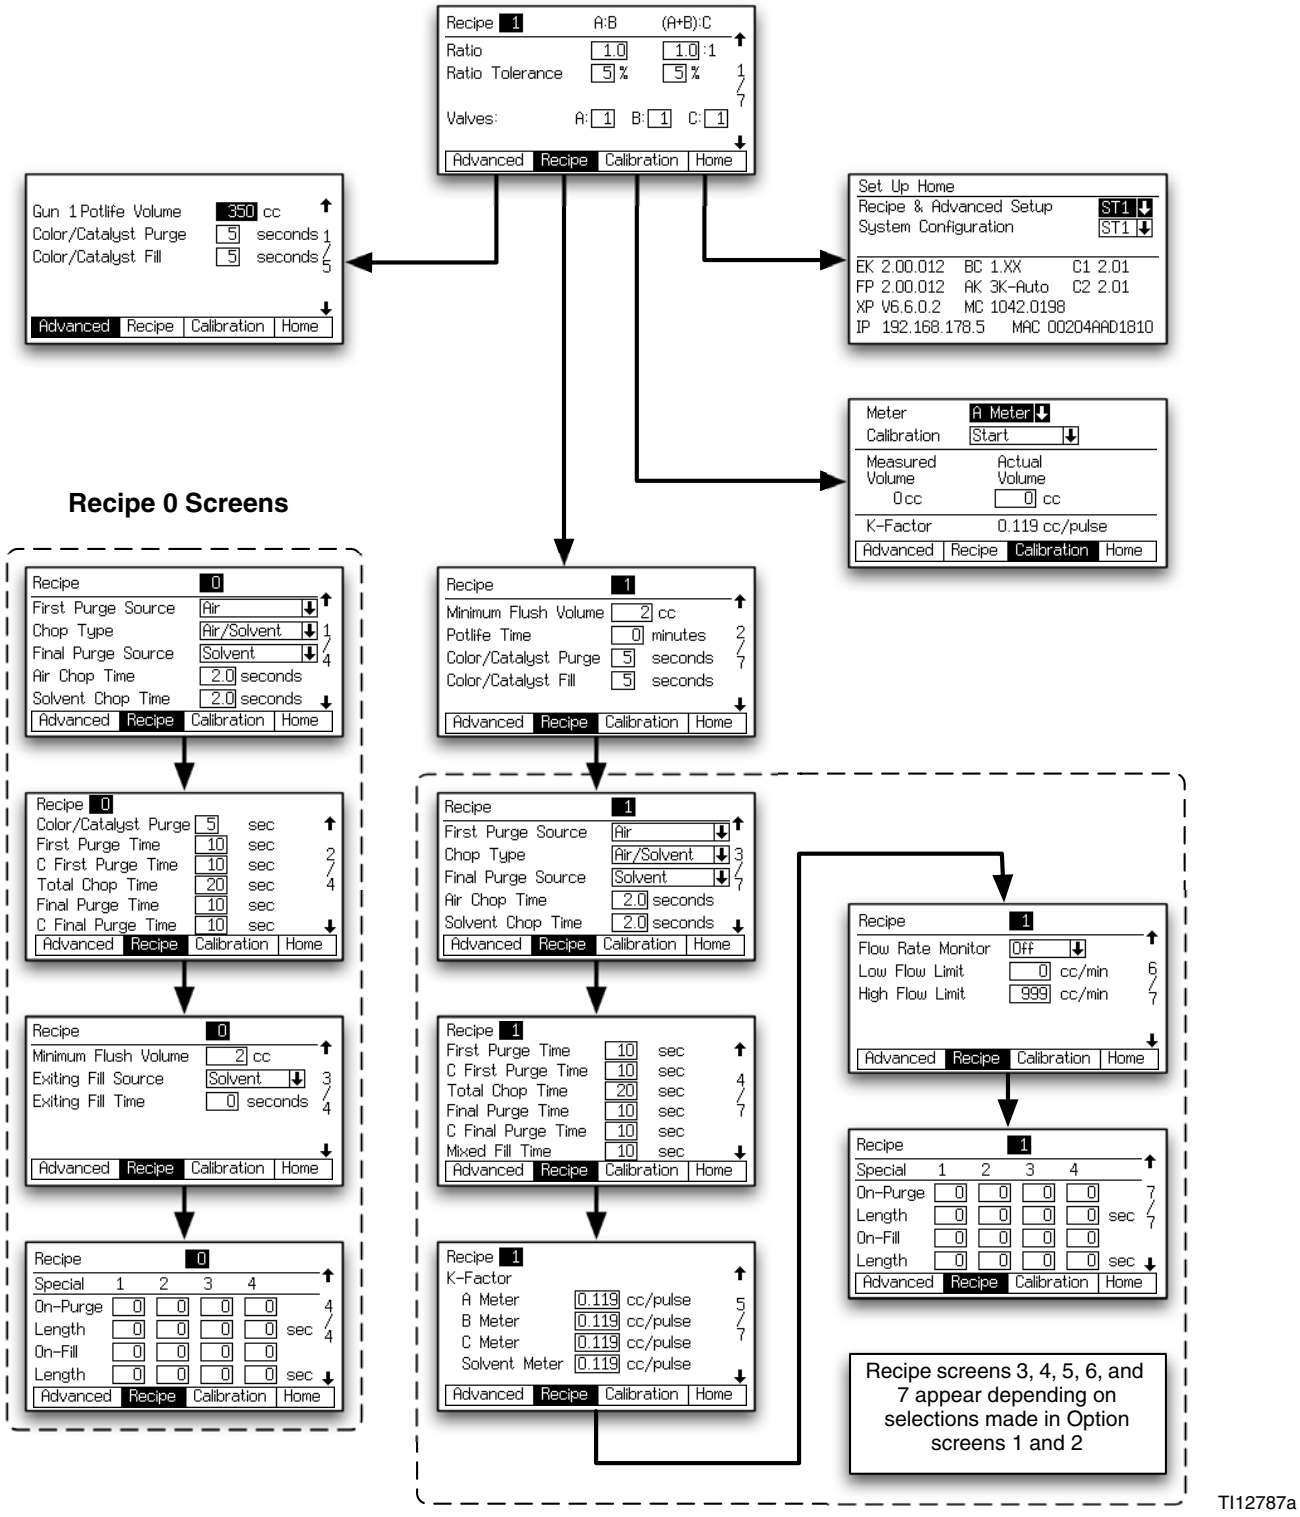

FIG. 37: Recipe Screens Map

NOTE: Each screen displays the current screen number and the total number of screens in the group. The total number of screens in a group and the fields displayed on each screen may vary depending on selections made in the **System Configuration Screens** and **Option Screens**.

Recipe Setup Screen 1

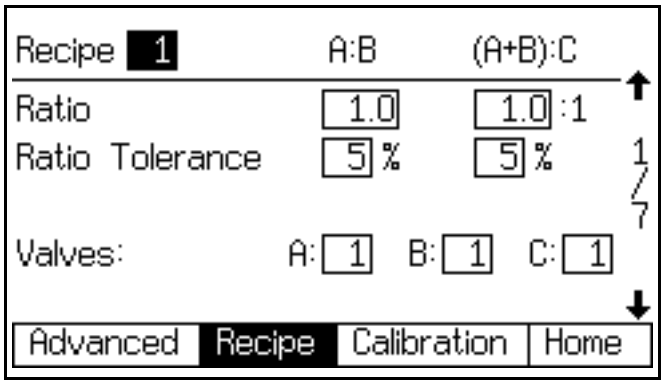

FIG. 38. Recipe Setup Screen 1

Ratio

Enter the mix ratio of component A over component B (0.0:1 to 50:1) and the ratio of A+B over C (0.0:1 to 50:1).

Ratio Tolerance

Enter the ratio tolerance (1 to 99%). This refers to the percent of acceptable variance that the system will allow before a ratio alarm occurs.

Component A (Color) Valve (if present)

This field only appears if the system includes a color change module. Enter the component A valve number (1 to 25).

Component B (Catalyst) Valve (if present)

This field only appears if the system includes a color change module. Enter the component B valve number (1 to 4).

Component C (Reducer) Valve (if present)

This field only appears if the system includes a color change module. Enter the component C valve number (1 to 4).

Recipe Setup Screen 2

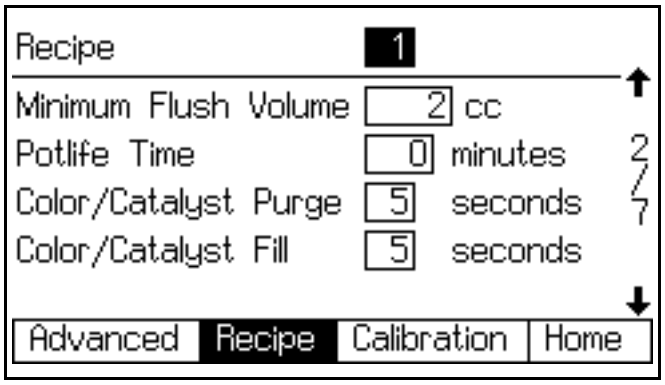

FIG. 39. Recipe Setup Screen 2

Minimum Flush Volume

This field only appears if Flush Volume Check is set to "On" in **Option Screen 1** on page 32. Enter the minimum flush volume (0 to 999 cc). Entering 0 disables this function.

Potlife Time

Enter the potlife time (0 to 999 minutes). Entering 0 disables this function.

Color/Catalyst Purge

This field only appears if the system includes a color change module and Flush and Fill Input is set to "Recipe" in **Option Screen 1**, page 32. Enter the purge time (0 to 99 seconds). It refers to the amount of time required to flush the lines from the color, catalyst, or component C module to the dose valve or dump valve.

Color/Catalyst Fill

This field only appears if the system includes a color change module and Flush and Fill Input is set to "Recipe" in **Option Screen 1**, page 32. Enter the fill time (0 to 99 seconds). It refers to the time required to fill the lines from the color, catalyst, or component C module to the dose valve or dump valve.

Recipe Setup Screen 3

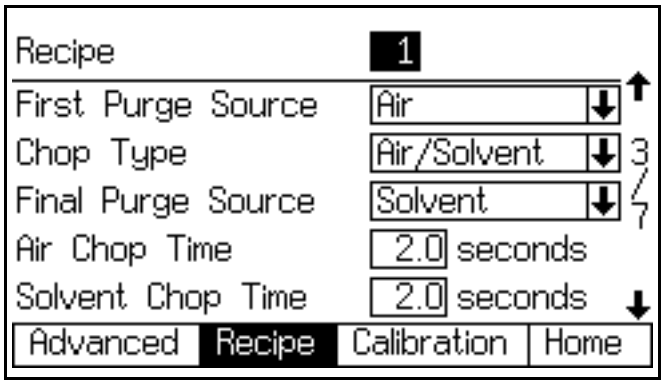

FIG. 40. Recipe Setup Screen 3

This screen appears only if Flush and Fill Input is set to "Recipe" in **Option Screen 1**, page 32.

First Purge Source

Select "Air," "Solvent," or "3rd Flush Valve" (available only if 3rd Flush Valve is set to "On" in **Configure Screen 3** on page 30).

Chop Type

Select "Air/Solvent" or "Air/3rd Flush Valve" (available only if 3rd Flush Valve is set to "On" in **Configure Screen 3** on page 30). This refers to the process of mixing air and solvent (or air and 3rd flush fluid) together during the flush cycle, to help clean the lines and reduce solvent usage.

Final Purge Source

Select "Air," "Solvent," or "3rd Flush Valve" (available only if 3rd Flush Valve is set to "On" in **Configure Screen 3** on page 30.)

Air Chop Time

Enter the air chop time (0.0 to 99.9 seconds).

Solvent Chop Time/3rd Flush Valve Chop Time

Enter the solvent or 3rd flush valve chop time (0.0 to 99.9 seconds).

Recipe Setup Screen 4

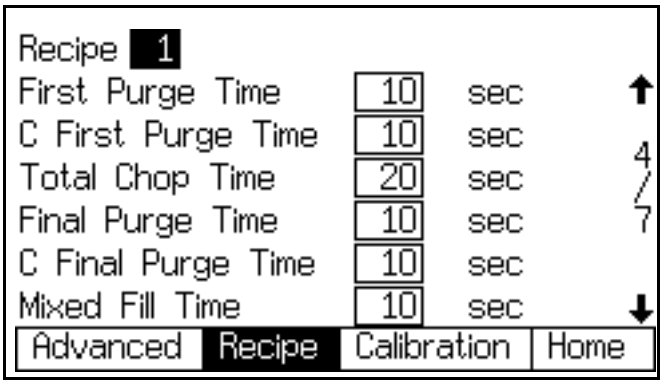
Recipe 1
First Purge Time 10 sec
C First Purge Time 10 sec
Total Chop Time 20 sec
Final Purge Time 10 sec
C Final Purge Time 10 sec
Mixed Fill Time 10 sec
4/7
Advanced Recipe Calibration Home

FIG. 41. Recipe Setup Screen 4

This screen appears only if Flush and Fill Input is set to "Recipe" in **Option Screen 1**, page 32.

If Number of Guns is set to "2" in **Configure Screen 4**, page 30, a Gun 2 column will appear in this screen.

First Purge Time (Stage 1)

Enter the first purge time (0 to 999 seconds) for components A and B.

C First Purge Time (Stage 2)

Enter the component C first purge time (0 to 999 seconds).

Total Chop Time (Stage 1)

Enter the total chop time (0 to 999 seconds) for components A and B.

Final Purge Time (Stage 1)

Enter the final purge time (0 to 999 seconds) for components A and B.

C Final Purge Time (Stage 2)

Enter the component C final purge time (0 to 999 seconds).

Mixed Material Fill Time

Enter the mixed material fill time (0 to 999 seconds). It refers to the amount of material that is required to fill from the dose valves to the applicator/gun.

Recipe Setup Screen 5

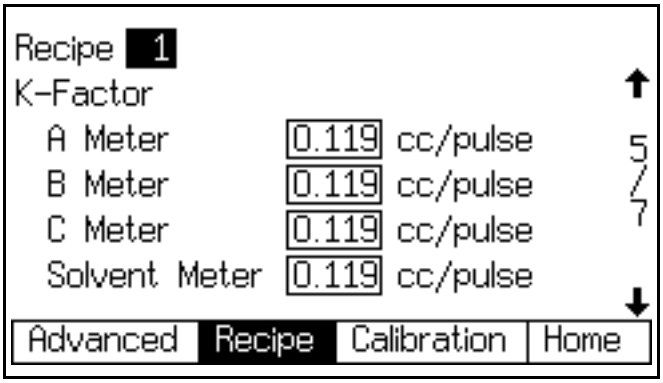

FIG. 42. Recipe Setup Screen 5

This screen appears only if K-Factor Input is set to “Recipe” in **Option Screen 1**, page 32.

K-factor A Meter

Enter the k-factor (cc/pulse) for flow meter A. This is the amount of material that passes through the flow meter per pulse (electrical pulse signal).

K-factor B Meter

Enter the k-factor (cc/pulse) for flow meter B.

K-factor C Meter

Enter the k-factor (cc/pulse) for flow meter C.

K-factor Solvent Meter

This field only appears if Solvent Monitor in **Configure Screen 5**, page 31, is set to “Meter.” Enter the k-factor (cc/pulse) for the solvent flow meter.

Recipe Setup Screen 6

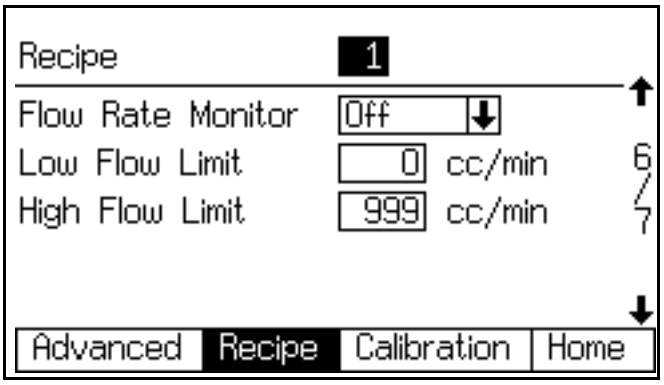

FIG. 43. Recipe Setup Screen 6

This screen appears only if Flow Rate Monitor is set to “On” in **Option Screen 2** on page 33.

Flow Rate Monitor

Select the desired flow rate monitoring (Off, Warning, or Alarm).

Low Flow Limit

Enter the low flow rate limit (1 to 3999 cc/min).

High Flow Limit

Enter the high flow rate limit (1 to 3999 cc/min).

Recipe Setup Screen 7

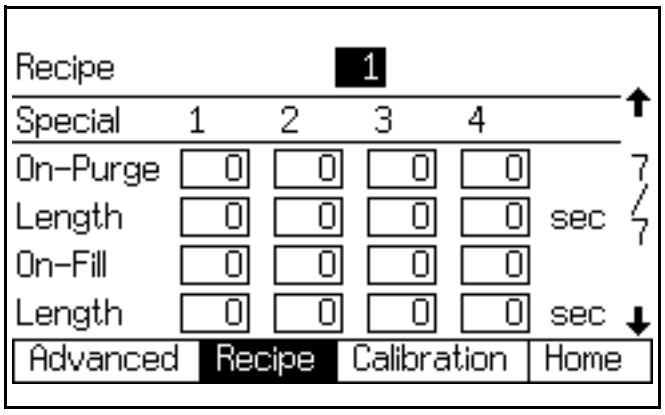

FIG. 44. Recipe Screen 7

This screen appears only if Flush and Fill Input is set to “Recipe” in **Option Screen 1**, page 32 and Special Outputs is set to 1, 2, 3, or 4 in **Configure Screen 5**, page 31. The I/O board has four programmable outputs.

Recipe 0 Screens

NOTE: See FIG. 37 on page 38 for a map of the Recipe 0 screens. Detailed screen descriptions follow.

Recipe 0 is typically used:
- in multiple color systems to purge out material lines without loading a new color
- at the end of a shift to prevent hardening of catalyzed material.

NOTE: Each screen displays the current screen number and the total number of screens in the group. The total number of screens in a group and the fields displayed on each screen may vary depending on selections made in the **System Configuration Screens** and **Option Screens**.

Recipe 0 Screen 1

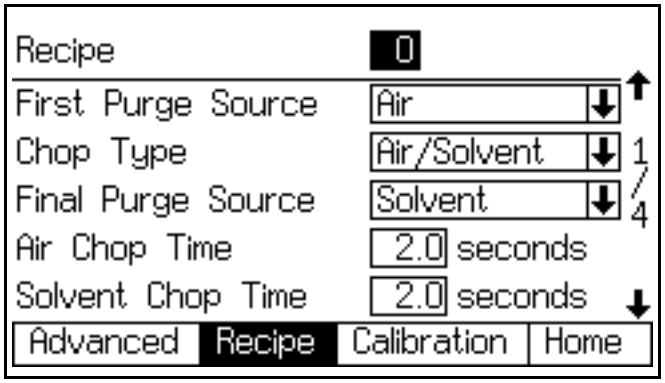

FIG. 45. Recipe 0 Screen 1

First Purge Source

Select “Air,” “Solvent,” or “3rd Flush Valve” (available only if 3rd Flush Valve is set to “On” in **Configure Screen 3** on page 30).

Chop Type

Select “Air/Solvent” or “Air/3rd Flush Valve” (available only if 3rd Flush Valve is set to “On” in **Configure Screen 3** on page 30). This refers to the process of mixing air and solvent (or air and 3rd flush fluid) together during the flush cycle, to help clean the lines and reduce solvent usage.

Final Purge Source

Select “Air,” “Solvent,” or “3rd Flush Valve” (available only if 3rd Flush Valve is set to “On” in **Configure Screen 3** on page 30.)

Air Chop Time

Enter the air chop time (0.0 to 99.9 seconds).

Solvent Chop Time/3rd Flush Valve Chop Time

Enter the solvent or 3rd flush valve chop time (0.0 to 99.9 seconds).

Recipe 0 Screen 2

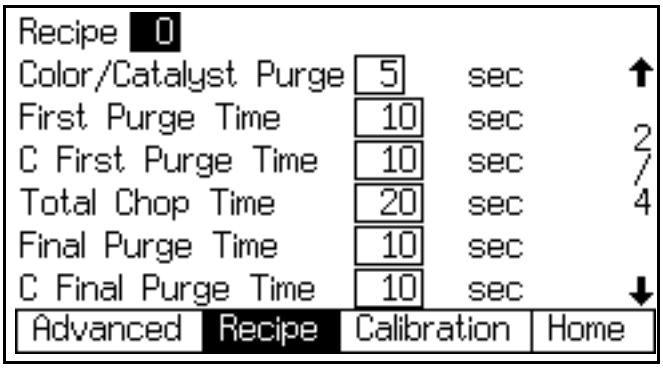
Recipe 0
Color/Catalyst Purge 5 sec
First Purge Time 10 sec
C First Purge Time 10 sec
Total Chop Time 20 sec
Final Purge Time 10 sec
C Final Purge Time 10 sec
2/4
Advanced Recipe Calibration Home

FIG. 46. Recipe 0 Screen 2

If Number of Guns is set to “2” in **Configure Screen 4**, page 30, a Gun 2 column will appear in this screen.

Color/Catalyst Purge Time

This field only appears if the system includes a color change module. Enter the purge time (0 to 999 seconds).

First Purge Time (Stage 1)

Enter the first purge time (0 to 999 seconds) for components A and B.

C First Purge Time (Stage 2)

Enter the component C first purge time (0 to 999 seconds).

Total Chop Time

Enter the total chop time (0 to 999 seconds) for components A and B.

Final Purge Time (Stage 1)

Enter the final purge time (0 to 999 seconds) for components A and B.

C Final Purge Time (Stage 2)

Enter the component C final purge time (0 to 999 seconds).

Recipe 0 Screen 3

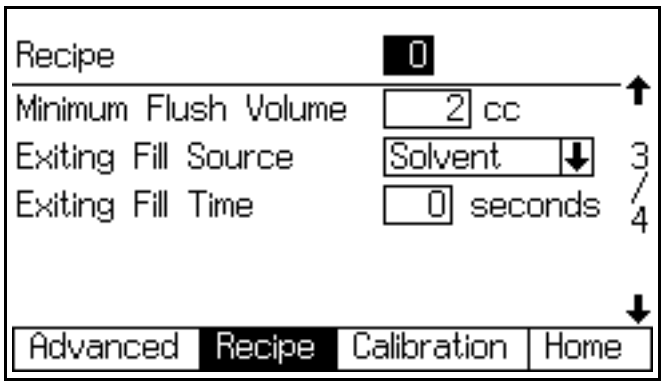

FIG. 47. Recipe 0 Screen 3

This screen only appears if Solvent Monitor is set to "Meter" in **Configure Screen 5**, page 31 and Flush Volume Check is set to "On" in **Option Screen 1**, page 32 or 3rd Flush Valve is set to "On" in **Configure Screen 3** on page 30.

Minimum Flush Volume
This field only appears if Flush Volume Check is set to "On" in **Option Screen 1** on page 32. Enter the minimum flush volume (0 to 999 cc).

Exiting Fill Source
This field only appears if 3rd Flush Valve is set to "On" in **Configure Screen 3** on page 30. Select "Off," "Air," "Solvent," or "3rd Valve."

Exiting Fill Time
This field only appears if Exiting Fill Source is set to "Air," "Solvent," or "3rd Valve." Enter the time in seconds.

Recipe 0 Screen 4

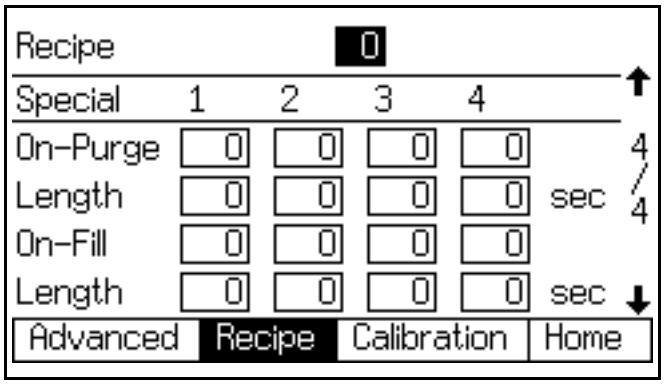

FIG. 48. Recipe 0 Screen 4

This screen appears only if Flush and Fill Input is set to "Recipe" in **Option Screen 1**, page 32 **and** Special Outputs is set to 1, 2, 3, or 4 in **Configure Screen 5**, page 31. The I/O board has four programmable outputs.

Calibration Screen

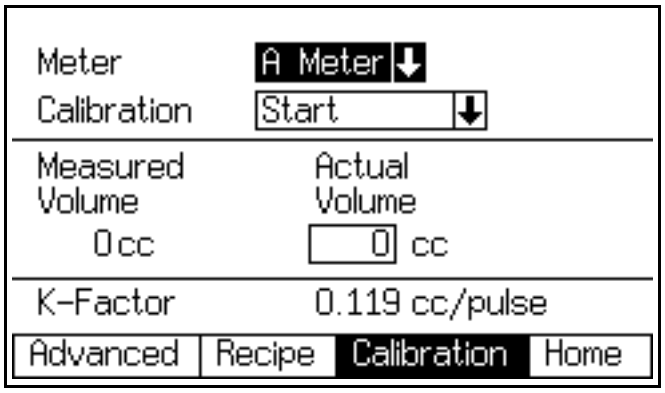

FIG. 49. Calibration Screen

Use this screen to calibrate a meter. Set to “Meter A,” “Meter B,” “Meter C,” or “Solvent Meter” (available if Solvent Monitor in **Configure Screen 5**, page 31, is set to “Meter”).

- **Start -** start calibration
- **Abort -** stop calibration
- **Purge -** purge sampling valves after calibration

See **Meter Calibration**, page 62, for when and how to calibrate a meter.

System Operation

Operation Modes

Mix

System mixes and dispenses material.

Standby

Stops the system.

Purge

Purges the system, using air and solvent.

Sequential Dosing

Components A, B, and C dispense sequentially in the necessary volumes to attain the mix ratio.

Recipe (Color) Change

The process when the system automatically flushes out the old color and loads a new color. See pages 64-76.

General Operating Cycle, Sequential Dosing

1. The spray gun operator enters and loads the desired recipe. The color change LED blinks while recipe is loading, then turns solid when complete.
2. The operator presses the Mix key to begin operation.
3. The controller sends signals to activate the solenoid valves. The solenoid valves activate Dose Valves A, B, and C. Fluid flow begins when the gun is triggered.

Stage 1 (see FIG. 50, ProMix 2KS Detail)

4. Components A and B are introduced into the 2KS fluid integrator (FI) one at a time as follows.
   a. Dose Valve B (DVB) opens, and fluid flows into the integrator.
   b. Flow Meter B (MB) monitors the fluid volume dispensed and sends electrical pulses to the ProMix 2KS controller. The controller monitors these pulses and signals.
   c. When the target volume dispenses, Dose Valve B closes.

   NOTE: The dispense volume of component A and B is based on the mix ratio and dose size set by the user and calculated by the ProMix 2KS controller.

   d. Dose Valve A (DVA) opens, and fluid flows into the 2KS integrator and is aligned proportionately with component B.
   e. Flow Meter A (MA) monitors the fluid volume dispensed and sends electrical pulses to the ProMix 2KS controller.
   f. When the target volume is dispensed, Dose Valve A closes.

5. Components A and B are pre-mixed in the 2KS integrator, then uniformly blended in the 2KS static mixer (SM) before flowing through the hose to the 3KS Fluid Manifold inlet.

Stage 2 (see FIG. 50, ProMix 3KS Detail)

6. Dose Valve C (DVC) opens, and fluid flows into the 3KS integrator and is aligned proportionately with components A+B (mixed in Stage 1).

7. Flow Meter C (MC) monitors the fluid volume dispensed and sends electrical pulses to the ProMix 3KS controller.

8. When the target volume is dispensed, Dose Valve C closes.

9. Components A+B and C are pre-mixed in the 3KS integrator, then uniformly blended in the 3KS static mixer (SM).

   NOTE: To control output from the 3KS static mixer to the gun, install an optional fluid pressure regulator.

10. Components A+B and C are alternately fed into the 2KS integrator as long as the gun is triggered.

11. If the gun is not triggered for two minutes, the system switches to Idle mode, which closes off the mix manifold dose valves.

12. When the gun is triggered again, the ProMix 3KS continues the process where it left off.

    NOTE: Operation can be stopped at any time by pressing the Standby key or shutting off the main power switch.

Table 5: Sequential Dosing Operation

Ratio = 2.0:1	Dose 1		Dose 2	
	Stage 1 (A:B)	Stage 2 (A+B):C	Stage 1 (A:B)	Stage 2 (A+B):C
A = 2				
B = 1				
C = 1				

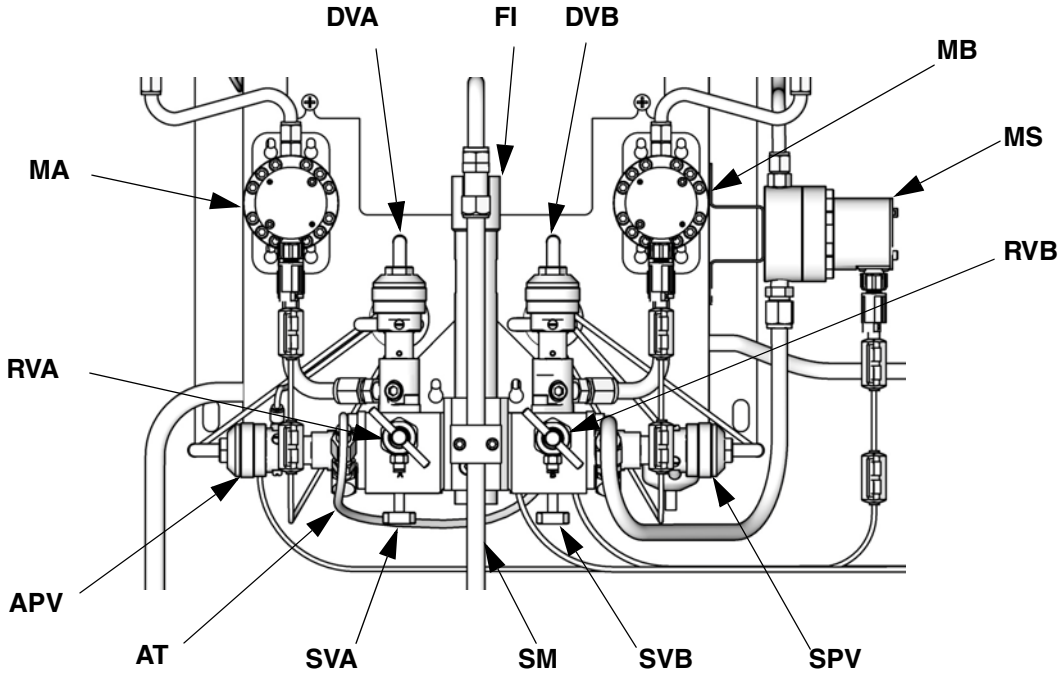

Key: ProMix 2KS Fluid Station

MA	Component A Meter	SVB	Component B Shutoff Valve
DVA	Component A Dose Valve	MS	Solvent Meter
RVA	Component A Sampling Valve	SPV	Solvent Purge Valve
SVA	Component A Shutoff Valve	APV	Air Purge Valve
MB	Component B Meter	SM	Static Mixer
DVB	Component B Dose Valve	FI	Fluid Integrator
RVB	Component B Sampling Valve	AT	Air Purge Valve Air Supply Tube

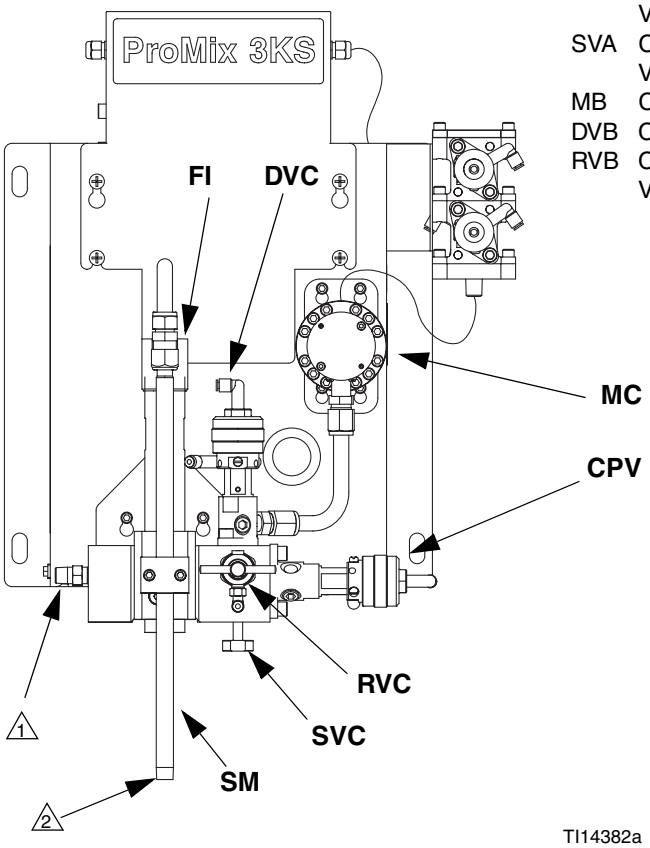

Key: ProMix 3KS Fluid Station

MC	Component C Meter
DVC	Component C Dose Valve
RVC	Component C Sampling Valve
SVC	Component C Shutoff Valve
CPV	Component C Purge Valve
SM	Static Mixer
FI	Fluid Integrator

1 3KS fluid inlet. Connect fluid supply line from 2KS fluid manifold outlet here.

2 Connect fluid supply line to gun.

FIG. 50. ProMix 2KS and ProMix 3KS Wall Mount Fluid Stations

Mix Manifold Valve Settings

To open dose or purge valves, turn hex nut (E) *counter-clockwise*. To close, turn *clockwise.* See Table 6 and FIG. 51.

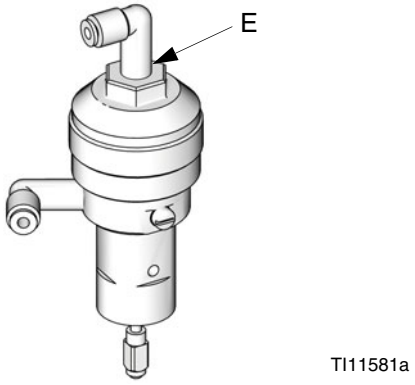

FIG. 51. Valve Adjustment

Table 6: Mix Manifold Valve Settings

Valve	Setting	Function
Dose (FIG. 51)	Hex nut (E) 1-1/4 turns out from fully closed	Limits maximum fluid flow rate into integrator and minimizes valve response time.
Purge (FIG. 51)	Hex nut (E) 1-1/4 turns out from fully closed	Limits maximum fluid flow rate into integrator and minimizes valve response time.
Shutoff (SVA and SVB, FIG. 60)	Fully open during Run/Mix operation	Closes component A, B, and C ports to integrator during ratio check or meter calibration. Open ports during Run/Mix operation.
Sampling (RVA, RVB, and RVC, FIG. 60)	Fully closed during Run/Mix operation	Open to dispense component A, B, and C while calibrating meters. Do not open sampling valves unless fluid shutoff valves are closed.

Air Flow Switch (AFS) Function

Air or Air-assisted Guns

The air flow switch (AFS) detects air flow to the gun and signals the ProMix controller when the gun is triggered. The AFS functions with the flow meters to ensure that system components are functioning correctly.

For example, if a flow meter fails or clogs, pure resin or catalyst could spray indefinitely if the ProMix does not detect the condition and intervene, which is why the AFS is so important.

If the ProMix detects through the AFS signal that the gun is triggered, yet there is no fluid flow through the meter, a Dose Time Alarm (E-7 or E-8) occurs after 40 seconds and the system shuts down.

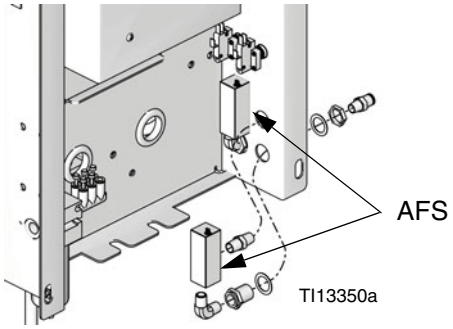

FIG. 52: Air Flow Switches

Operating Without Air Flow Switch

It is **not recommended** to run without an air flow switch. If a switch fails, replace it as soon as possible.

Airless Gun

It is **not recommended** to use an airless gun with the ProMix 3KS. Two issues can arise from operating without an air flow switch:

- Without a gun trigger/air flow switch input the ProMix 3KS does not know it is spraying and will not generate a Dose Time Alarm (E-7 or E-8). This means there is no way to detect a failed meter. You could spray pure resin or catalyst for 2 minutes without knowing.
- Since the ProMix 3KS does not know it is spraying because there is no gun trigger/air flow switch input, it will go into System Idle (E-15) every 2 minutes when in Mix mode.

System Idle Warning (E-15)

This warning occurs if the ProMix is set to Mix , and 2 minutes have elapsed since the system received a flow meter pulse.

In applications using the AFS, triggering the gun clears the warning and you can start spraying again.

Without the AFS, triggering the gun does not clear the alarm. To start spraying again, you must press Standby , then Mix , then trigger the gun.

Start Up

1. Go through the Pre-Operation Checklist in Table 7.

Table 7: Pre-Operation Checklist

✓	Checklist
	System grounded Verify all grounding connections were made. See the ProMix 3KS Installation manual.
	All connections tight and correct Verify all electrical, fluid, air, and system connections are tight and installed according to the Installation manual.
	Fluid supply containers filled Check component A, B, and C and solvent supply containers.
	Mix manifold valves set Check that mix manifold valves are set correctly. Start with the settings recommended in **Mix Manifold Valve Settings**, page 48, then adjust as needed.
	Fluid supply valves open and pressure set Component A, B, and C fluid supply pressures should be equal unless one component is more viscous and requires a higher pressure setting.
	Solenoid pressure set 75-100 psi inlet air supply (0.5-0.7 MPa, 5.2-7 bar)

2. Turn the AC Power Switch on the EasyKey and on the Power Supply Module ON (I = ON, 0 = OFF).

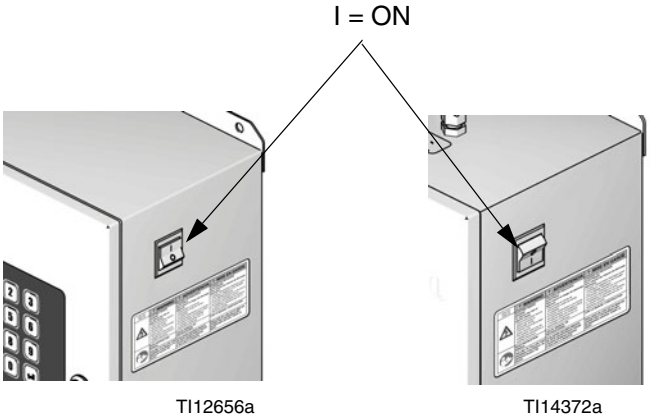

FIG. 53. Power Switch

➜ Graco logo, software revision, and “Establishing Communication” will display, followed by Status screen. See page 20.

➜ At power up the system defaults to Recipe 61, which is not a valid recipe number. Initiate a color change to Recipe 0 or a valid recipe number (1-60).

➜ In bottom left corner, the system status displays, which can be Standby, Mix, Purge, or an alarm notification.

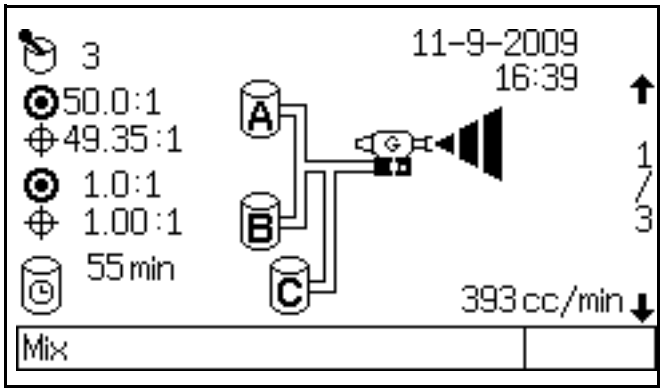

FIG. 54. Status Screen

3. Make sure that the Booth Control is working. The active recipe number should display and the

   Standby LED should be lit.

4. If this is the first time starting up the system, purge it as instructed in **Purging Fluid Supply System**, page 59. The equipment was tested with lightweight oil, which should be flushed out to avoid contaminating your material.

5. Make sure that the Booth Control is in Standby

   mode.

6. Adjust component A, B, and C fluid supplies as needed for your application. Use lowest pressure possible.

7. Do not exceed the maximum rated working pressure shown on the system identification label or the lowest rated component in the system.

8. Open the fluid supply valves to the system.



9. Adjust the air pressure. Most applications require about 80 psi (552 kPa, 5.5 bar) air pressure to operate properly. Do not use less than 75 psi (517 kPa, 5.2 bar).

10. If using a gun flush box, place the gun into the box and close the lid. Press the Purge key on the Booth Control. The purge sequence automatically starts.

    If the gun flush box is not used, trigger the gun into a grounded metal pail until the purge sequence is complete.

    When done purging, the Booth Control automatically switches to Standby mode.

11. Adjust the flow rate.

    The fluid flow rate shown on the EasyKey Status screen is for either component A, B, and C, depending on which dose valve is open. The fluid supply lines on the screen highlight to show which dose valve is open.

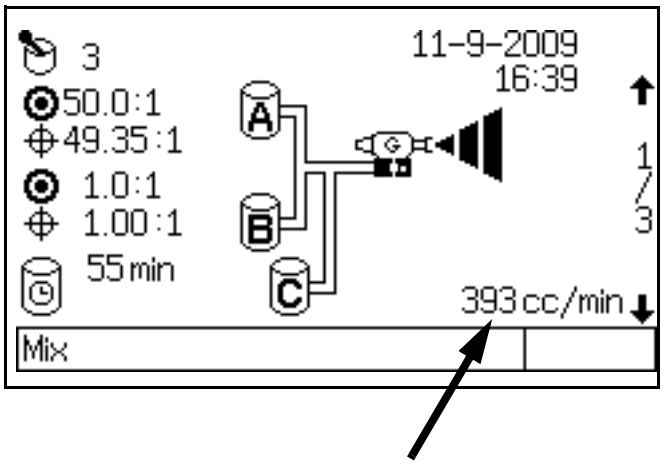

FIG. 55. Status Screen Flow Rate Display

    Watch the fluid flow rate displayed on the Status screen while the gun is fully open. Verify that the flow rate of components A, B, and C are within 10% of each other.

    If the fluid flow rate is too low: increase air pressure to component A, B, and C fluid supplies or increase the regulated fluid pressure.

    If the fluid flow rate is too high: reduce the air pressure, close the fluid manifold dose valves further, or adjust the fluid pressure regulator.

NOTE: Pressure adjustments of each component will vary with fluid viscosity. Start with the same fluid pressure for component A, B, and C, then adjust as needed.

NOTICE

Do not use the first 4-5 oz. (120-150 cc) of material as it may not be thoroughly mixed due to alarms while priming the system.

12. Turn on atomizing air to the gun. Check the spray pattern as instructed in your spray gun manual.

NOTICE

Do not allow a fluid supply tank to run empty. It is possible for air flow in the supply line to turn gear meters in the same manner as fluid. This can lead to the proportioning of fluid and air that meets the ratio and tolerance settings of the equipment. This can further result in spraying uncatalyzed or poorly catalyzed material.

Shutdown

Overnight Shutdown

1. Leave the power on.
2. Run Recipe 0 to purge solvent through meters and gun.

Service Shutdown

1. Follow **Pressure Relief Procedure** on page 52.
2. Close main air shutoff valve on air supply line and on ProMix.
3. Shut OFF the Power Switch on the EasyKey and on the Power Supply Module (0 position). FIG. 56.
4. If servicing the EasyKey or Power Supply Module, also shut off power at main circuit breaker.

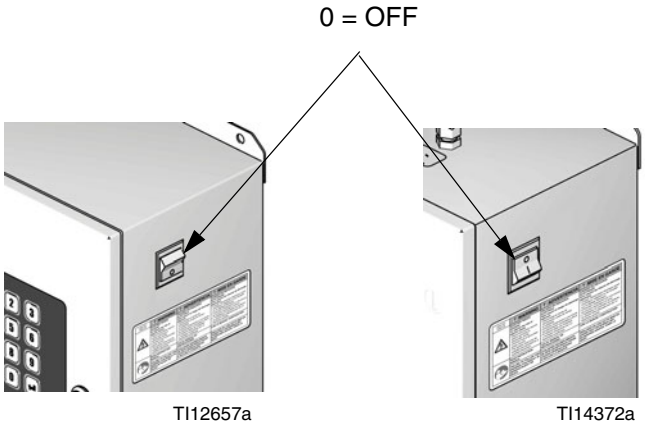

FIG. 56. Power Switch

Pressure Relief Procedure

NOTE: The following procedures relieve all fluid and air pressure in the ProMix 3KS system. Use the procedure appropriate for your system configuration.

Relieve pressure when you stop spraying, before changing spray tips, and before cleaning, checking, or servicing equipment.

Single Color Systems

1. While in Mix mode (gun triggered), shut off the A, B, and C fluid supply pumps/pressure pots. Close all fluid shutoff valves at the pump outlets.
2. With the gun triggered, push the manual override on the A, B, and C dose valve solenoids to relieve pressure. See FIG. 57.

   NOTE: If a Dose Time alarm (E-7, E-8) occurs, clear the alarm.
3. Do a complete system purge, following the instructions under **Purging Using Recipe 0**, page 59.
4. Shut off the fluid supply to the solvent purge valve (SPV) and the air supply to the air purge valve (APV), FIG. 60.
5. With the gun triggered, push the manual override on the A, B, and C purge valve solenoids to relieve air and solvent pressure. See FIG. 57. Verify that solvent pressure is reduced to 0.

   NOTE: If a Purge Volume alarm (E-11) occurs, clear the alarm.

Systems with Color Change and without Dump Valves

NOTE: This procedure relieves pressure through the sampling valve.

1. Complete all steps under **Single Color Systems**, page 52.
2. Close the A side shutoff valve (SVA), FIG. 60. Open the A side sampling valve (RVA).
3. Direct the A side sampling tube into a waste container.
4. See FIG. 59. Open the color change module. Using the solenoid identification labels as a guide, press and hold the override button on each color solenoid until flow from the sampling valve stops.
5. Press and hold the solvent solenoid override until clean solvent comes from the sampling valve, then release.
6. Shutoff the solvent supply to the color change stack solvent valve.
7. Press and hold the solvent solenoid override until solvent flow from the sampling valve stops.
8. Open the A side shutoff valve (SVA), FIG. 60. Close the A side sampling valve (RVA).

Systems with Color/Catalyst/Component C Change and Dump Valves

NOTE: This procedure relieves pressure through the dump valves.

1. Complete all steps under **Single Color Systems**, page 52.
2. Shut off all color/catalyst/component C supplies to the valve stacks.
3. Press and hold the dump valve A solenoid override, FIG. 57.
4. See FIG. 59. Open the color change module. Using the solenoid identification labels as a guide, press and hold the override button on each color solenoid until flow from dump valve A stops.
5. Press and hold the dump valve B solenoid override, FIG. 57.
6. See FIG. 59. Using the solenoid identification labels as a guide, press and hold the override button on each catalyst solenoid until flow from dump valve B stops.
7. Press and hold the dump valve C solenoid override, FIG. 57.
8. See FIG. 59. Open the color change module. Using the solenoid identification labels as a guide, press and hold the override button on each color solenoid until flow from dump valve C stops.
9. Press and hold the dump valve A solenoid override, FIG. 57.
10. Press and hold the A side (color) solvent solenoid override until clean solvent comes from the dump valve, then release.
11. Press and hold the dump valve B solenoid override, FIG. 57.
12. Press and hold the B side (catalyst) solvent solenoid override until clean solvent comes from the dump valve, then release.
13. Press and hold the dump valve C solenoid override, FIG. 57.
14. Press and hold the C side solvent solenoid override until clean solvent comes from the dump valve, then release.
15. Shutoff the solvent supply to the color/catalyst/component C change stack solvent valves.
16. Press and hold the A, B, and C solvent solenoid overrides and dump valve overrides until solvent flow from the dump valves stops.

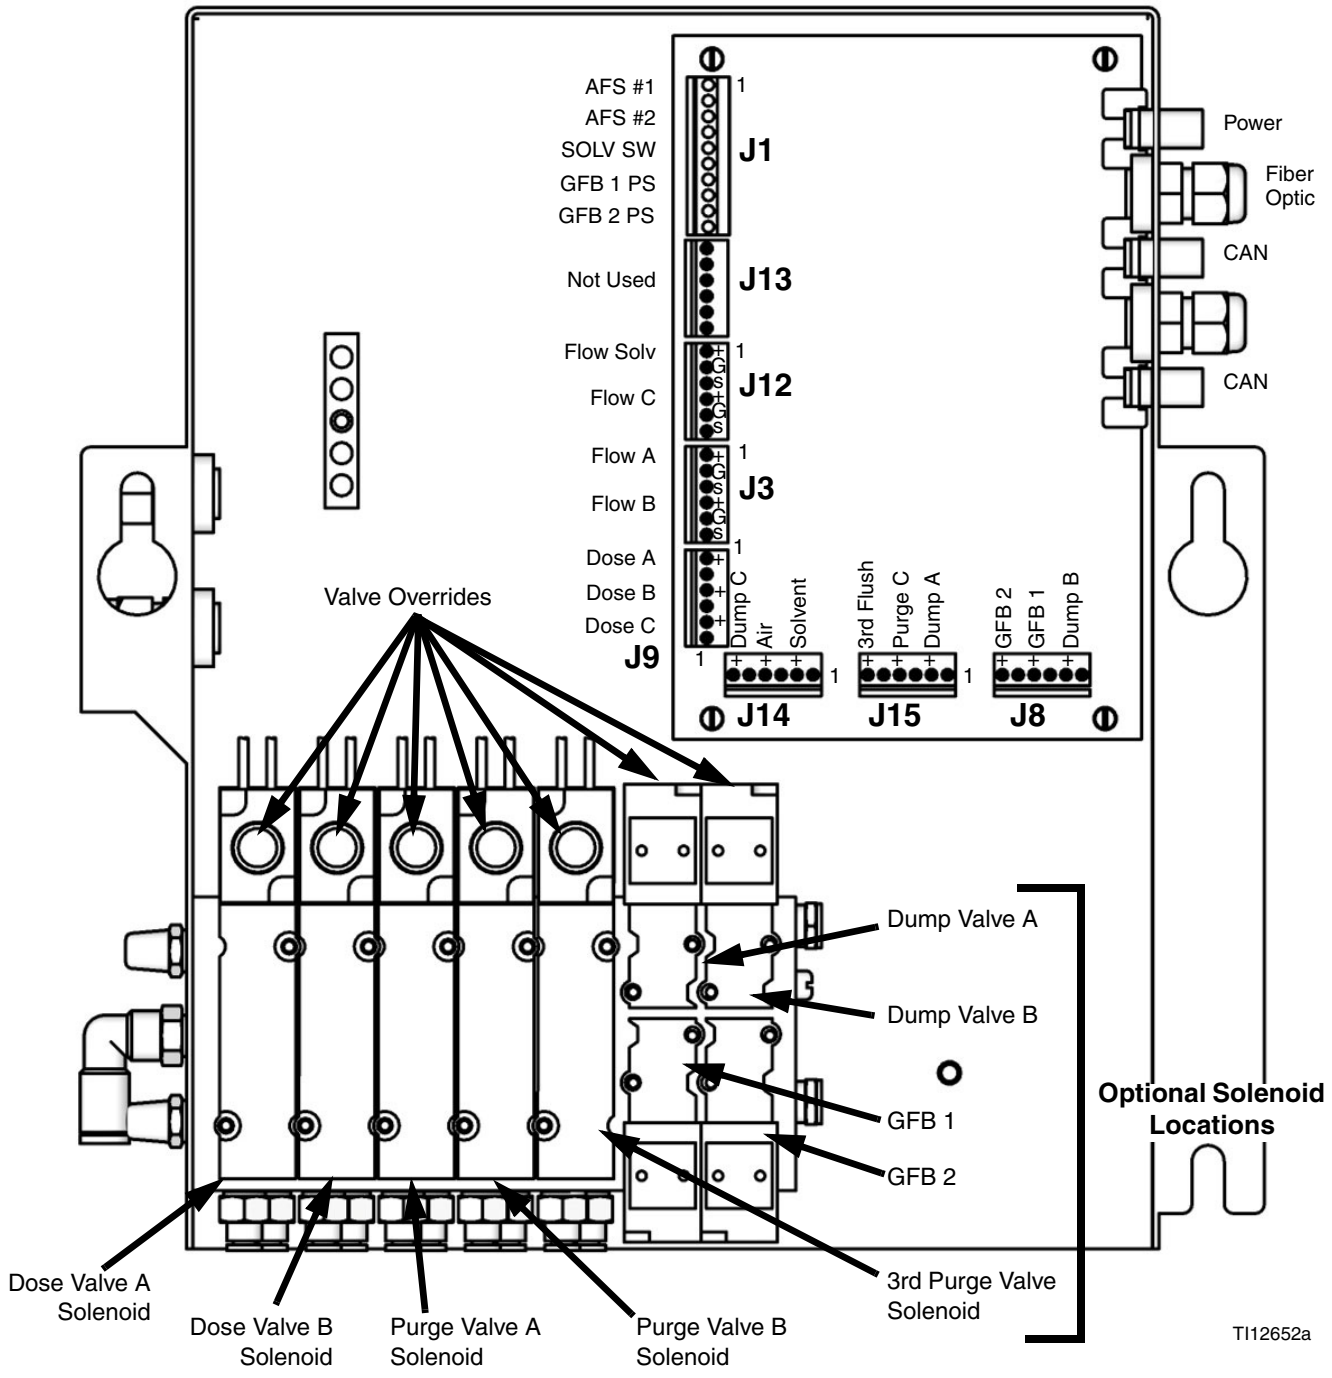

FIG. 57. Component A and B Solenoids

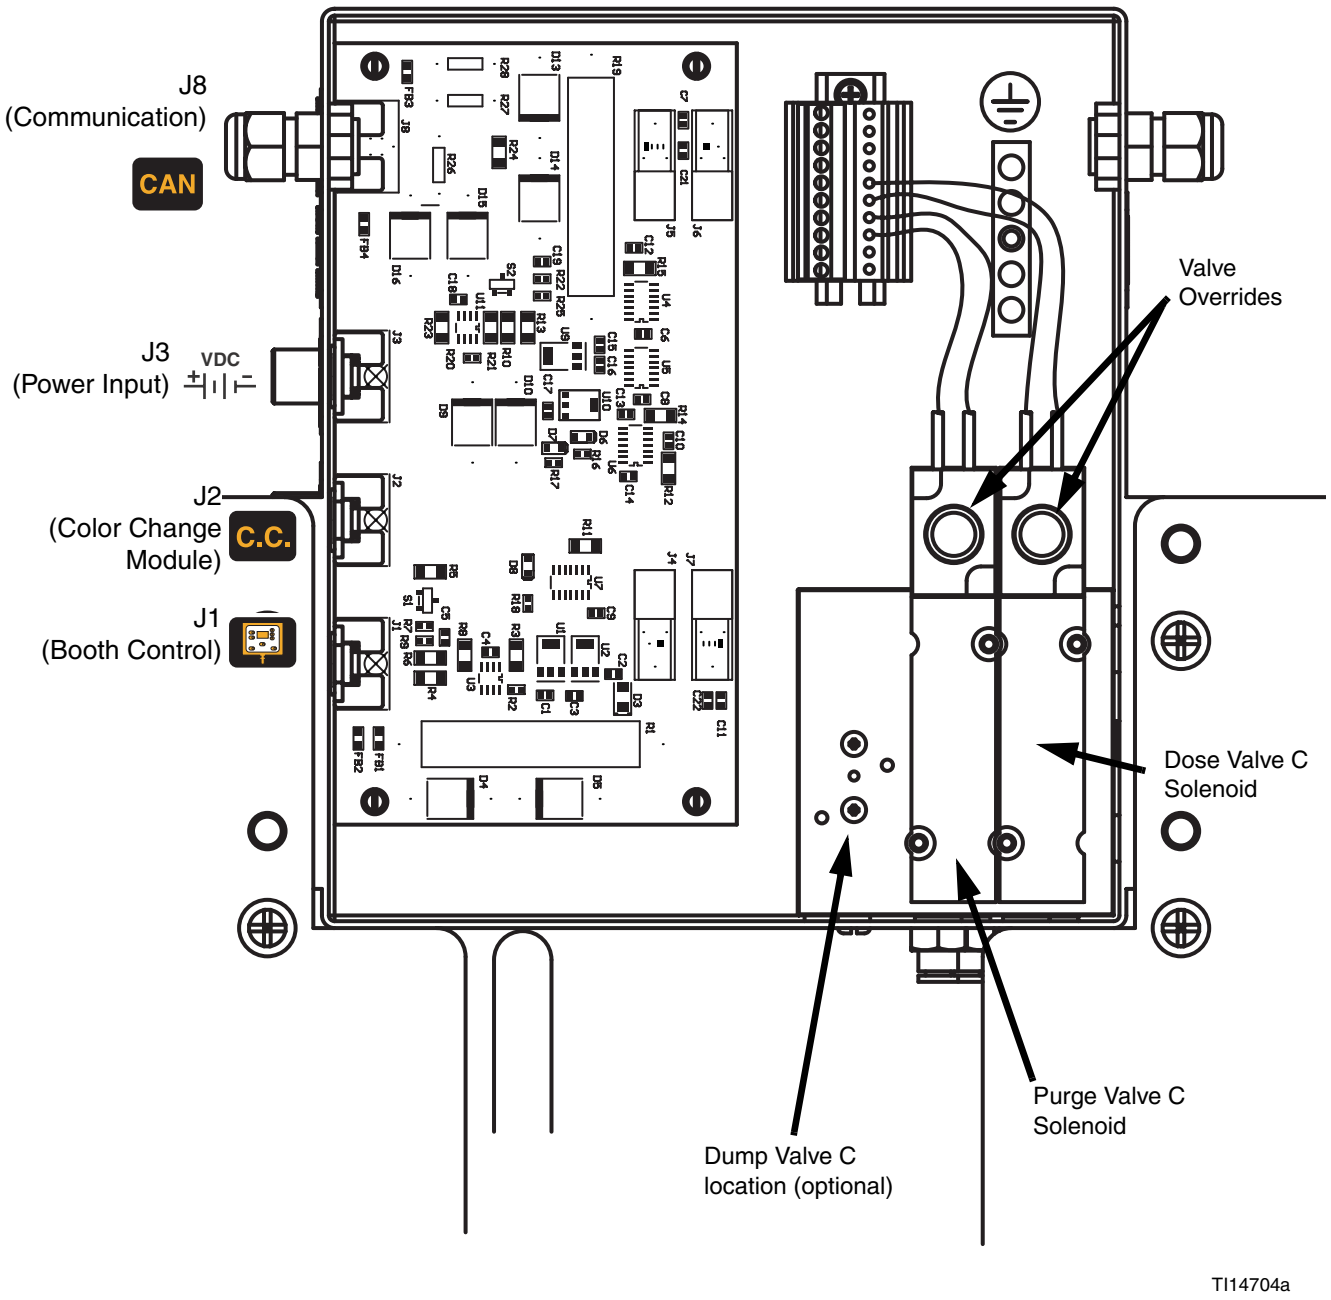

FIG. 58. Component C Solenoids

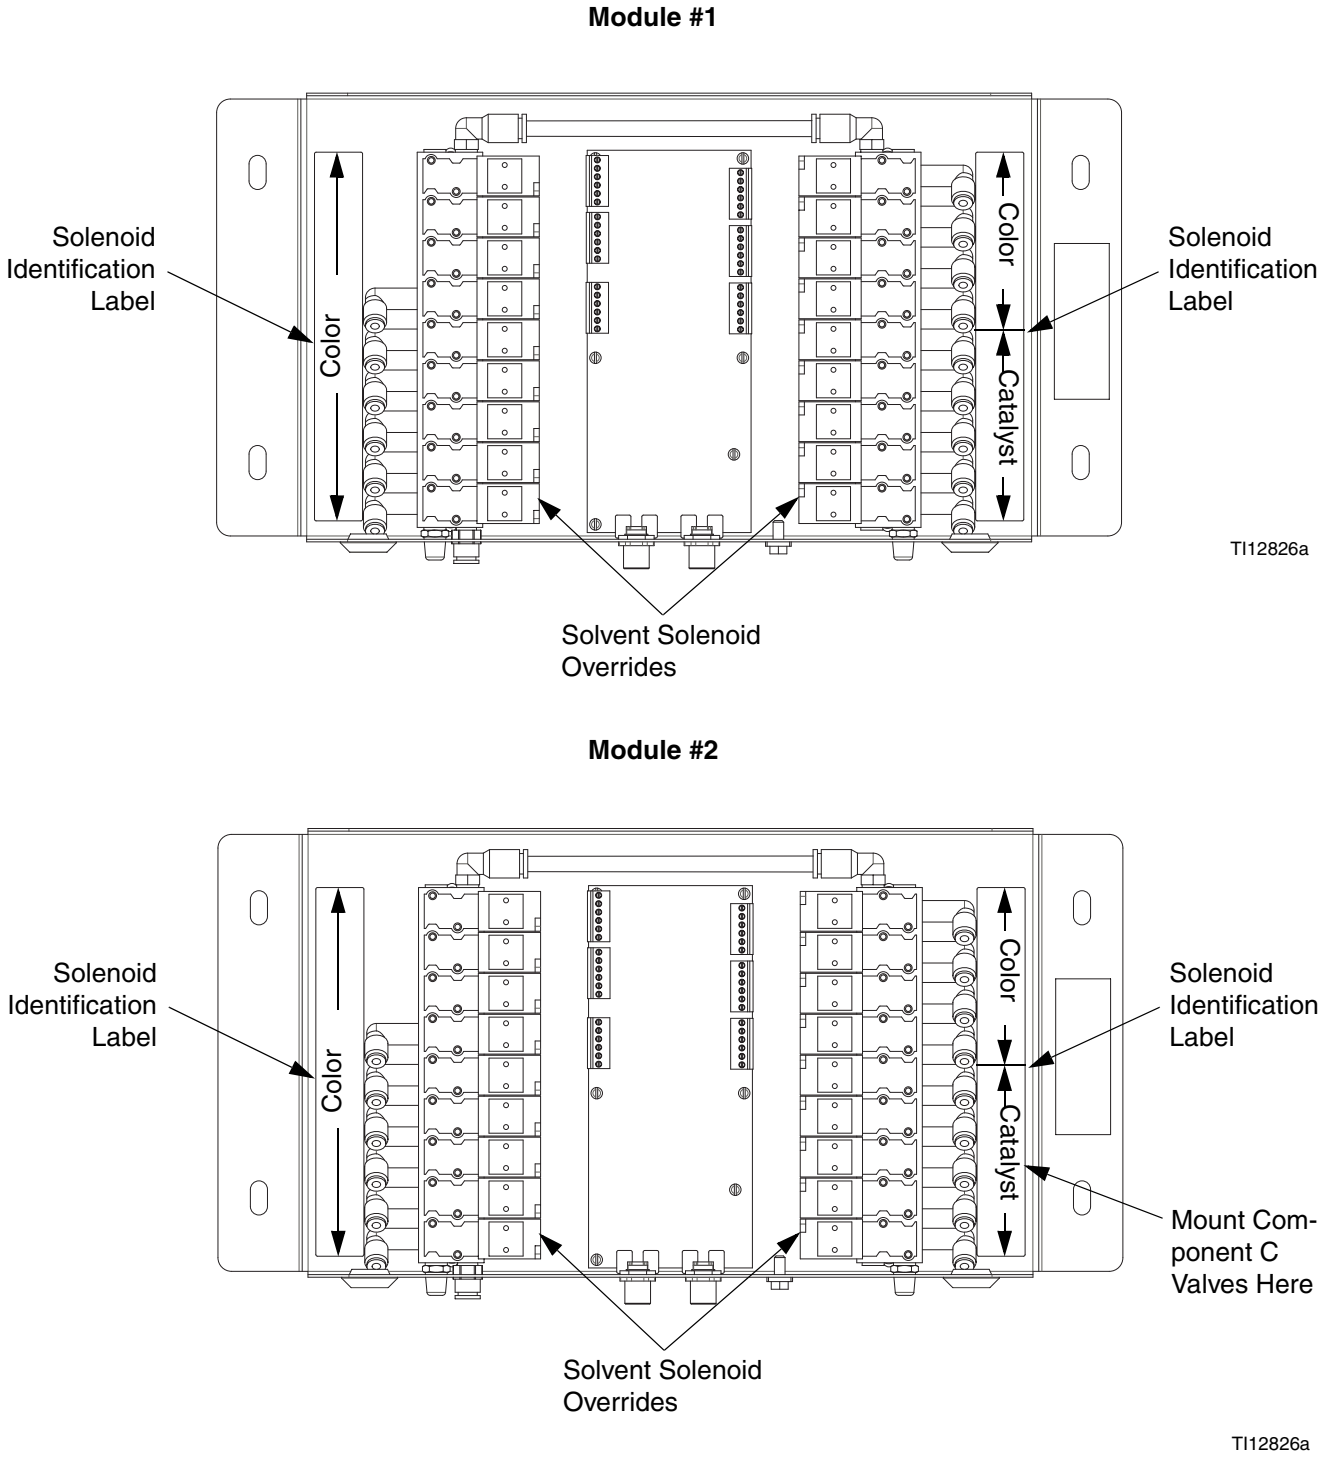

FIG. 59: Color Change Solenoids

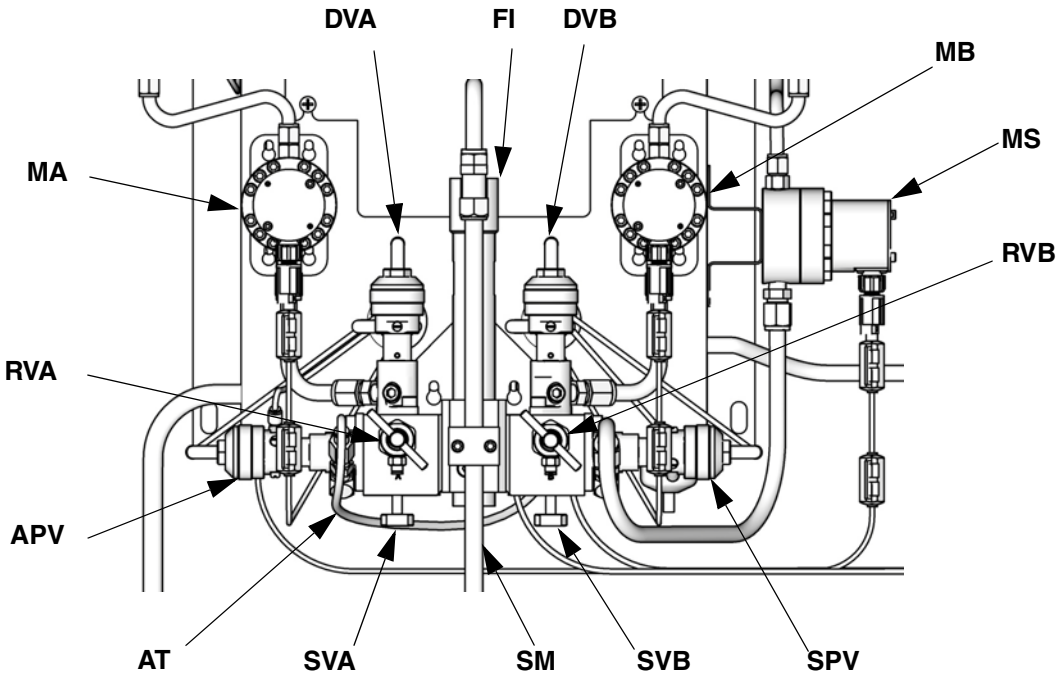

Key: ProMix 2KS Fluid Station

MA	Component A Meter	SVB	Component B Shutoff Valve
DVA	Component A Dose Valve	MS	Solvent Meter
RVA	Component A Sampling Valve	SPV	Solvent Purge Valve
SVA	Component A Shutoff Valve	APV	Air Purge Valve
MB	Component B Meter	SM	Static Mixer
DVB	Component B Dose Valve	FI	Fluid Integrator
RVB	Component B Sampling Valve	AT	Air Purge Valve Air Supply Tube

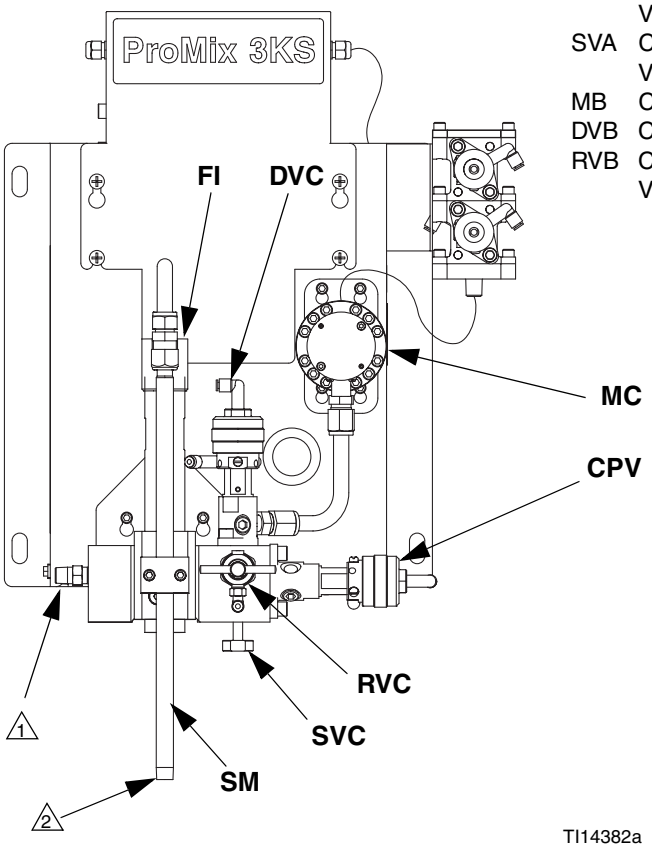

Key: ProMix 3KS Fluid Station

MC	Component C Meter
DVC	Component C Dose Valve
RVC	Component C Sampling Valve
SVC	Component C Shutoff Valve
CPV	Component C Purge Valve
SM	Static Mixer
FI	Fluid Integrator

1 3KS fluid inlet. Connect fluid supply line from 2KS fluid manifold outlet here.

2 Connect fluid supply line to gun.

FIG. 60. ProMix 2KS and ProMix 3KS Wall Mount Fluid Stations

Purging

Read **Warnings**, page 8. Follow the **Grounding** instructions in your system Installation manual.

To avoid splashing fluid in the eyes, wear eye protection.

There are 4 purging procedures in this manual:

- **Purging Mixed Material** (below)
- **Purging Using Recipe 0** (page 59)
- **Purging Fluid Supply System** (page 59)
- **Purging Sampling Valves and Tubes** (page 61)

Use the criteria listed in each procedure to determine which procedure to use.

Purging Mixed Material

There are times when you only want to purge the fluid manifold, such as:

- end of potlife
- breaks in spraying that exceed the potlife
- overnight shutdown
- before servicing the fluid manifold assembly, hose or gun.

In the first stage fluid manifold (2KS), solvent purges the component B (catalyst, right) side of the mix manifold and the inner tube of the integrator. Air purges the component A (resin, left) side and the outer tube of the integrator. This air/solvent chop purges the hose connecting the 2KS static mixer to the 3KS fluid manifold.

In the second stage fluid manifold (3KS), solvent purges the component C (right) side of the mix manifold and the inner tube of the integrator. The air/solvent chop from the 2KS purges the left side of the 3KS fluid manifold and the outer tube of the 3KS integrator.

1. Press the Standby key on the Booth Control.

Trigger the gun to relieve pressure. If you are using a high pressure gun, engage the trigger lock. Remove spray tip and clean tip separately.

If using an electrostatic gun shut off the electrostatics before flushing the gun.

2. Set the solvent supply pressure regulator at a pressure high enough to completely purge the system in a reasonable amount of time but low enough to avoid splashing or an injection injury. Generally, a setting of 100 psi (0.7 MPa, 7 bar) is sufficient.

3. If using a gun flush box, place the gun into the box and close the lid. Press the Purge key on the Booth Control. The purge sequence automatically starts.

   If the gun flush box is not used, trigger the gun into a grounded metal pail until the purge sequence is complete.

   When done purging, the Booth Control automatically switches to Standby mode.

   NOTE: After doing a purge, press the Mix key once. The system will do a mixed material fill sequence, then go to Standby. Press again to start Mix mode.

4. If the system is not completely clean, repeat step 3.

   NOTE: If necessary, adjust purge sequence so only one cycle is required.

Trigger the gun to relieve pressure. Engage trigger lock.

5. If spray tip was removed, reinstall it.

6. Adjust the solvent supply regulator back to its normal operating pressure.

Purging Using Recipe 0

Recipe 0 is typically used:

- in multiple color systems to purge out material lines without loading a new color
- at the end of a shift to prevent hardening of catalyzed material.

To setup Recipe 0, go to Advanced Setup. Select the Recipe tab and change the Recipe to 0. The Recipe 0 Setup Screen appears. Set the chop times from 0-999 seconds in increments of 1 second.

1. Press the Standby key on the Booth Control.



Trigger the gun to relieve pressure.

If you are using a high pressure gun, engage the trigger lock. Remove spray tip and clean tip separately.



If using an electrostatic gun shut off the electrostatics before flushing the gun.

2. If using a gun flush box, place the gun into the box and close the lid.
3. Select Recipe 0 and press Enter.
4. If a gun flush box is not used, trigger the gun into a grounded metal pail until the purge sequence is complete.

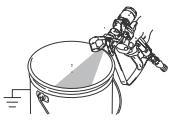

5. The color change LED blinks while Recipe 0 runs and turns solid after purge sequence is complete.
6. If the system is not completely clean, you can repeat Recipe 0 by pressing Enter.

Purging Fluid Supply System

Follow this procedure before:

- the first time material is loaded into equipment*
- servicing
- shutting down equipment for an extended period of time
- putting equipment into storage

* Some steps are not necessary for initial flushing, as no material has been loaded into the system yet.

1. Press the Standby key on the Booth Control.

Trigger the gun to relieve pressure.

If you are using a high pressure gun, engage the trigger lock. Remove spray tip and clean tip separately.



If using an electrostatic gun, shut off the electrostatics before flushing the gun.

2. Attach solvent supply lines as follows:
   - **Single color/single catalyst/single component C systems:** disconnect the component A, B, and C fluid supplies at the flow meter inlets, and connect regulated solvent supply lines.
   - **Multiple color/multiple catalyst/multiple component C systems:** connect the solvent supply lines to the designated solvent valve on the appropriate color, catalyst, or component C valve stack. Do not connect a solvent supply to any flow meter.

3. Adjust the solvent fluid supply pressure. Use the lowest possible pressure to avoid splashing.

4. Remove the Fluid Station cover to access the solenoid valves. See FIG. 57.

5. Purge as follows:

   - **Single color/single catalyst/single component C systems:** Purge component A side. Press the manual override on the Dose Valve A solenoid valve and trigger the gun into a grounded metal pail.

     Purge component B side. Press the manual override on the Dose Valve B solenoid valve and trigger the gun into a grounded metal pail until clean solvent flows from the gun.

     Purge component C side. Press the manual override on the Dose Valve C solenoid valve and trigger the gun into a grounded metal pail until clean solvent flows from the gun.

     Repeat to thoroughly clean the fluid integrator.

   - **Multiple color/multiple catalyst/multiple component C systems:** Select Recipe 0 and press Enter ↵ to purge the complete system. The color change LED blinks while Recipe 0 runs and turns solid after purge sequence is complete.

     Repeat to thoroughly clean the fluid integrator.

6. Reinstall the Fluid Station cover.

7. Shut off the solvent fluid supply.

8. Disconnect the solvent supply lines and reconnect the component A, B, and C fluid supplies.

9. See page 50 for **Start Up** procedure.

Purging Sampling Valves and Tubes

Follow this procedure after meter calibration.

1. Press the Standby key on the Booth Control.
2. See FIG. 60. Close both fluid shutoff valves and sampling valves.
3. Route the sampling tubes into a grounded waste container.
4. **On a single color system,** attach a solvent supply line to Flow Meter A inlet.
5. On the EasyKey, press the Setup key and access the Advanced Setup screens.
6. Press the Right Arrow key to select the Calibration screen. Press the Down Arrow key and select Purge from the menu. Press the Enter key.

   Dose A, solvent purge valve (B side), component C purge valve, and color change solvent valves (if used) will open.

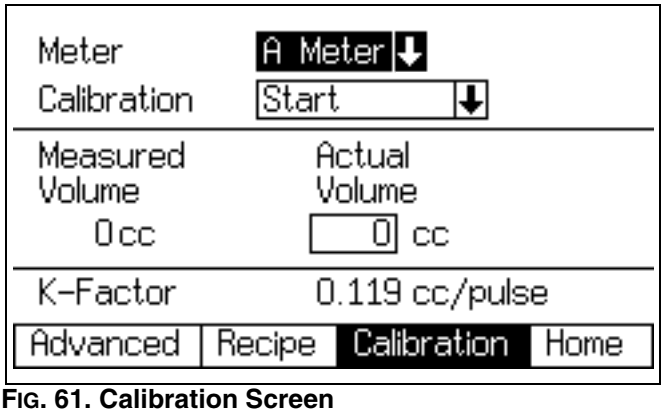

FIG. 61. Calibration Screen



7. To avoid splashing, slowly open the sampling valves and dispense solvent until the valves and tubes are clean.

   NOTE: When performing a calibration purge, the solvent valve(s) close automatically after 2 minutes or when Abort is selected on the screen.

8. Close sampling valves.

   NOTE: Select Abort on Calibration screen to cancel current calibration and close dose or purge valves.

9. Fully open both fluid shutoff valves.
10. **On a single color system,** reconnect component A fluid supply line to flow meter A.

NOTE: After calibration it is necessary to clean out contaminated mix material. Do a manual purge and resume the recipe just tested, or do Recipe 0 then go on to the next recipe.

Meter Calibration

To avoid splashing fluid in the eyes, wear eye protection. The fluid shutoff valves and ratio check valves are retained by mechanical stops that prevent accidental removal of the valve stem while the manifold is pressurized. If you cannot turn the valve stems manually, relieve the system pressure, then disassemble and clean the valve to remove the resistance.

Calibrate the meter:

- The first time the system is operated.
- Whenever new materials are used in the system, especially if the materials have viscosities that differ significantly.
- At least once per month as part of regular maintenance.
- Whenever a flow meter is serviced or replaced.

NOTE:

- K-Factors on the **Calibration Screen** are updated automatically after the calibration procedure is completed.
- K-Factor values on the screen are viewable only. If needed, you can manually edit the K-Factors in **Advanced Setup Screen 4** (page 36) or **Recipe Setup Screen 5** (page 41).
- All values on this screen are in cc, independent of the units set in **Configure Screen 1**.
- The controller will use the active recipe K-factors for meter calibration. The active recipe must be recipe 1 to recipe 60. Recipes 0 and 61 do not have K-factor values.

1. Before calibrating meter A, B, or C, prime the system with material. For a color/catalyst/component C change system, make sure the color/catalyst/component C valve is open.
2. Shut off all spray or dispense devices connected to the ProMix.
3. Close all fluid shutoff valves and sampling valves.
4. Place the beakers (minimum size - 250 cc) in holders. Put the sampling tubes into the beakers.

   NOTE: If tubes need replacing, use 5/32 in. or 4 mm OD tubing.
5. On the EasyKey, press the Setup key to access setup screens.
6. Press the Right Arrow key to select the **Calibration Screen**. Press the Enter key to select either Dose Valve A, B, C, or Solvent. Press the Down Arrow key and select Start from the menu. Start only one at a time.

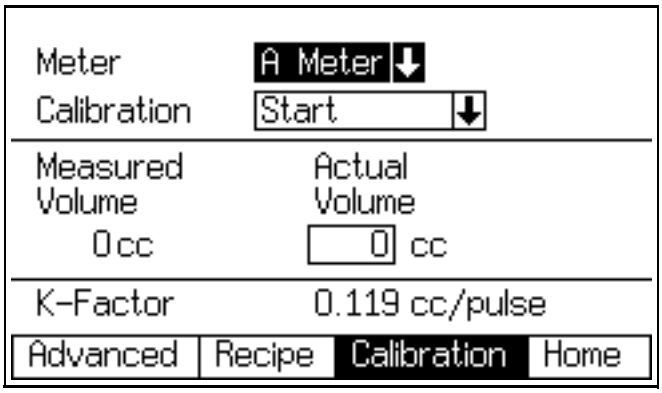

7. Dispense component A, B, C, or Solvent into beaker.

   a. To avoid splashing, slowly open sampling valves.

   b. For more accurate calibration, adjust the valve to dispense at a flow rate similar to your production spray flow rate.

   c. Dispense a minimum of 250 cc; make sure enough material is dispensed to accurately read the volume with your beaker. The volumes do not have to be equal or at any particular ratio.

   d. Close sampling valve tightly.

8. The volume that the ProMix measured displays on the EasyKey.

9. Compare the amounts on the EasyKey to the amount in the beakers.

   NOTE: For maximum accuracy, use a gravimetric (mass) method to determine the actual volumes dispensed.

10. If the screen and actual volumes are different, enter the actual dispensed volume in cc for A, B, C, or Solvent Volume field, and press the Enter ↵ key.

    If the value was substantially different, repeat the calibration process.

    NOTE: If the screen and actual volume is the same or if for any reason you want to cancel the calibration procedure, scroll to Abort on the **Calibration Screen** menu and press the Enter ↵ key.

11. After the volume for A, B, C, or Solvent is entered, the ProMix 3KS controller calculates the new flow meter K-Factor and shows it on the **Calibration Screen**.

    NOTE: K-Factor values on the screen are viewable only. If needed, you can manually edit the K-Factors in **Advanced Setup Screen 4** (page 36) or **Recipe Setup Screen 5** (page 41).

12. Always purge sampling valves after calibrating meters. Use one of the following methods.

    - Follow the **Purging Sampling Valves and Tubes** procedure, page 61.

    - Place the sampling valve fluid tubes into a compatible cleaning fluid (TSL or solvent) or cap them.

    NOTE: If fluid hardens in sampling tubes, replace them with 5/32 in. or 4 mm OD tubing.

13. Make sure all sampling valves are closed and all fluid shutoff valves are fully open.

14. Before you begin production, clear the system of solvent and prime it with material.

    a. Go to Mix mode.

    b. Trigger the gun into a grounded metal pail until mixed material flows from the gun nozzle.

    c. To begin operation, see **Start Up**, page 50.

Color Change

Color Change Procedures

Multiple Color Systems

1. Shut off air to the gun.
2. Place the gun in the gun flush box if used, and close the lid.
3. Switch to Standby mode at the Booth Control.
4. Use the scroll keys, ▲ or ▼, to select the new color. Press Enter ↵ to begin the color change sequence.
5. If a gun flush box is not used, trigger the gun into a grounded metal pail until the color change sequence is complete.



6. When the color change indicator light stops flashing on the Booth Control, the color change sequence is complete.

   NOTE: The color change timer does not start until the gun is triggered and fluid flow is detected. If no flow is detected within 2 minutes, the color change operation aborts. The Booth Control enters Standby mode at the previous color.

7. When you are ready to spray, remove the gun from the gun flush box if used, and close its door.

   NOTE: The gun flush box door must be closed for the atomizing air valve to open.

8. Press the Mix key to start spraying.

Single Color Systems

1. Follow procedure for **Purging Fluid Supply System**, page 59.
2. Load the new color. See **Start Up**, page 50.
3. Press the Mix key to start spraying.

Color Change Sequences

FIG. 62 through FIG. 71 illustrate various color change sequences. See Table 8 to determine which figure to reference, based on the recipe change and system configuration. The time sequences are detailed in the following paragraphs.

NOTE: See **Setup Mode** on page 25 to select purge sources and set desired purge, chop, and fill times.

NOTES:

- The system uses old recipe data for the purge cycle. However, it opens the new color/catalyst valve based on the new recipe data.
- The system uses the new recipe data for the fill cycle.
- For the one gun flush box (GFB) option, the spray gun must be inserted in the GFB during the entire color change cycle (purge and fill). The GFB trigger output will be on during the recipe change cycle.
- For the two gun flush box (GFB) option, both spray guns must be inserted in the GFBs during the entire color change cycle (purge and fill). The system will turn each GFB trigger output on and off based on the preset time for each gun.
- For Special Outputs options, the system will turn each output on and off based on the preset times. Each Special Output has two different start times and durations.
- For systems without dump valves, the First Purge begins after the Color/Catalyst/Component C Change steps are completed.
- Dump Valve B is required for a Catalyst Change system.
- Dump Valve C is required for a Component C Change system.
- When going from Recipe X to Recipe 0, only the purge cycle data from Recipe 0 is used.
- When going from Recipe 0 to Recipe X, only the fill cycle data from Recipe X is used.

Color Purge/Dump

- This sequence flushes out the color with solvent, from the color valve to the Dump A valve.
- The color change solvent valve and the Dump A valve open during the Purge Time.
- The color change solvent valve closes when the Purge Time expires.

Color Fill

- This sequence fills the line with the new color all the way to the Dump A valve.
- The new color valve and the Dump A valve open during the Fill Time.
- The new color valve and the Dump A valve close when the Fill Time expires.

Catalyst Purge/Dump

- This sequence flushes out the catalyst with solvent, from the catalyst valve to the Dump B valve.
- The catalyst change solvent valve and the Dump B valve open during the Purge Time.
- The catalyst change solvent valve closes when the Purge Time expires.

Catalyst Fill

- This sequence fills the line with the new catalyst all the way to the Dump B valve.
- The new catalyst valve and the Dump B valve open during the Fill Time.
- The new catalyst valve and the Dump B valve close when the Fill Time expires.

Component C Purge/Dump

- This sequence flushes out component C with solvent, from the component C valve to the Dump C valve.
- The component C change solvent valve and the Dump C valve open during the Purge Time.
- The component C change solvent valve closes when the Purge Time expires.

Component C Fill

- This sequence fills the line with the new component C all the way to the Dump C valve.
- The new component C valve and the Dump C valve open during the Fill Time.
- The new component C valve and the Dump C valve close when the Fill Time expires.

First Purge

Select the First Purge Source (air, solvent, or 3rd valve) and First Purge Time. For most applications, air is selected.

The system purges the old material from the dose valves to the gun, using only the selected purge media (usually air). The selected purge valve opens during the First Purge Time and closes when the time expires.

First Purge C

Select the First Purge C Source (solvent or water) and First Purge C Time. For most applications, solvent is selected.

The system purges the old material from the dose valves to the gun, using only the selected purge media. The purge C valve opens during the First Purge C Time and closes when the time expires.

Chop Cycle

Select the Chop Type (air/solvent or air/3rd valve) and Chop Times.

The air purge valve opens only during the air chop cycle, and the solvent (or 3rd valve) opens only during the solvent chop cycle. The number of chop cycles is determined by dividing the Total Chop Time by the sum of the Air and Solvent Chop Times.

Final Purge

Select the Final Purge Source (air, solvent, or 3rd valve) and Final Purge Time. For most applications, solvent is selected.

The system fills the line with solvent from the dose valves to the gun, using only the selected purge media (usually solvent). The selected purge valve opens during the Final Purge Time and closes when the time expires.

Final Purge C

Select the Final Purge C Source (solvent or water) and Final Purge C Time. For most applications, solvent is selected.

The system fills the line with solvent from the dose valves to the gun, using only the selected purge media. The purge C valve opens during the Final Purge C Time and closes when the time expires.

Fill

This sequence fills the line from the dose valves to the gun, and is also referred to as the mixed material fill. The system begins mixing components A, B, and C until the Fill Time expires.

Purge Active

The system turns on the Purge/Recipe Change Purge Active output during these steps.

Fill Active

The system turns on the Recipe Change Fill Active output during this step.

Table 8: ProMix 3KS Color Change Chart Reference

Starting Recipe	Ending Recipe	A/B/C Change	3rd Purge Valve	Refer to Fig.
X	Y	Yes	Yes	FIG. 62
X	Y	Yes	No	FIG. 63
X	Y	No	Yes	FIG. 64
X	Y	No	No	FIG. 65
X	Y	External	Yes	FIG. 70
X	Y	External	No	FIG. 71
X	0	n/a	Yes	FIG. 66
X	0	n/a	No	FIG. 67
0 or 61	X	Yes	Yes	FIG. 68
0 or 61	X	Yes	No	FIG. 69
0 or 61	0	n/a	Yes	FIG. 66
0 or 61	0	n/a	No	FIG. 67

Recipe Change
X -> Y
A1 to A2, B1 to B2, C1 to C2
3rd Flush Valve

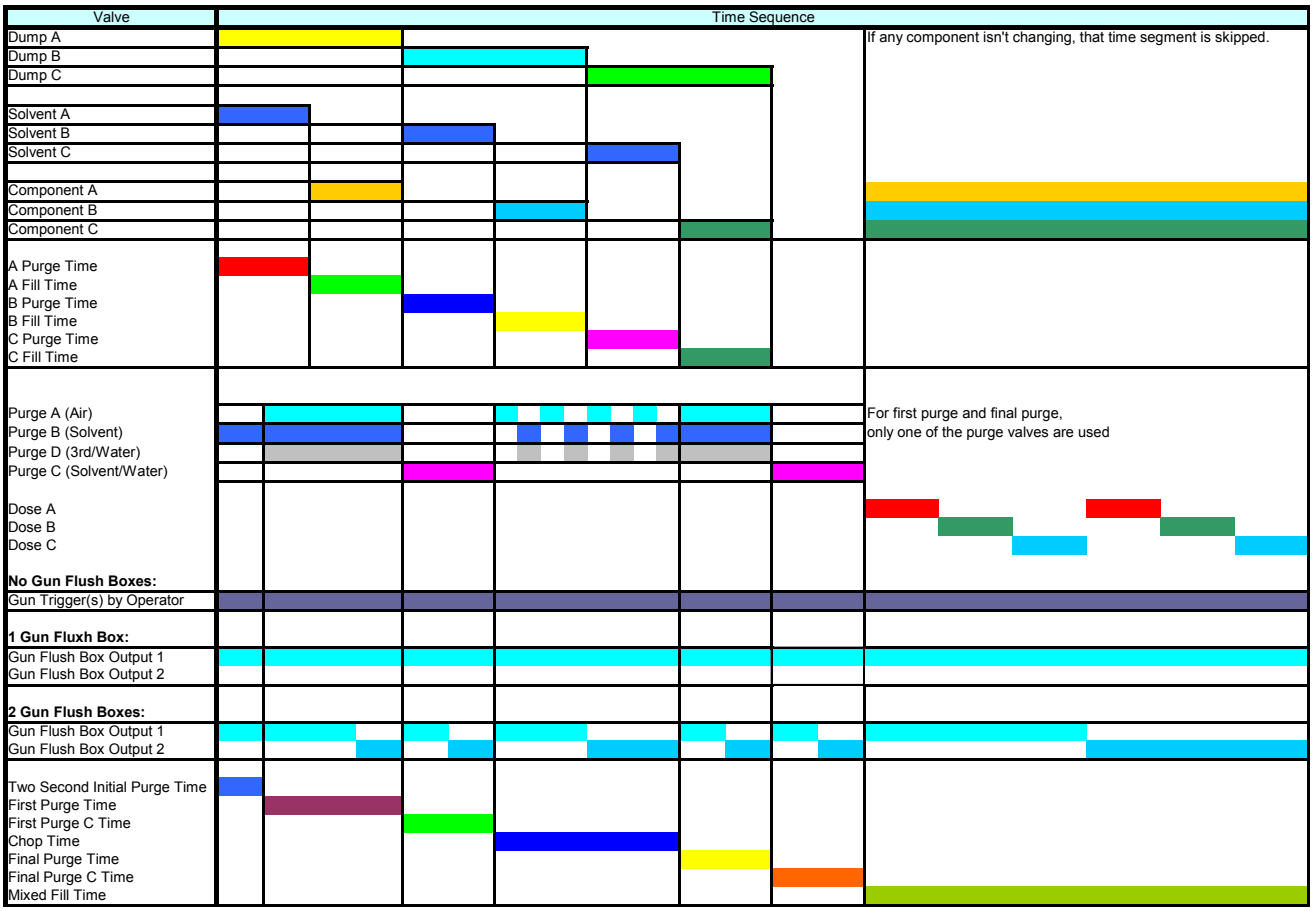

FIG. 62: ProMix 3KS Color Change Chart 1

Recipe Change
X -> Y
A1 to A2, B1 to B2, C1 to C2
No 3rd Flush Valve

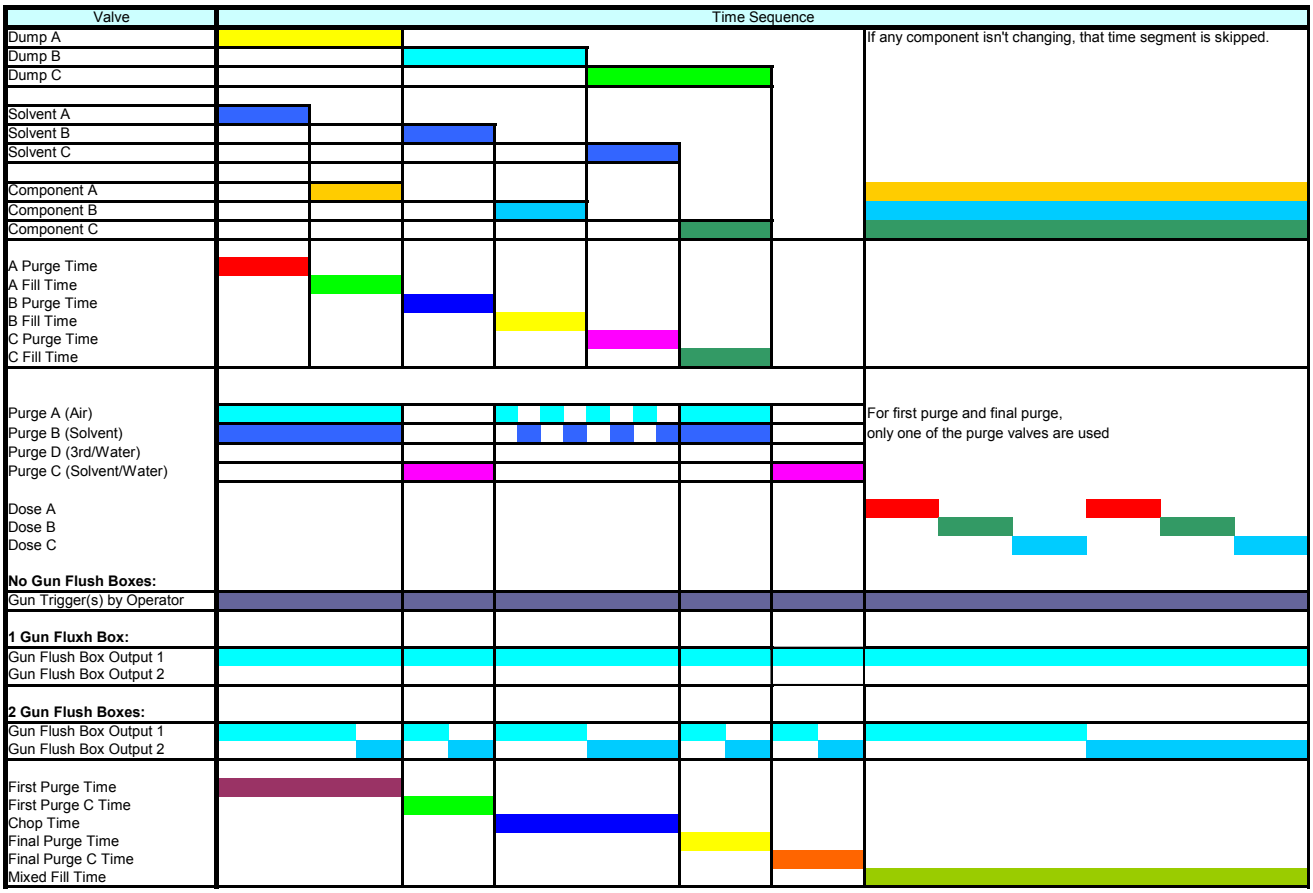

FIG. 63: ProMix 3KS Color Change Chart 2

Recipe Change
X -> Y
No components change
3rd Flush Valve

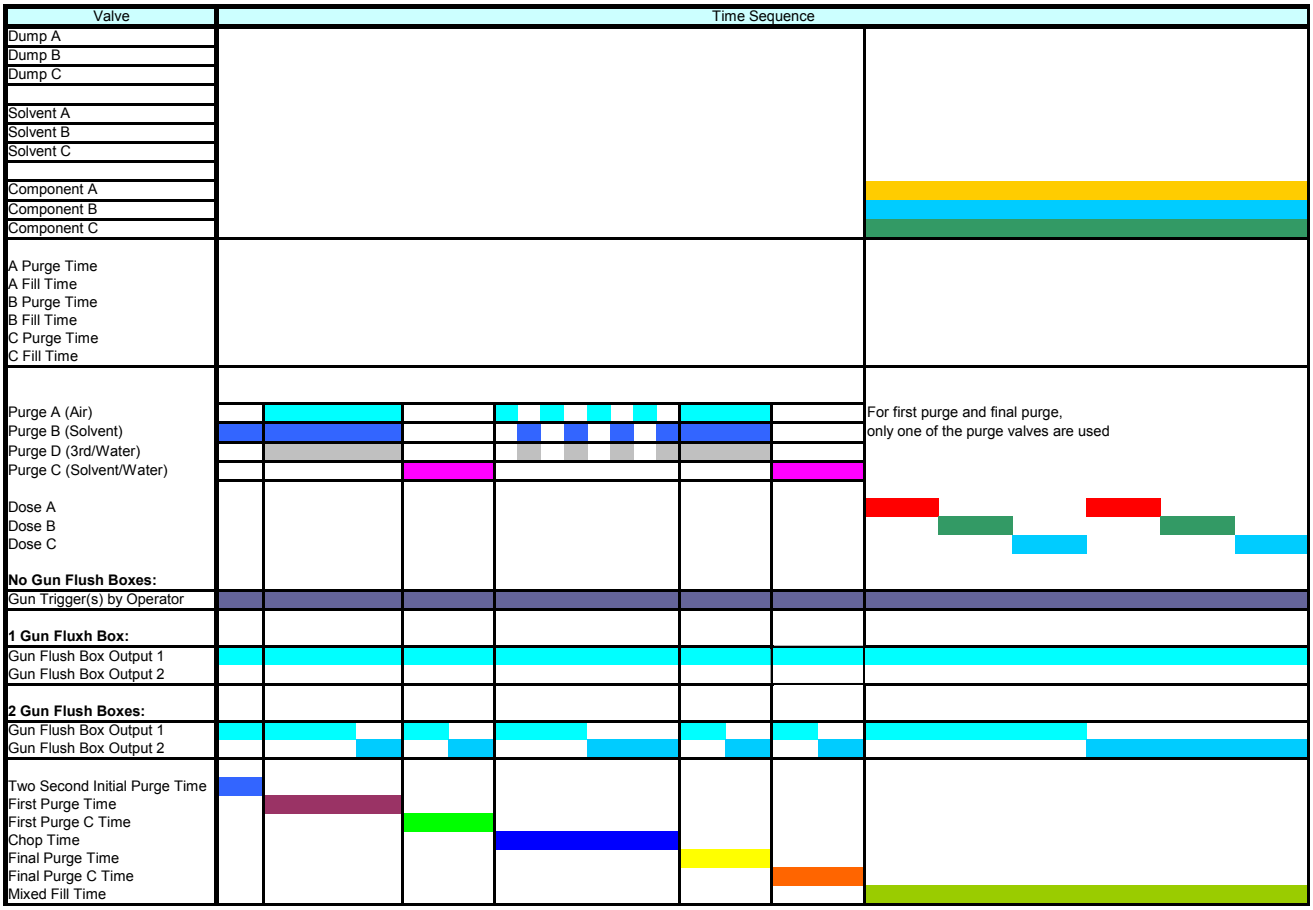

FIG. 64: ProMix 3KS Color Change Chart 3

Recipe Change
X -> Y
No components change
No 3rd Flush Valve

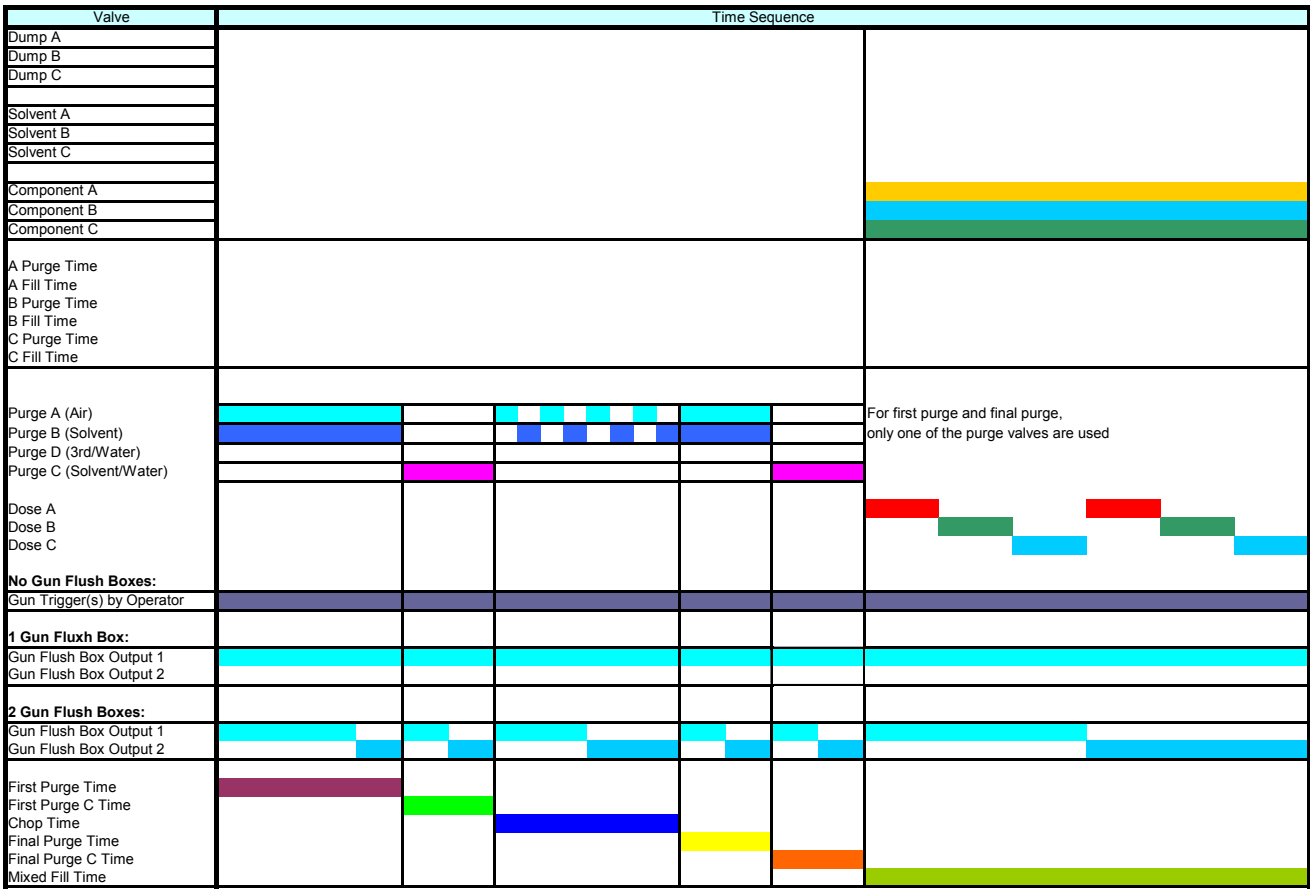

FIG. 65: ProMix 3KS Color Change Chart 4

Recipe Change
X, 0, 61 -> 0
No more A, B, C
3rd Flush Valve

FIG. 66: ProMix 3KS Color Change Chart 5

Recipe Change
X, 0, 61 -> 0
No more A, B, C
No 3rd Flush Valve

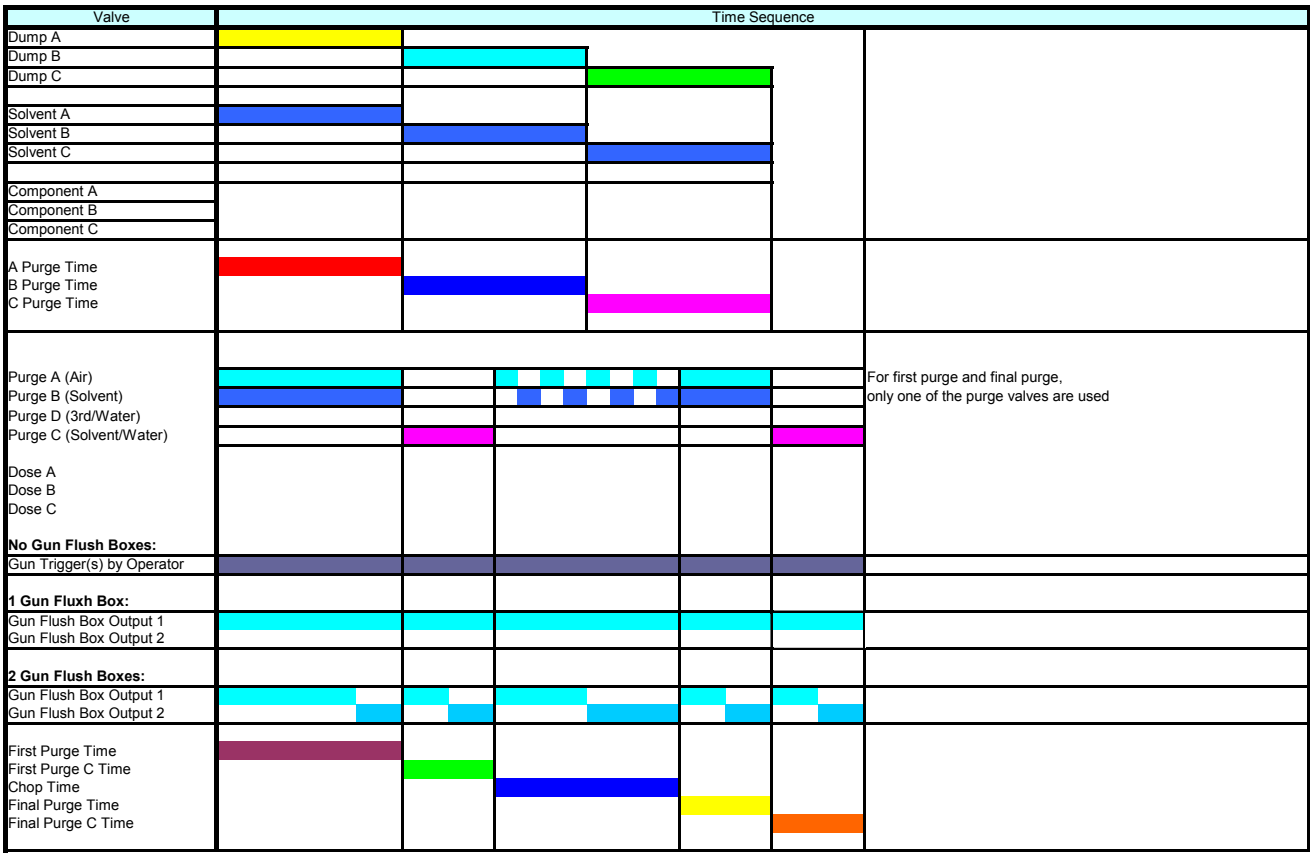

FIG. 67: ProMix 3KS Color Change Chart 6

Recipe Change
0,61 -> X
New A, B, C
3rd Flush Valve

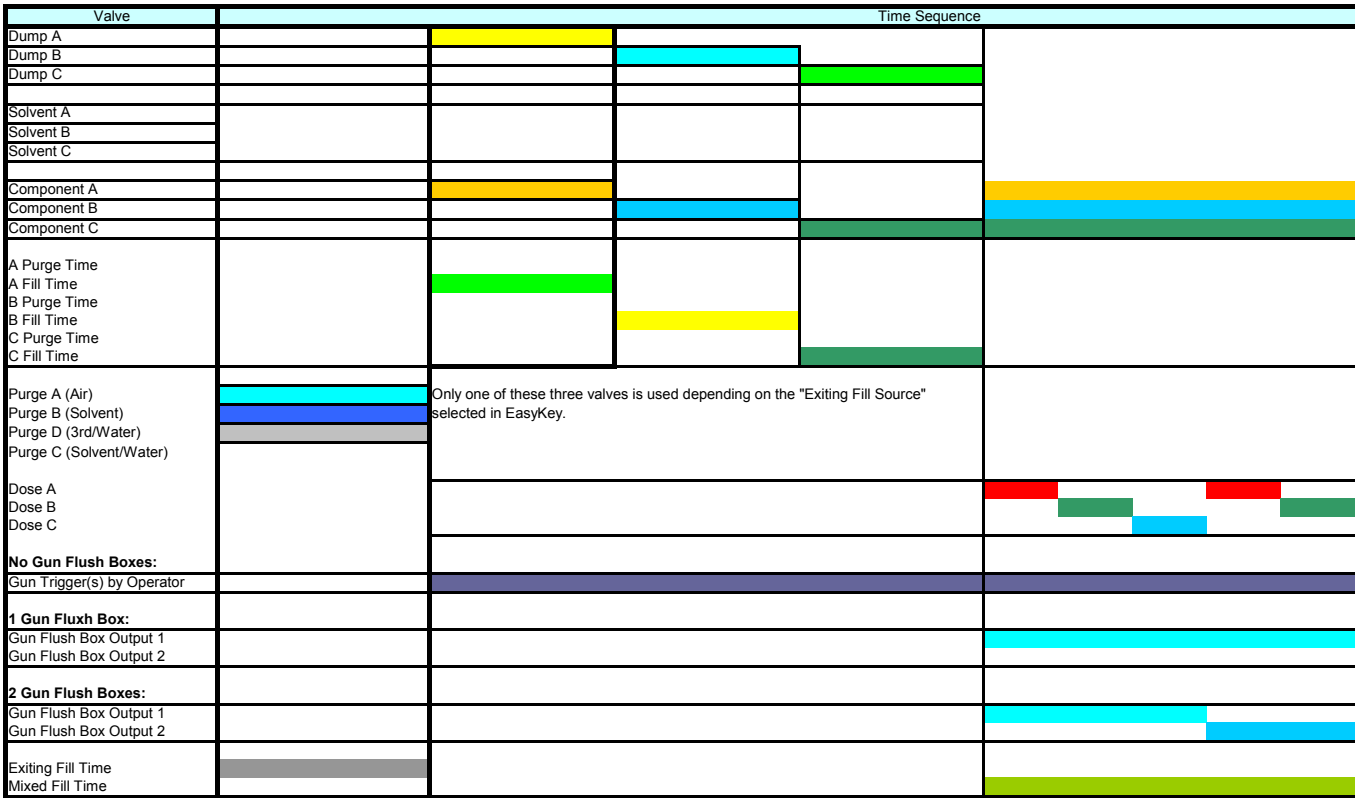

FIG. 68: ProMix 3KS Color Change Chart 7

Recipe Change
0,61 -> X
New A, B, C
No 3rd Flush Valve

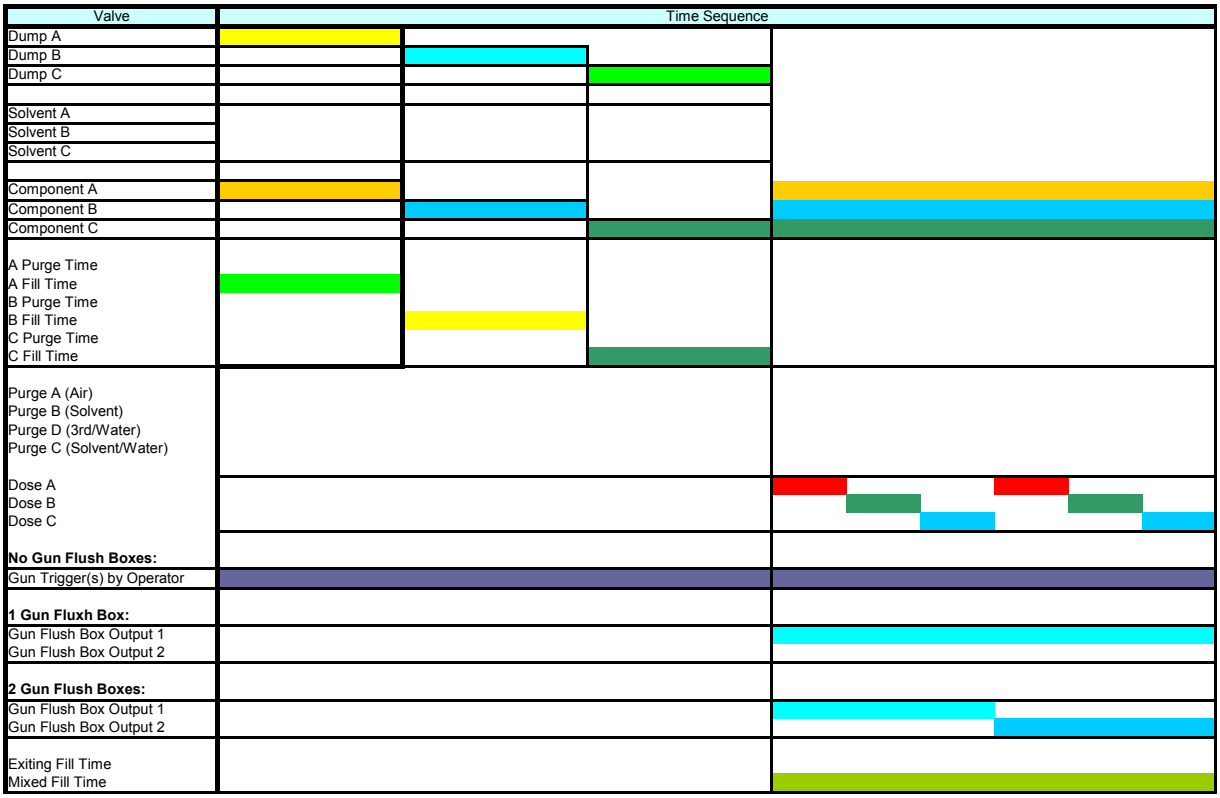

FIG. 69: ProMix 3KS Color Change Chart 8

Recipe Change
X -> Y
External Color Change
3rd Flush Valve

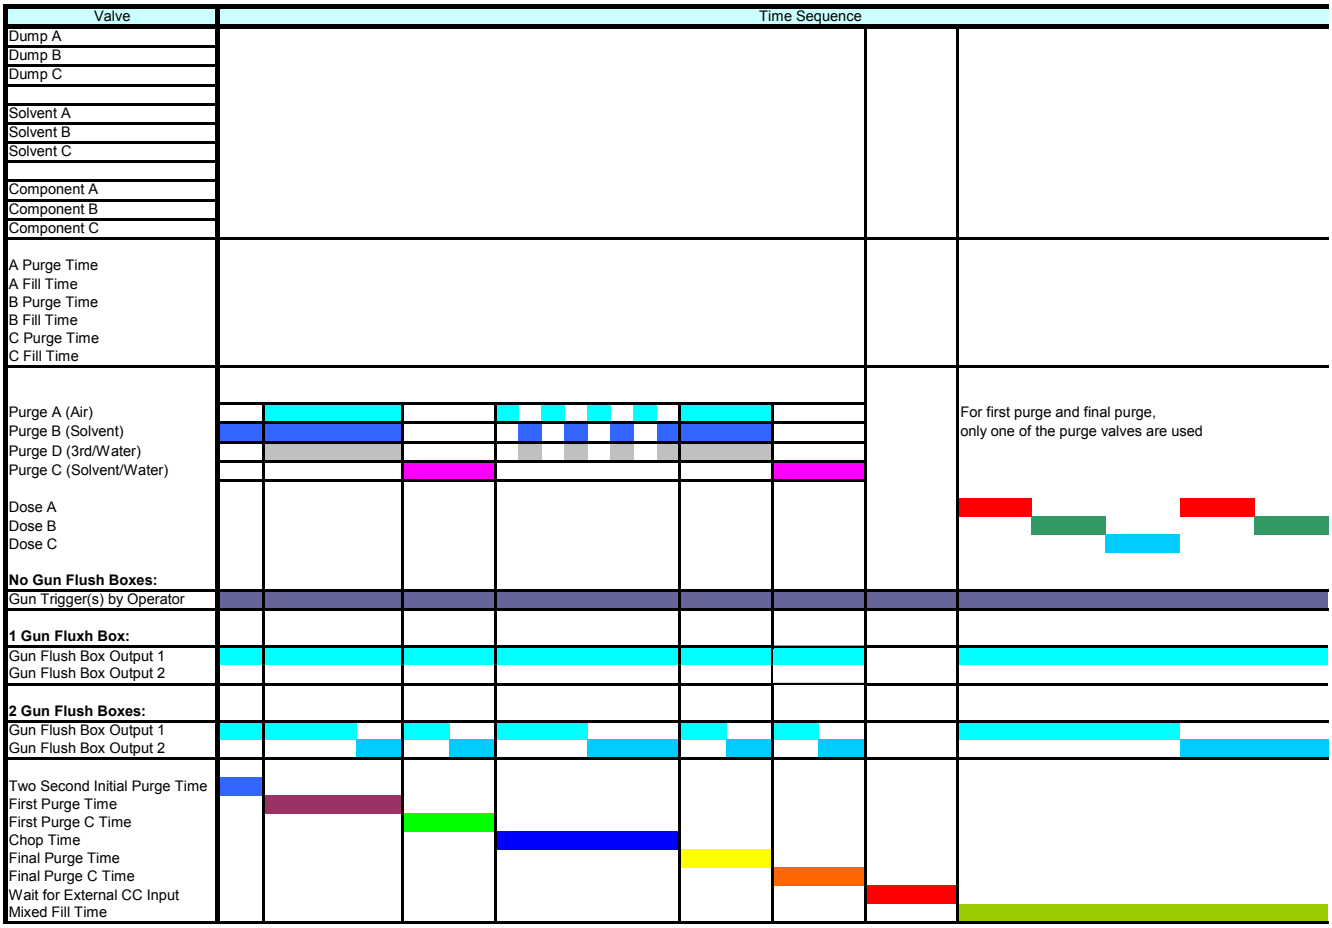

FIG. 70: ProMix 3KS Color Change Chart 9

Recipe Change
X -> Y
External Color Change
No 3rd Flush Valve

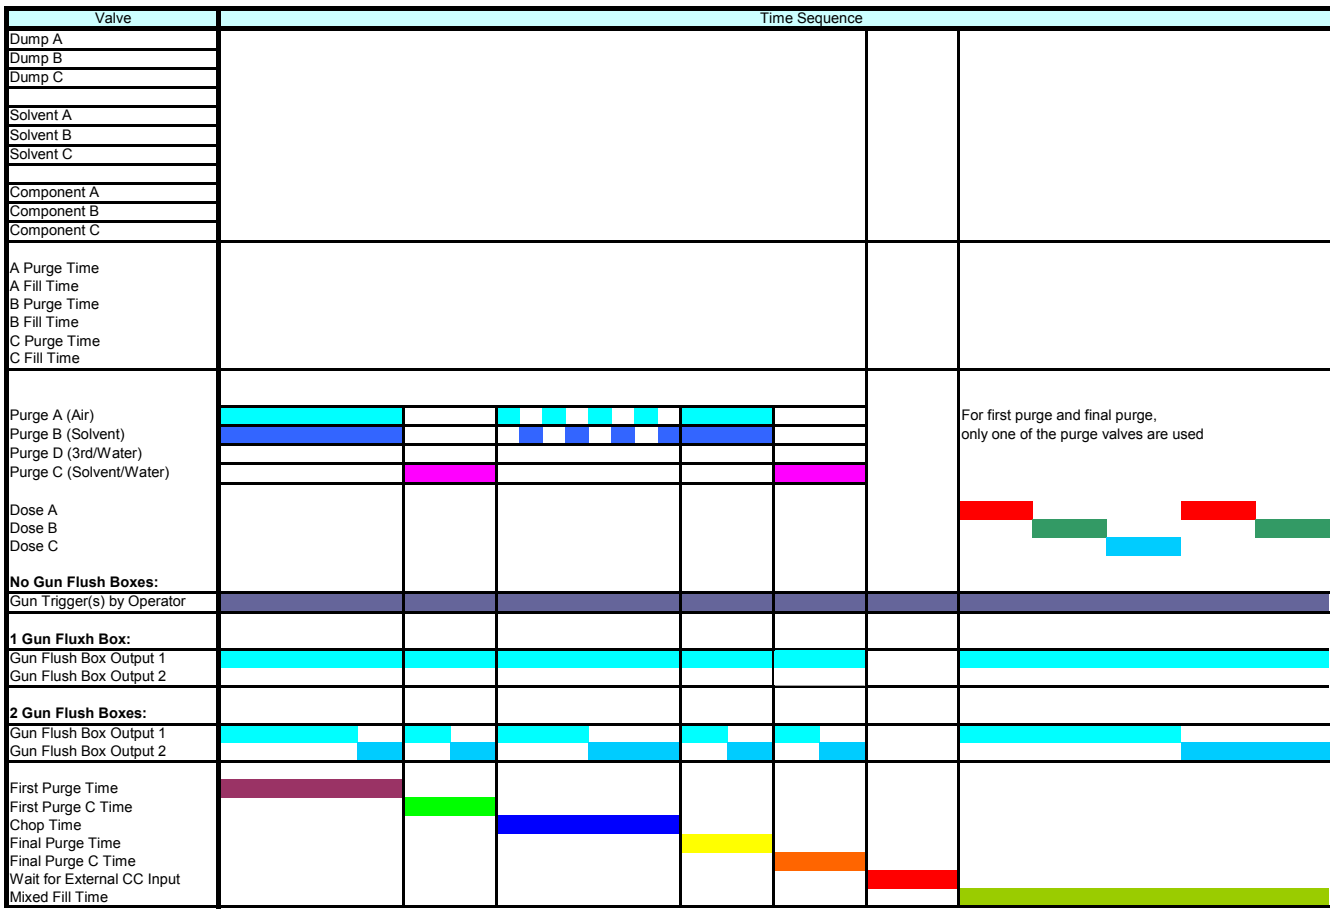

FIG. 71: ProMix 3KS Color Change Chart 10

Alarms and Warnings

NOTICE

Do not use the fluid in the line that was dispensed off ratio as it may not cure properly.

System Alarms

System alarms alert you of a problem and help prevent off-ratio spraying. If an alarm occurs, operation stops and the following occurs:

- A red LED illuminates steadily or blinks on the Booth Control.
- Booth Control displays an alarm E-Code, E-1 to E-31. See FIG. 72.
- Alarm sounds.
- Status bar on the EasyKey Display shows the alarm E-Code with a description (see Table 9).

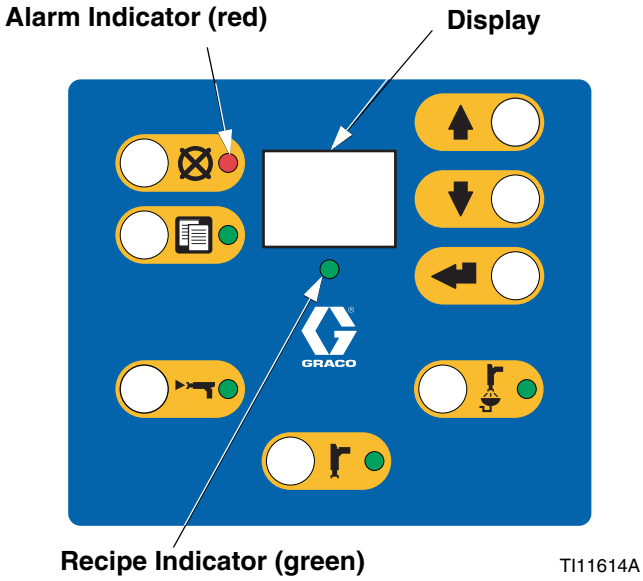

FIG. 72. Booth Control

System Warnings

Table 9 lists the System Warning Codes. Warnings do not stop operation or sound an alarm. They are saved in the date/time stamped log, which can be viewed on a PC, using the ProMix 2KS Web Interface (see manual 313386).

To Reset Alarm and Restart

NOTE: When an alarm occurs be sure to determine the E-Code before resetting it. See Table 9. If you forget which E-Code occurred, use the **Alarms Screens** (page 23) to view the last 10 alarms, with date and time stamps.

To reset alarms, see Table 10. Many alarms can be cleared by simply pressing the Alarm Reset key.

Table 9: System Alarm/Warning Codes

Code	Description	Details
E-1	Communication Error Alarm	Page 78
E-2	Potlife Alarm	Page 78
E-3	Ratio High Alarm	Page 79
E-4	Ratio Low Alarm	Page 80
E-5	Overdose A/B Dose Too Short Alarm	Page 81
E-6	Overdose B/A Dose Too Short Alarm	Page 81
E-7	Dose Time A Alarm	Page 82
E-8	Dose Time B Alarm	Page 82
E-9	Mix in Setup Alarm	Page 83
E-10	Remote Stop Alarm	Page 83
E-11	Purge Volume Alarm	Page 83
E-12	CAN Network Communication Error Alarm	Page 84
E-13	High Flow Alarm	Page 85
E-14	Low Flow Alarm	Page 85
E-15	System Idle Warning	Page 85
E-16	Setup Change Warning	Page 85
E-17	Power On Warning	Page 85
E-18	Defaults Loaded Warning	Page 85
E-19	I/O Alarm	Page 86
E-20	Purge Initiate Alarm	Page 87
E-21	Material Fill Alarm	Page 87
E-22	Tank A Low Alarm	Page 88
E-23	Tank B Low Alarm	Page 88
E-24	Tank S Low Alarm	Page 88
E-25	Auto Dump Complete Alarm	Page 88
E-26	Color/Catalyst Purge Alarm	Page 88
E-27	Color/Catalyst Fill Alarm	Page 88
E-29	Tank C Low Alarm	Page 88
E-30	Overdose C Alarm	Page 81
E-31	Dose Time C Alarm	Page 82

Alarm Troubleshooting

Table 10. Alarm Troubleshooting

E-1: COMM_ERROR	
Cause	**Solution**
No power to the EasyKey.	Connect power to EasyKey.
No power to Fluid Station. The intrinsically safe power cable between the EasyKey and Fluid Station is not connected.	Verify that the cable is correctly connected. See Installation manual.
No power to Fluid Station. The fluid control board fuse is blown.	Verify condition of fuse and replace if necessary. See Repair-Parts manual.
The fiber optic cable between the EasyKey and Fluid Station is not connected.	Verify that the cable is correctly connected. See Installation manual.
The fiber optic cable is cut or bent.	Verify that the cable has not been cut or bent at a radius smaller than 1.6 in. (40 mm).
Dirty fiber optic cable ends.	Disconnect fiber optic cable ends and clean with a lint-free cloth.
A communication cable or connector failed.	Replace cable.
E-2: POTLIFE_ALARM	
Cause	**Solution**
The potlife time has been exceeded for the mixed material. ***NOTICE*** To prevent mixed material from curing in the equipment, do not shut off power. Follow one of the solutions at right.	Press the Alarm Reset key to stop the audible alarm. Purge the system with solvent, fresh mixed material, or a new color: • **Solvent Purge -** See **Purging Mixed Material** on page 58. The system purges until the preset purge time is complete. • **New Mixed Material Purge -** Go to Mix mode and spray the required volume to restart the timer. • **Color Change -** Perform a color change, page 64.

Table 10. Alarm Troubleshooting

E-3: RATIO_HIGH_ALARM	
Sequential Dosing System The mix ratio is higher than the set tolerance on the previous dose cycle.	
Cause	**Solution**
There is too little restriction in the system.	• Check that the system is fully loaded with material. • Check that the supply pump's cycle rate is set properly. • Check that the spray tip/nozzle is properly sized for the flow and application, and that it is not worn. • Check that the fluid regulator is set properly.
If the alarm occurs during start up, after purging, the flow rate was probably too high.	Restrict gun needle travel to slow down the initial fluid delivery rate until fluid hoses are loaded with material.
If the alarm occurred after you were spraying for some time, the pressures from the fluid supplies could be unbalanced.	*A*djust component A, B, and C fluid supply regulator pressures until they are about equal. *If the pressures are already about equal,* verify that component A, B, and C dose valves are operating properly.
Slow actuation of the component A, B, or C valves. This can be caused by:	Manually operate the Dispense A, B, and C solenoid valves as instructed in the ProMix 3KS Repair-Parts manual to check operation.
• Air pressure to the valve actuators is too low.	• Increase air pressure. Air pressure must be 75-120 psi (0.52-0.84 MPa, 5.2-8.4 bar); 120 psi is recommended.
• Something is restricting the solenoid or tubing and interrupting valve actuation air.	• There may be dirt or moisture in the air supply. Filter appropriately.
• A dose valve is turned in too far.	• Refer to **Table 6: Mix Manifold Valve Settings**, page 50, for adjustment guidelines.
• Fluid pressure is high and air pressure is low.	• Adjust air and fluid pressure. See recommended air pressure above.

Table 10. Alarm Troubleshooting

E-4: RATIO_LOW_ALARM	
Sequential Dosing System The mix ratio is lower than the set tolerance on the previous dose cycle.	
Cause	**Solution**
There is too much restriction in the system.	• Check that the system is fully loaded with material. • Check that the supply pump's cycle rate is set properly. • Check that the spray tip/nozzle is properly sized for the flow and application, and that it is not clogged. • Check that the fluid regulator is set properly.
If the alarm occurs during start up, after purging, the flow rate was probably too high.	Restrict gun needle travel to slow down the initial fluid delivery rate until fluid hoses are loaded with material.
If the alarm occurred after you were spraying for some time, the pressures from the fluid supplies could be unbalanced.	*A*djust component A, B, and C fluid supply regulator pressures until they are about equal. *If the pressures are already about equal,* verify that component A, B, and C dose valves are operating properly.
Slow actuation of the component A, B, or C valves. This can be caused by:	Manually operate the Dispense A, B, and C solenoid valves as instructed in the ProMix 3KS Repair-Parts manual to check operation.
• Air pressure to the valve actuators is too low.	• Increase air pressure. Air pressure must be 75-120 psi (0.52-0.84 MPa, 5.2-8.4 bar); 120 psi is recommended.
• Something is restricting the solenoid or tubing and interrupting valve actuation air.	• There may be dirt or moisture in the air supply. Filter appropriately.
• A dose valve is turned in too far.	• Refer to **Table 6: Mix Manifold Valve Settings**, page 50, for adjustment guidelines.
• Fluid pressure is high and air pressure is low.	• Adjust air and fluid pressure. See recommended air pressure above.

Table 10. Alarm Troubleshooting

E-5: OVERDOSE_A/B_DOSE_TOO_SHORT_ALARM, E-6: OVERDOSE_B/A_DOSE_TOO_SHORT_ALARM, and E-30: OVERDOSE_C_ALARM	
E-5: the A dose overshoots and, when combined with B, is too large for the mix chamber capacity. E-6: the B dose overshoots and forces an A side dose that, when combined with B, is too large for the mix chamber capacity. E-30: the C dose overshoots and, when combined with A+B, is too large for the mix chamber capacity.	
Cause	**Solution**
Valve seal or needle/seat are leaking. Check **FIG. 11 Totals Screen** on page 23. If A, B, or C are dosing simultaneously (sequential dosing only), there is a leak.	Repair the valve (see valve manual 312782).
Sampling valve is leaking.	Tighten or replace valve.
Flow meter fluctuations caused by pressure pulsations.	Check for pressure pulsations: 1. Close all the manifold valves. 2. Turn on the circulating pumps and all the booth equipment (such as fans and conveyors). 3. Check if the ProMix 3KS is reading any fluid flow. 4. If the ProMix 3KS shows there is fluid flow and there are no leaks from the gun or any other seals or fittings, the flow meters are probably being affected by pressure pulsations. 5. Close the fluid shutoff valve between the fluid supply system and the flow meter. The flow indication should stop. 6. If necessary, install pressure regulators or a surge tank on the fluid inlets to the ProMix 3KS to reduce the fluid supply pressure. Contact your Graco distributor for information.
Slow actuation of component A, B, or C valves.	See **E-3: RATIO_HIGH_ALARM** and **E-4: RATIO_LOW_ALARM**, pages 79-80.
Running a high mix ratio and a high flow rate.	It may be necessary to restrict the flow rate through the component B or C dose valve by adjusting its hex nut (E). See page 48.

Table 10. Alarm Troubleshooting

E-7: DOSE_TIME_A_ALARM, E-8: DOSE_TIME_B_ALARM, and E-31: DOSE_TIME_C_ALARM	
E-7: gun trigger input is active (AFS or Integration) and no A meter pulses are detected during the dose time selected. E-8: gun trigger input is active (AFS or Integration) and no B meter pulses are detected during the dose time selected. E-31: gun trigger input is active (AFS or Integration) and no C meter pulses are detected during the dose time selected.	
Cause	**Solution**
System is in Mix mode and gun is only partially triggered, allowing air but no fluid to pass through gun.	Fully trigger the gun.
Fluid flow rate is too low.	Increase flow rate.
Dose time setting is too short for the current flow rate.	Increase the dose time setting.
Flow meter or cable failed or flow meter clogged.	To check meter sensor operation, remove meter cap to expose sensor. Pass a ferrous metal tool in front of the sensor. 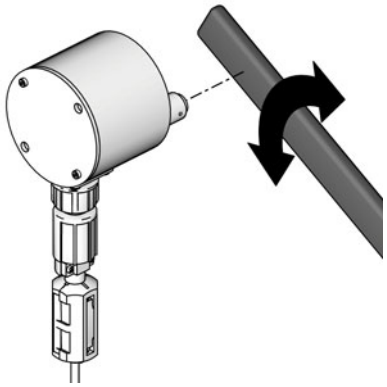 TI12792a If there is a meter or cable failure, you will see a large difference between the amount of fluid dispensed and the flow meter volume displayed by the EasyKey. Clean or repair meter as necessary. Also see meter manual 308778. Follow **Meter Calibration** procedure, page 62.
Slow actuation of component A, B, or C valves.	See **E-3: RATIO_HIGH_ALARM** and **E-4: RATIO_LOW_ALARM**, pages 79-80.
The supply pump is not turned on.	Turn on the supply pump.
There is an air leak downstream from the air flow switch.	Check the air lines for leaks and repair.
The air flow switch is stuck open.	Clean or replace air flow switch.
System is in Mix mode with 0 volume entered for Min Material Fill Volume (see **Option Screen 1**, page 32), and Fuse F1 is blown.	Verify condition of fuse and replace if necessary. See Repair-Parts manual.

Table 10. Alarm Troubleshooting

E-9: MIX_IN_SETUP_ALARM	
Cause	**Solution**
Attempt to operate system while in Setup mode.	System must be in Standby to change current recipe, and cannot be operated.
E-10: REMOTE_STOP_ALARM	
Cause	**Solution**
Automation has requested that the system abort all operations.	Abort operations. Troubleshoot automation system.
E-11: PURGE_VOLUME_ALARM	
Cause	**Solution**
ProMix 3KS solvent flow switch is not activated while purging.	Verify that the gun is not shut off and that the solvent flow switch is activated while purge is taking place.
Minimum flush volume is set too high.	Increase solvent supply or decrease minimum volume setting.
No meter pulses during Color/Catalyst Dump.	Color change solvent supply not set up or functional. Check Color Change setup.

Table 10. Alarm Troubleshooting

E-12: CAN_COMM_ERROR_ALARM	
Cause	**Solution**
Communication between the Color Change Module and the Fluid Station is interrupted.	• Verify that all cables are connected securely and that the Color Change and Booth Control power LEDs turn on. If the power LED does not turn on, the problem is probably caused by a bad connection. The nut on the connector must make at least 5 complete turns to ensure a good connection. If the power LED still does not light, the cable or board is bad.
	• Check the color change board DIP switch settings. See the ProMix 3KS installation manual.
	• Check the fluid plate board DIP switch setting. An incorrect setting will not cause E-12 alarms, but a correct setting will help prevent E-12 caused by electrical noise. See the ProMix 3KS installation manual.
	• Check EasyKey software version (displayed at power up for all versions and when the lock key is pressed for version 2.02.000 and above). If older than 1.06.002, upgrade. Be sure to save settings through BWI or AWI before upgrading, as they will be erased.
	• The sticker on the color change board shows the software part number and version, for example 15T270 1.01. If the version is older than 1.01, replace the board.
	• If all software versions and DIP switch settings are correct and you still have E-12 alarms, then the system has a bad connection, bad cable, or bad circuit board. Use a multimeter on the CAN connectors to test whether there is a good connection between systems. If there is, you have a bad circuit board. If there is not, you have a bad connector, connection, or cable.
Communication between the Color Change Module and the Fluid Station is interrupted. The fluid control board fuse is blown.	Verify condition of fuse and replace if necessary. See Repair-Parts manual.
Communication between the Booth Control and the Fluid Station is interrupted.	Verify that the cable is correctly connected.

Table 10. Alarm Troubleshooting

E-13: HIGH_FLOW_ALARM or E-14: LOW_FLOW_ALARM (may also be set as Warnings)	
Cause	**Solution**
Fluid system is producing too much or too little flow.	Troubleshoot fluid system for restrictions, leaks, exhausted fluid supply, incorrect settings, etc. Increase or decrease flow rate, as required.
E-15: SYSTEM_IDLE_WARNING	
Cause	**Solution**
Mix input is high, but the gun has not been triggered for 2 minutes.	If not painting, clear alarm and resume operation. If painting, shut down and inspect fluid meter and air flow switch.
E-16: SETUP_CHANGE_WARNING	
Cause	**Solution**
The system setup parameters have been changed.	No action required. See Event Log available through advanced web interface.
E-17: POWER_ON_WARNING	
Cause	**Solution**
The power to the system has been cycled.	No action required. See Event Log available through advanced web interface.
E-18: DEFAULTS_LOADED_WARNING	
Cause	**Solution**
The factory defaults have been installed on the system.	No action required. See Event Log available through advanced web interface.

Table 10. Alarm Troubleshooting

E-19: I/O ALARM	
Cause	**Solution**
The Mix and Purge digital inputs are on at the same time.	Ensure that only one input is on at a time. At least 1 sec delay is required when switching from Mix to Purge or vice versa.
NOTE: The I/O alarm incorporates several sub-alarms relating to internal data issues, as detailed below. These alarms may not apply to all software versions.	
Fluid Plate Reboot (FP Reboot): Occurs if the system detects a fluid plate control board reboot or power cycle not triggered from the EasyKey. The system reverts to Recipe 61, and mixed material may be in the lines.	Flush the system or perform a color change. If possible, identify the origin of the reboot or power cycle.
Autokey Lost: Occurs if the Autokey is lost or changed after having been detected. (A short term loss of the Autokey will not be registered.) Some system functions may become unavailable. For example, an automatic system will not respond to PLC or robot control.	Reinstall the Autokey, or verify that the Autokey is set properly.
Illegal Source: Occurs if a recipe outside of the range 1-60 is detected as the source data for global recipe data copies. This is possible if an invalid configuration file is sent to the EasyKey.	Verify that the source data is from a valid recipe (1-60).
2K/3K Error: Occurs if the recipe data is incompatible with the current Autokey setting (2K or 3K). This is possible if the Autokey is changed or an invalid configuration file is sent to the EasyKey.	Verify that the Autokey is set properly or that the configuration file is valid.
Init Error: Occurs if the recipe data codes specifying the type of machine they were made on are not what is expected. For example, a 3KS machine receives a configuration file originally made on a 2KS machine.	Verify that the configuration file is valid.
Config Error: Occurs if a configuration file sent to the EasyKey specifies a different hardware setup than what exists. For example, the configuration file specifies 2 color change boards but only 1 is present.	Verify that the configuration file specifications and the hardware conform.
Range Error: Occurs if a valve used in a recipe is not present in the current hardware setup. For example, a recipe calls for valve 30 but the system has only 12 valves.	Verify that the recipe specifications and the hardware conform.
Level Control (LC) Error: Occurs if level control data is received by the EasyKey, and the current Autokey setting (2K or 3K) has changed since the level control data was originally initialized.	Verify that the Autokey is set properly.
Level Control (LC) Range Error: Occurs if level control data includes a valve range exceeding the capability of the machine.	Set level control data correctly.
Modbus (MB) Overflow: Occurs if the Modbus connection to a PLC experiences data overflow.	Verify the Modbus protocol to the EasyKey.

Table 10. Alarm Troubleshooting

E-20: PURGE_INITIATE_ALARM	
Cause	**Solution**
System detects atomizing air to the gun when purge is selected.	Shut off gun air.
For systems with a gun flush box, gun is not in the box when purge is selected.	Place gun in gun flush box. Verify that gun flush box is operating properly.
For systems with auto dump on, gun is not in the box when auto dump is initiated.	Place gun in gun flush box. Verify that gun flush box is operating properly.
For systems with a gun flush box, Fuse F2 is blown.	Verify condition of fuse and replace if necessary. See Repair-Parts manual.
E-21: MATERIAL_FILL_ALARM	
Cause	**Solution**
For systems with minimum mixed material fill volume entered, the system detects that fill volume is not achieved during mixed material fill time.	Check for restrictions or leaks in the fluid supply system. Check if the fill volume is properly configured: • Adjust fill volume. • Adjust fill time.
For systems without color change and with minimum mixed material fill volume entered, Fuse F1 is blown.	Verify condition of fuse and replace if necessary. See Repair-Parts manual.

Table 10. Alarm Troubleshooting

E-22: TANK_A_LOW_ALARM, E-23: TANK_B_LOW_ALARM, E-24: TANK_S_LOW_ALARM, or E-29: TANK_C_LOW_ALARM	
Cause	**Solution**
The tank volume reaches the low-level threshold.	The EasyKey screen will display the alarm and prompt the user to do one of the following: • Refill tank volume to clear the alarm. • Resume mixing by selecting “Spray 25% of remaining volume.” If this selection is chosen, a second alarm will occur after 25% of the remaining volume is mixed. Refill tank volume to clear the alarm.
E-25: AUTO_DUMP_COMPLETE_ALARM	
Cause	**Solution**
A potlife alarm is active for more than 2 minutes, the gun flush box is enabled and gun is in the gun flush box, and an auto dump flush sequence is complete.	Be sure to spray all mixed material before potlife expires.
E-26: COLOR/CATALYST_PURGE_ALARM	
Cause	**Solution**
System detects no meter pulses, or a disruption in meter pulses lasting longer than 1 second throughout the Color/Catalyst purge time duration.	Check that meter cable is connected. Clean or repair meter.
E-27: COLOR/CATALYST_FILL_ALARM	
Cause	**Solution**
System detects no meter pulses, or system must detect at least 10cc of material from each side throughout the Color/Catalyst fill time duration.	Check that meter cable is connected. Clean or repair meter.
Gun, dump valve, or correct color/catalyst valve not open.	Open the valve.
Exhausted fluid supply.	Check fluid level and refill if necessary.
Fuse F1, F2, or both are blown.	Verify condition of fuses and replace if necessary. See Repair-Parts manual.
E-29: TANK_C_LOW_ALARM (see above)	
E-30: OVERDOSE_C_ALARM (see page 81)	
E-31: DOSE_TIME_C_ALARM (see page 82)	

Schematic Diagrams

System Pneumatic Schematic

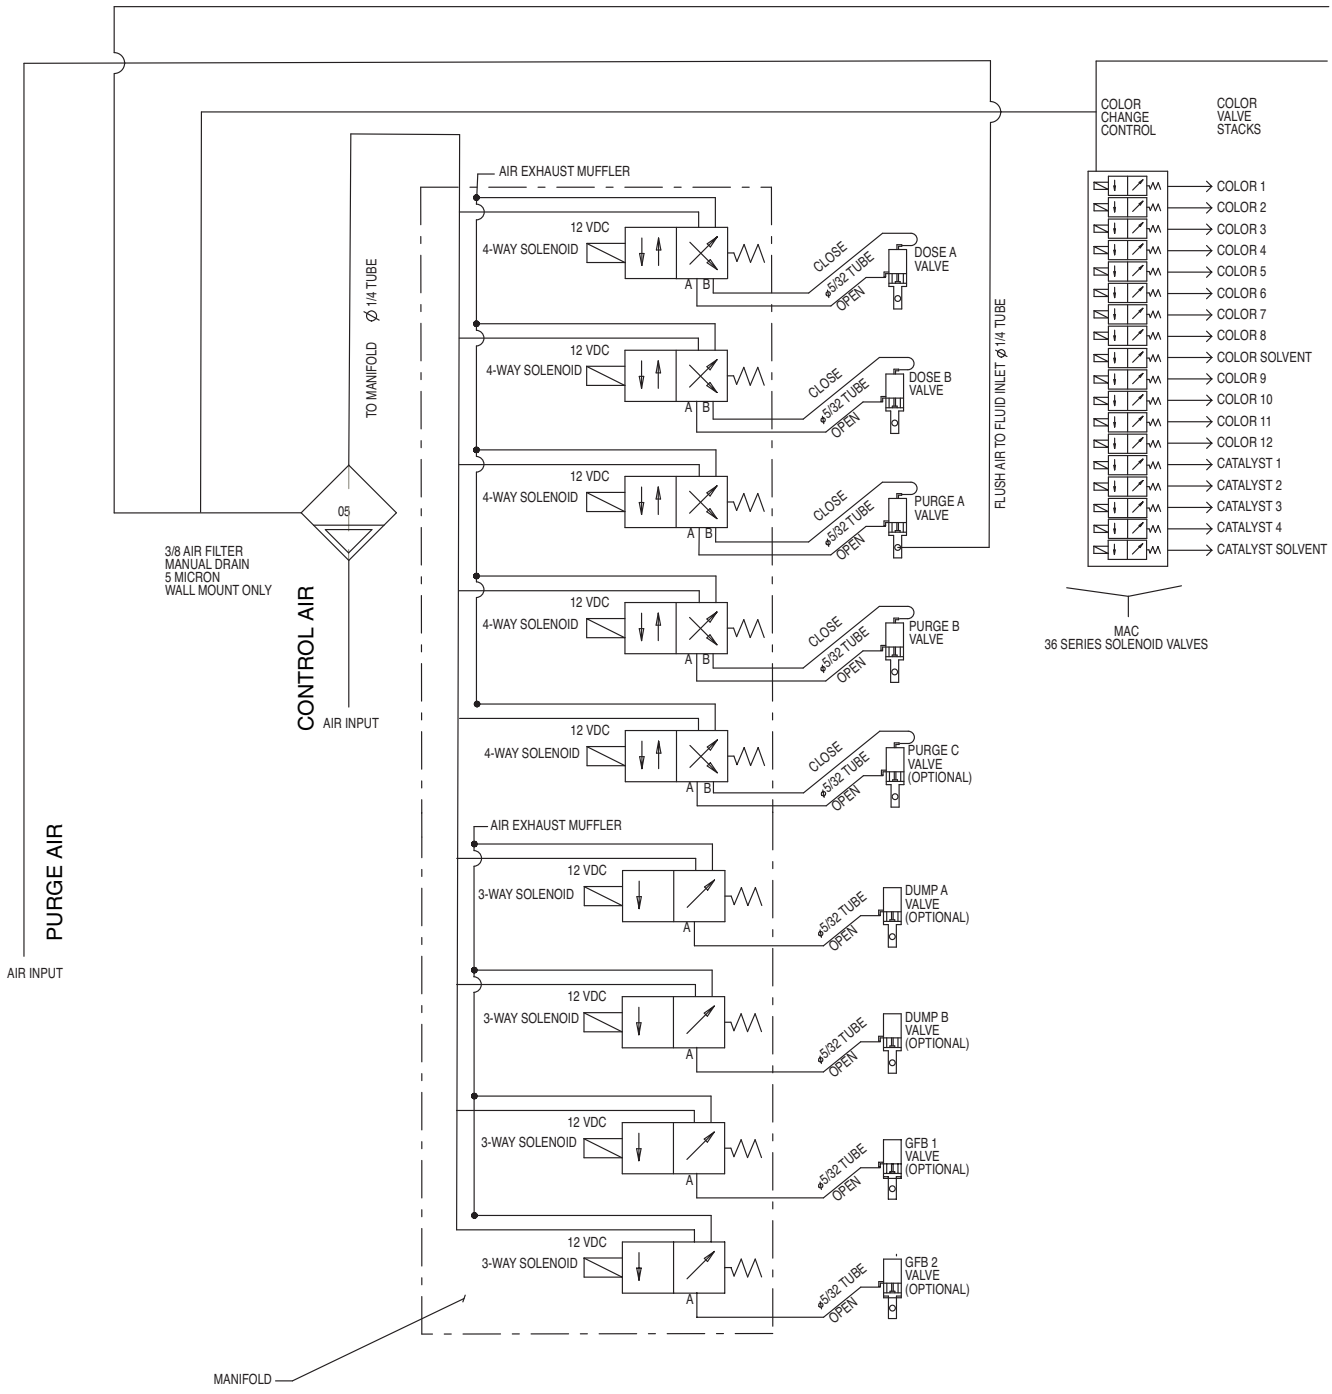

System Pneumatic Schematic

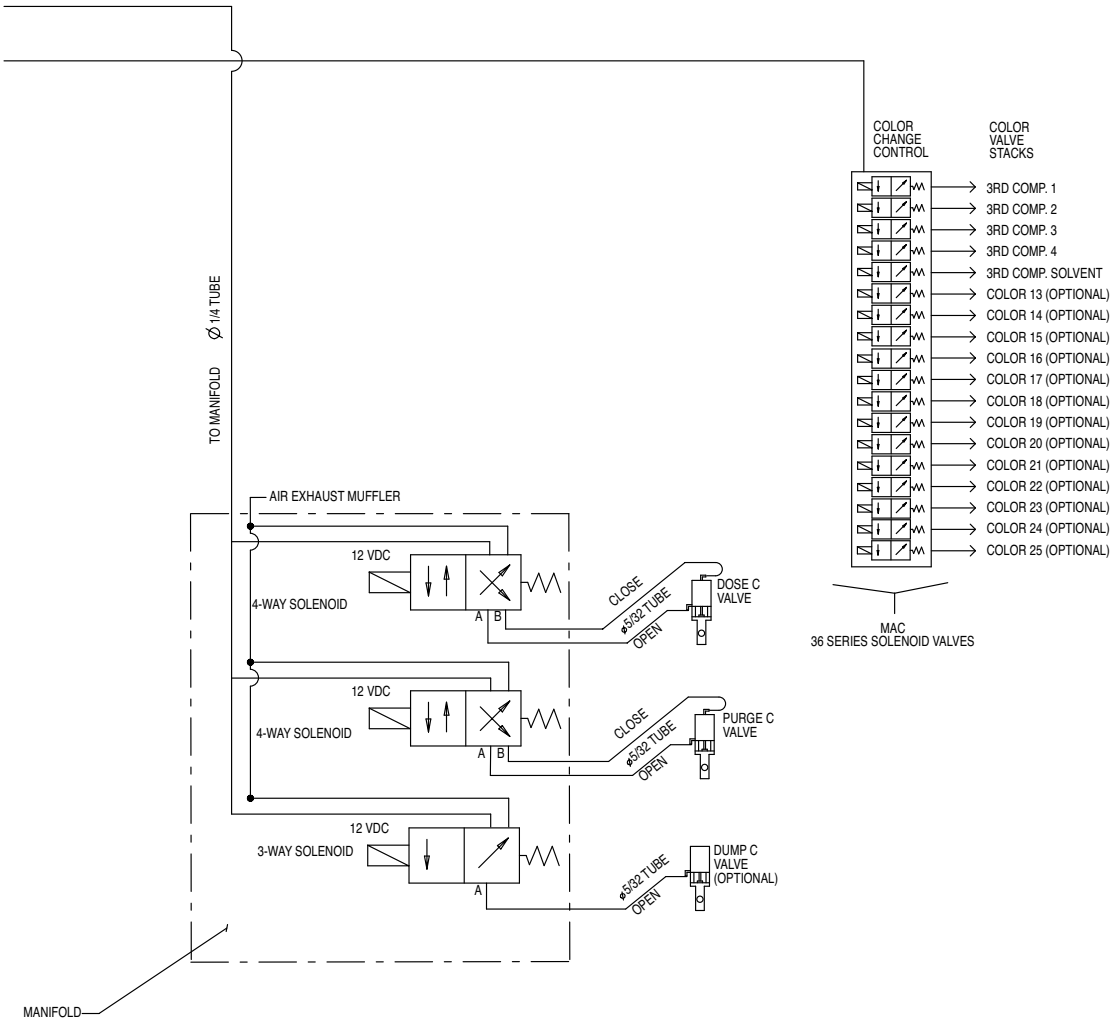

System Electrical Schematic

NOTE: The electrical schematic illustrates all possible wiring expansions in a ProMix 3KS system. Some components shown are not included with all systems.

Non-Hazardous Area

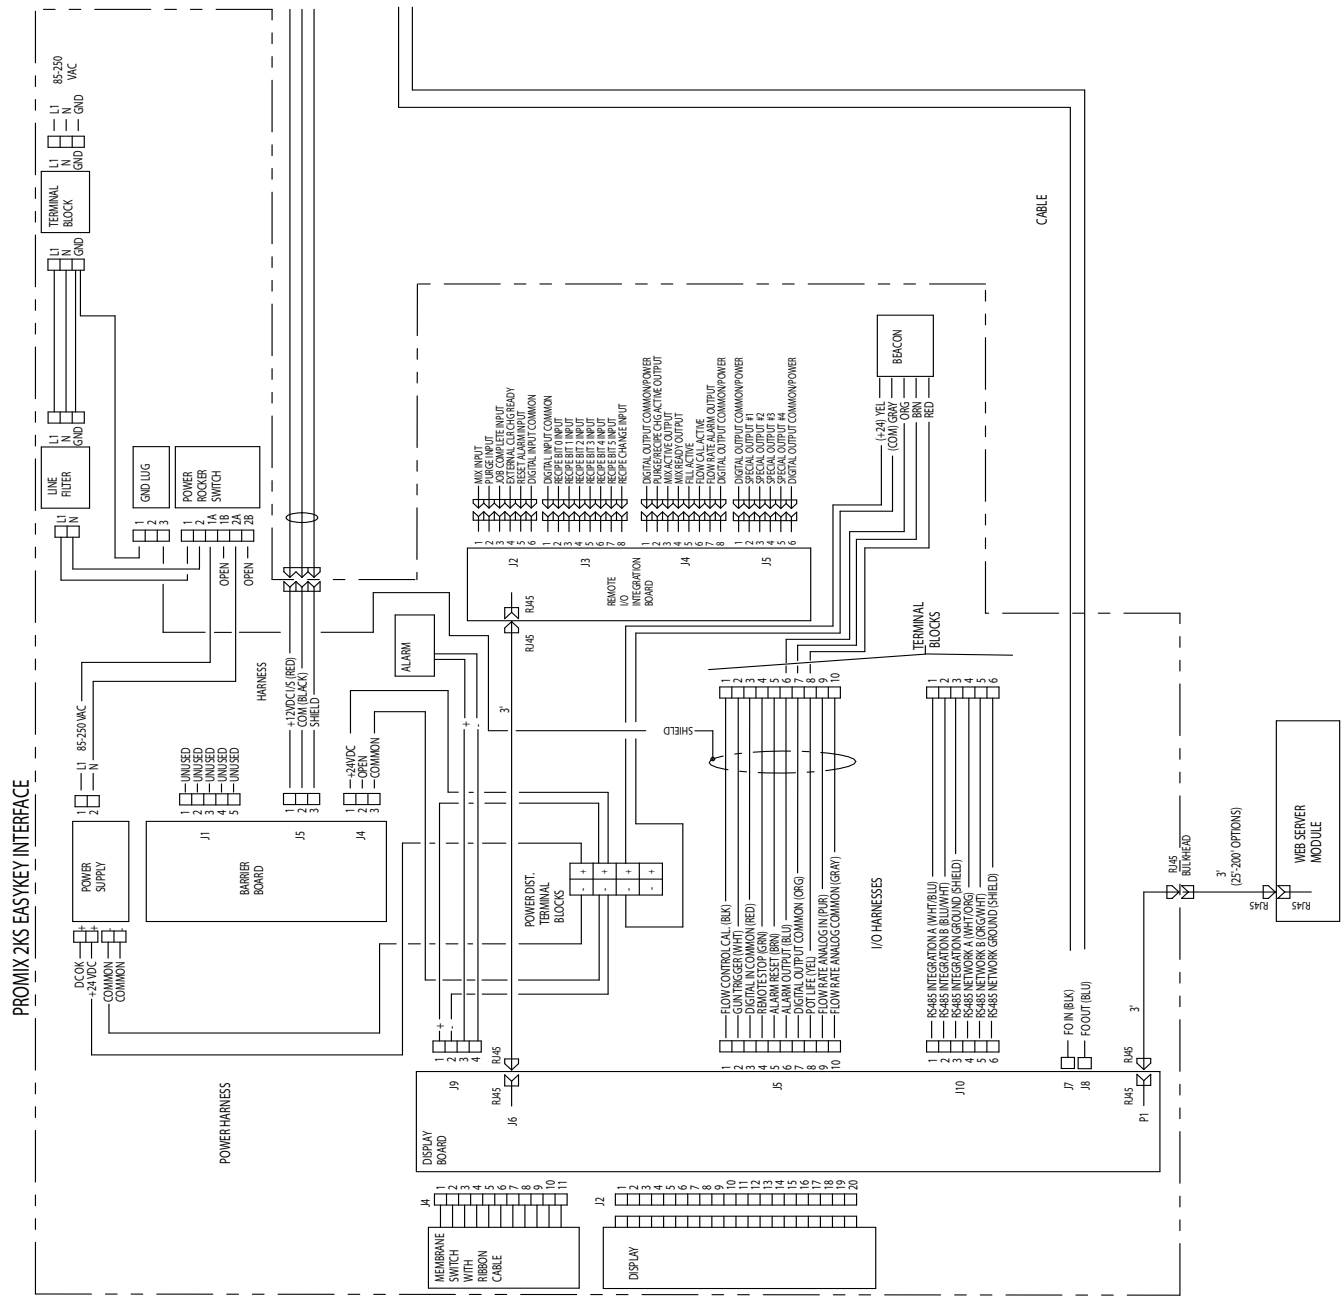

System Electrical Schematic

NOTE: The electrical schematic illustrates all possible wiring expansions in a ProMix 3KS system. Some components shown are not included with all systems.

Non-Hazardous Area

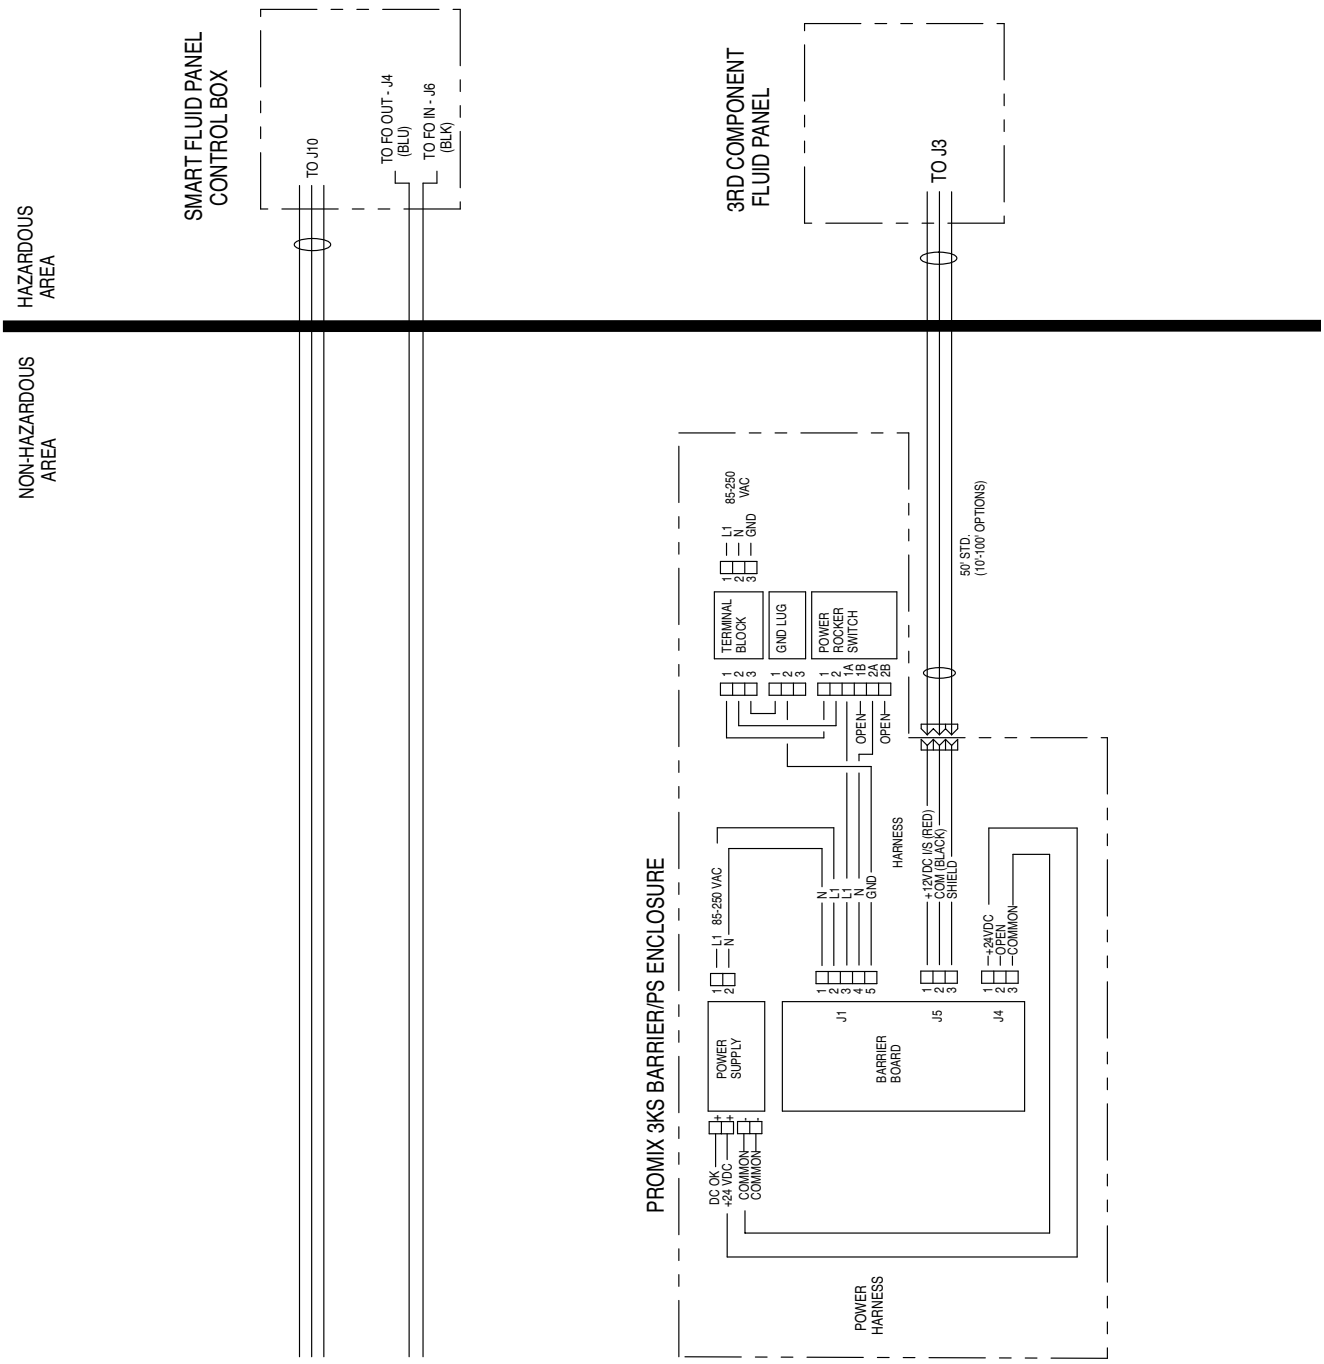

System Electrical Schematic

NOTE: The electrical schematic illustrates all possible wiring expansions in a ProMix 3KS system. Some components shown are not included with all systems.

Hazardous Area

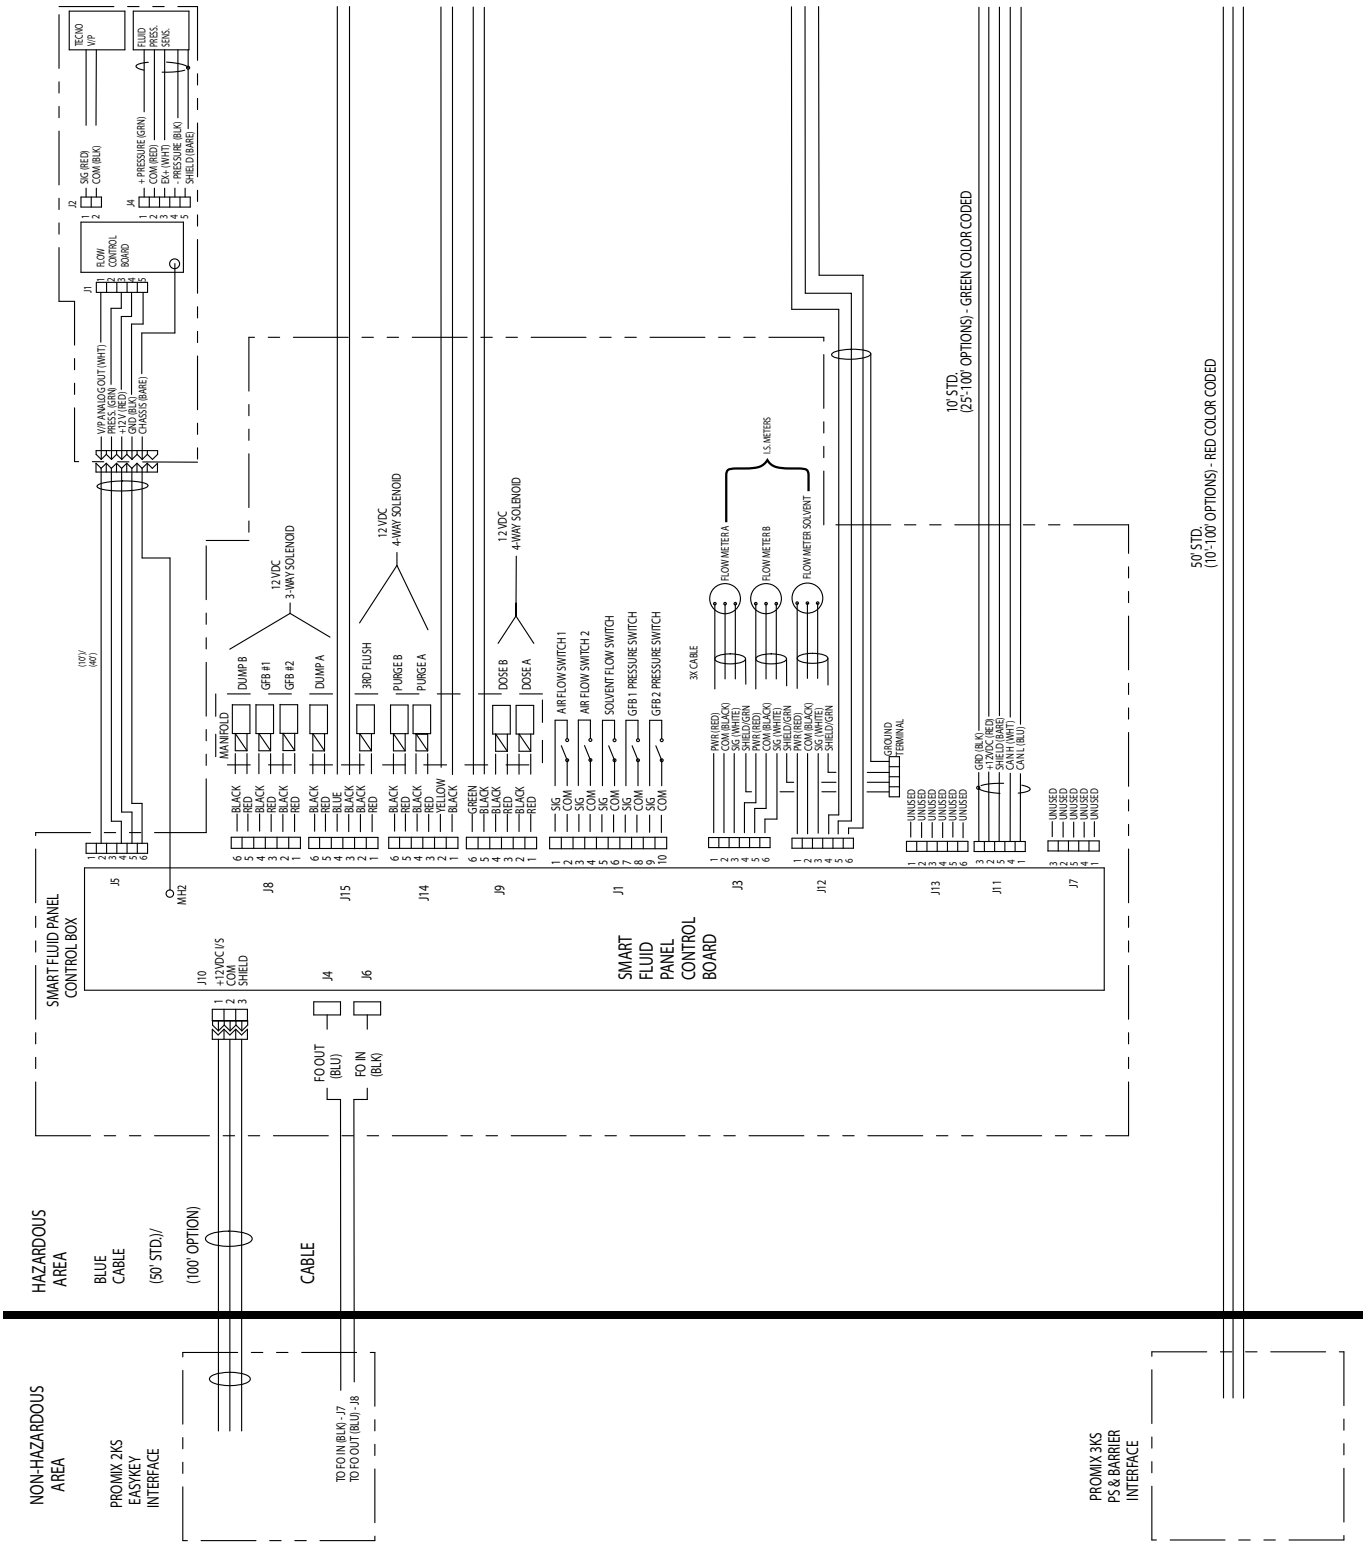

System Electrical Schematic

NOTE: The electrical schematic illustrates all possible wiring expansions in a ProMix 3KS system. Some components shown are not included with all systems.

Hazardous Area

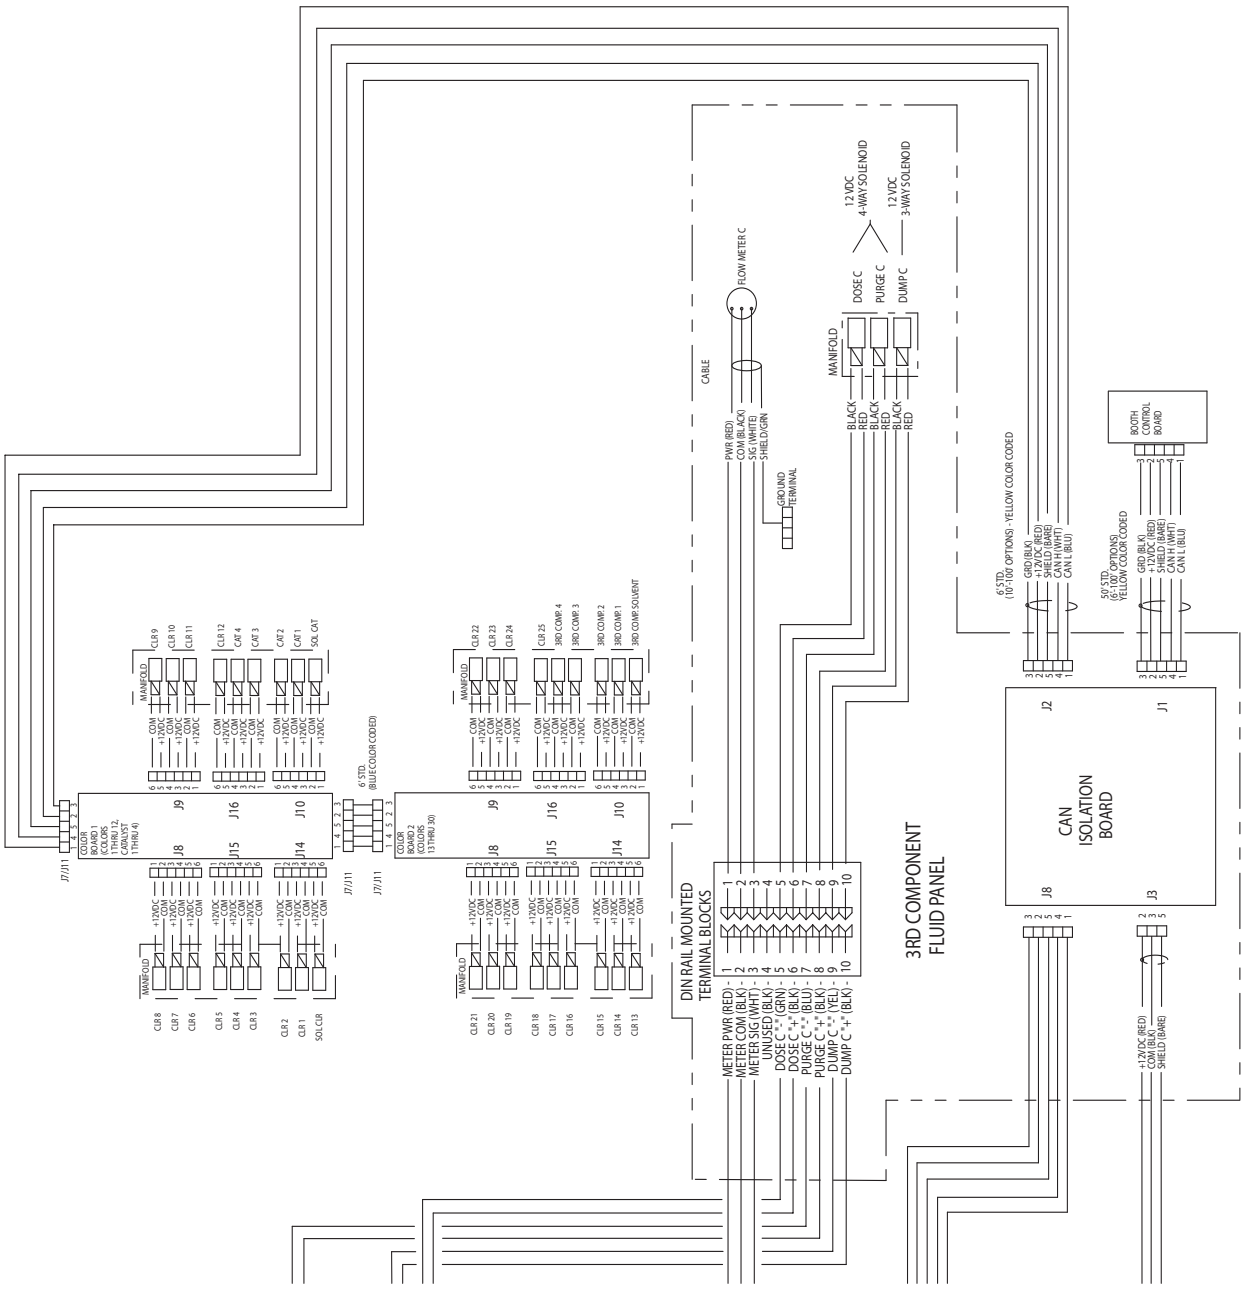

Power Supply Module Electrical Schematic

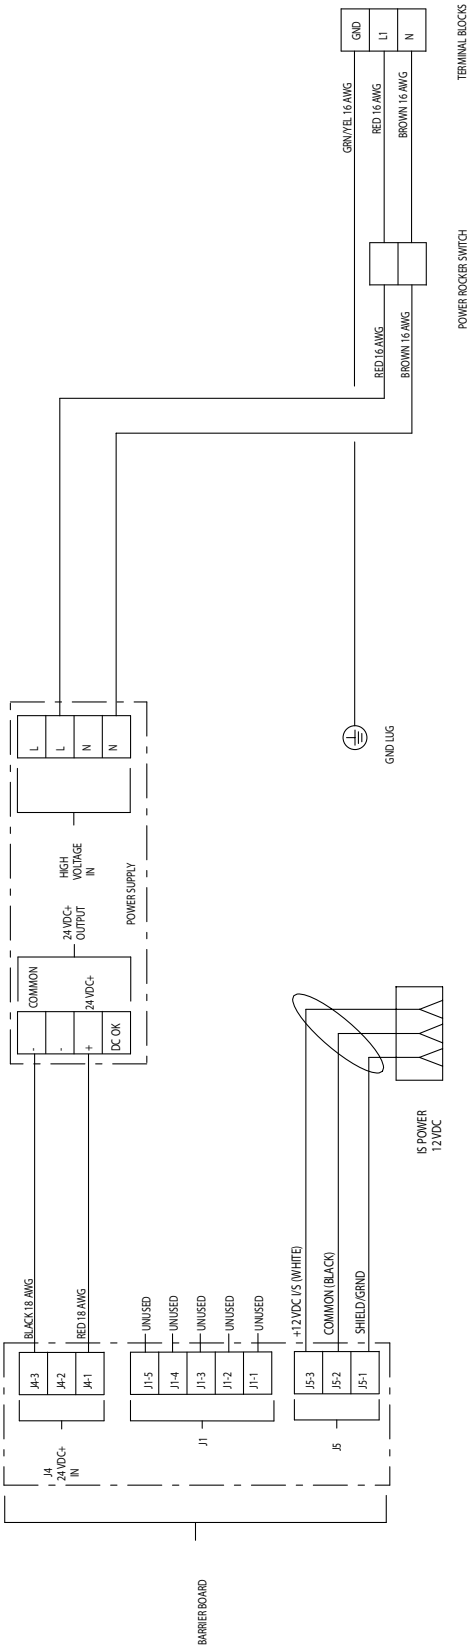

Technical Data

Maximum fluid working pressure	*Base system:* 3000 psi (21 MPa, 210 bar) *Low pressure color change:* 300 psi (2.1 MPa, 21 bar) *High pressure color change:* 3000 psi (21 MPa, 210 bar) *Coriolis meter:* 2300 psi (16.1 MPa, 161 bar)
Maximum working air pressure	100 psi (0.7 MPa, 7 bar)
Air supply	75 - 100 psi (0.5 - 0.7 MPa, 5.2 - 7 bar)
Air filter inlet size	3/8 npt(f)
Air filtration for air logic and purge air (Graco-supplied)	5 micron (minimum) filtration required; clean and dry air
Air filtration for atomizing air (user-supplied)	30 micron (minimum) filtration required; clean and dry air
Mixing ratio range	Stage 1 (A:B): 0.1:1- 50:1* Stage 2 (A+B:C): 0.1:1- 50:1*
On-ratio accuracy	up to ± 1%, user selectable
Fluids handled	one or two component: • solvent and waterborne paints • polyurethanes • epoxies • acid catalyzed varnishes • moisture sensitive isocyanates
Viscosity range of fluid	20- 5000 cps*
Fluid filtration (user-supplied)	100 mesh minimum
Fluid flow rate range*	
G3000, G250 Meter	75 - 3800 cc/min. (0.02-1.00 gal./min.)
G3000HR, G250HR Meter	38 - 1900 cc/min. (0.01-0.50 gal./min.)
Coriolis Meter	20 - 3800 cc/min. (0.005-1.00 gal./min.)
S3000 Solvent Meter (accessory)	38 - 1900 cc/min. (0.01-0.50 gal./min.)
Fluid inlet sizes	
Flow Meter	1/4 npt(f)
Dose Valve/Color Valve Adapters	1/4 npt(f)
3KS Fluid Station	1/4 npt(m)
Fluid outlet size (static mixer)	1/4 npt(f)
External Power Supply Requirements	85 - 250 Vac, 50/60 Hz, 2 amps maximum draw 15 amp maximum circuit breaker required 8 to 14 AWG power supply wire gauge
Operating temperature range	41- 122° F (5-50° C)
Environmental Conditions Rating	indoor use, pollution degree (2), installation category II
Noise Level	
Sound pressure level	below 70 dBA
Sound power level	below 85 dBA
Wetted parts	303, 304 SST, Tungsten carbide (with nickel binder), perfluoroelastomer; PTFE

* Dependent on flow rate, dose size, and meter resolution.

See individual component manuals for additional technical data.

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.
Phone: 612-623-6921 **or Toll Free:** 1-800-328-0211 **Fax:** 612-378-3505

All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 313882

Graco Headquarters: Minneapolis
International Offices: Belgium, China, Japan, Korea

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441
Copyright 2010, Graco Inc. is registered to ISO 9001
www.graco.com
Revised June 2012